

Betriebsanleitung
Operating Instructions
Instructions de service
Istruzioni d'uso
Handleiding
Instrucciones para el manejo
Manual de instruções
Naudojimosi instrukcija
Kasutusjuhend
Lietošanas instrukcija
Driftsinstruks
Driftsinstruktioner
Käyttöohje
Driftsvejledning
Instrukcja obsługi







Kezelési útmutató
Návod k obsluze
Navodilo za uporabo
Návod na obsluhu
Upute za rad
Manual de operatii
Treoracha Oibriúcháin
Οδηγίες χρήσης
El Kitabi
Инструкции за експлоатация
Инструкция по эксплуатации
取扱説明書
사용설명서
使用说明书











U 5.165







2006/42/EG









DIN EN ISO 9001
001929 QM
DIN EN ISO 14001:2015

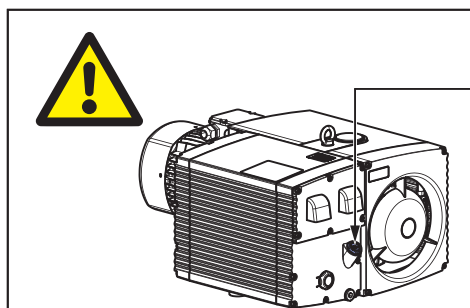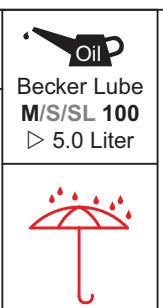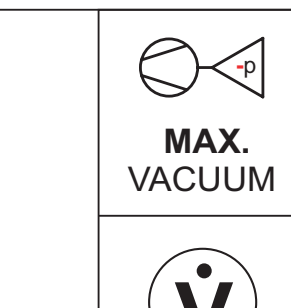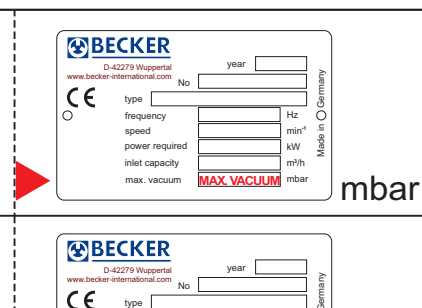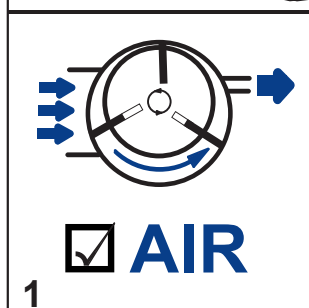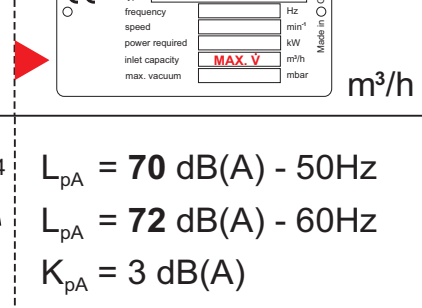 Becker Lube M/S/SL 100 ▷ 5.0 Liter		 MAX. VACUUM	 mbar
 1 AIR			 MAX. V
 m³/h			
			2
L_{pA} = 70 dB(A) - 50Hz L_{pA} = 72 dB(A) - 60Hz K_{pA} = 3 dB(A)			

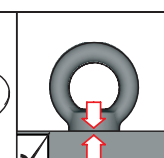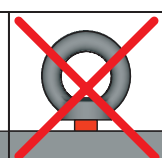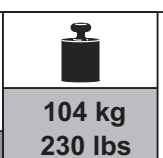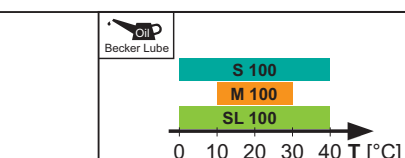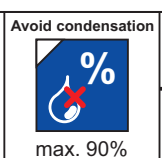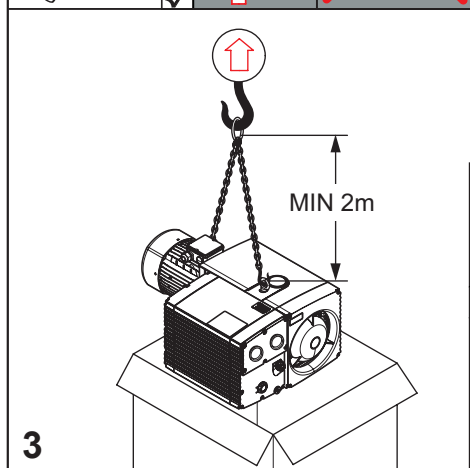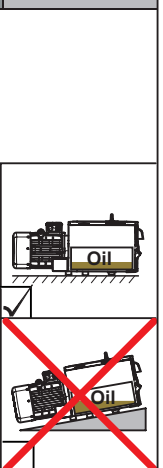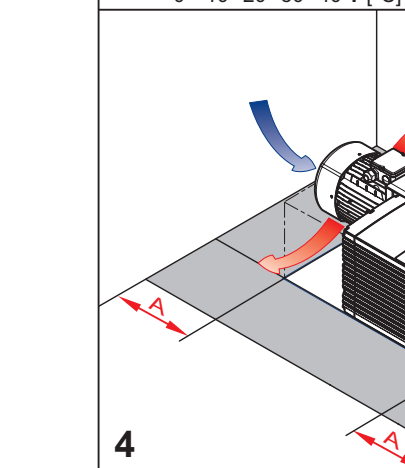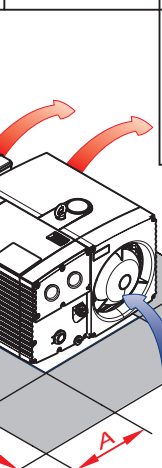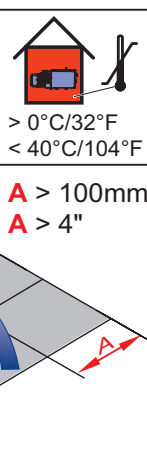			 104 kg 230 lbs		 max. 90%	 Please consult BECKER
 MIN 2m			 > 0°C/32°F < 40°C/104°F	 A > 100mm A > 4"		

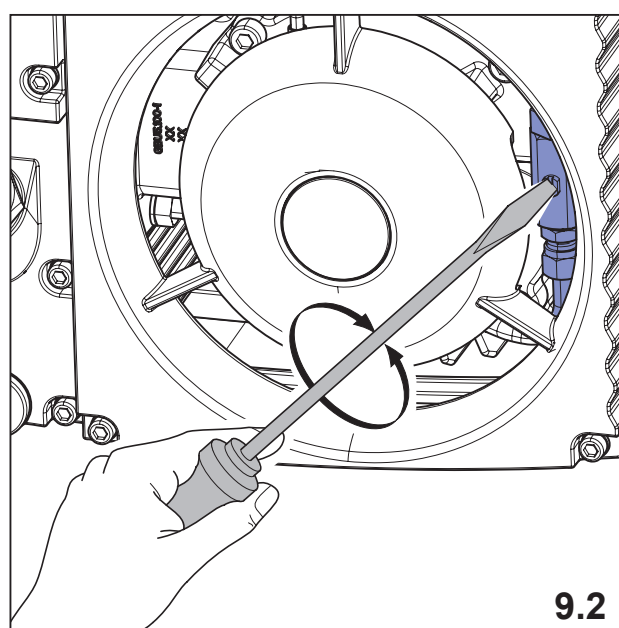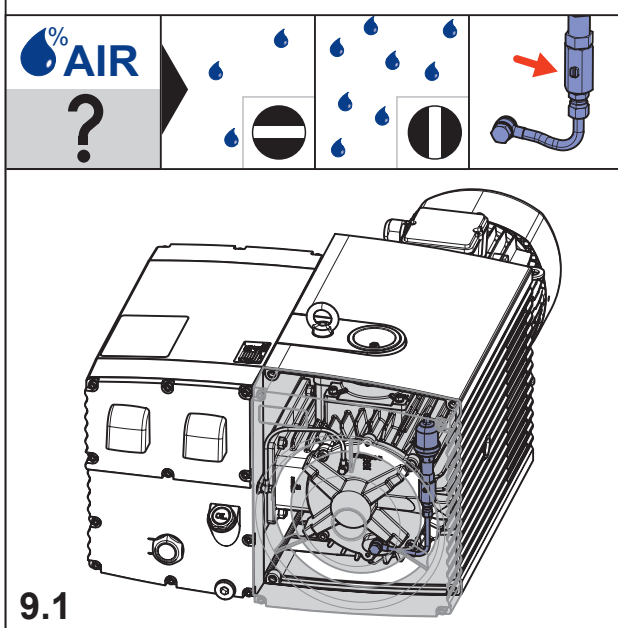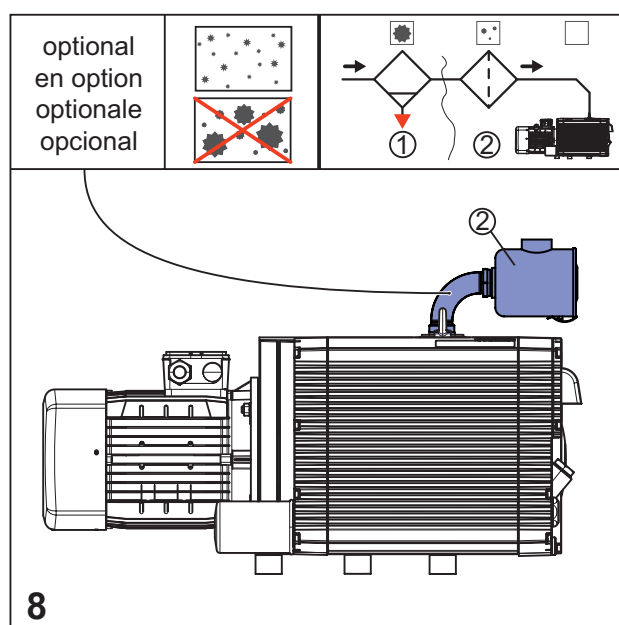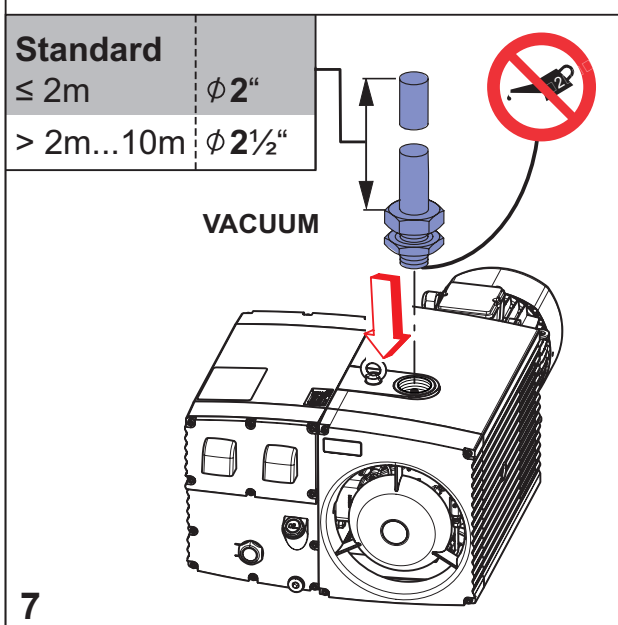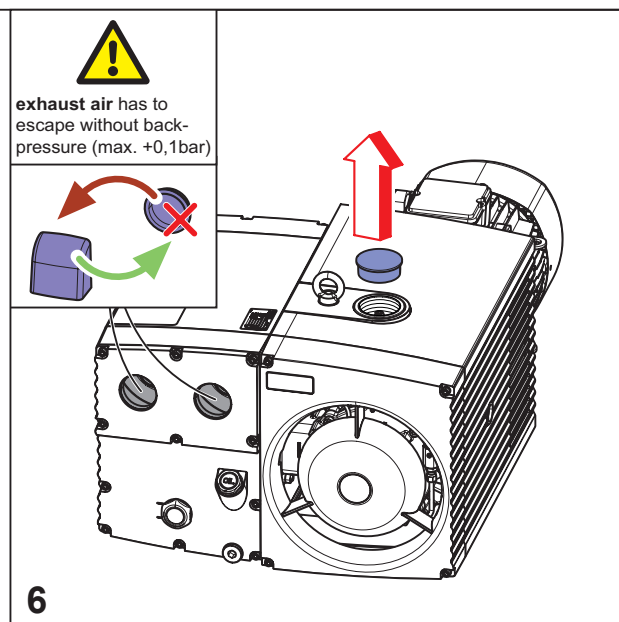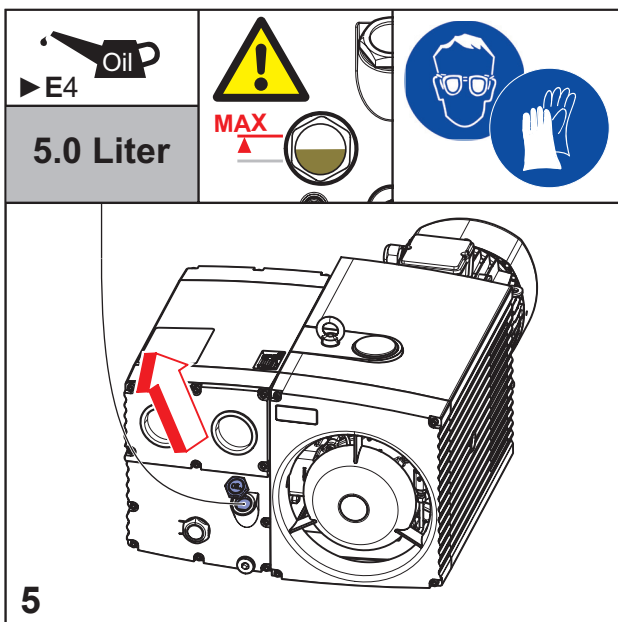

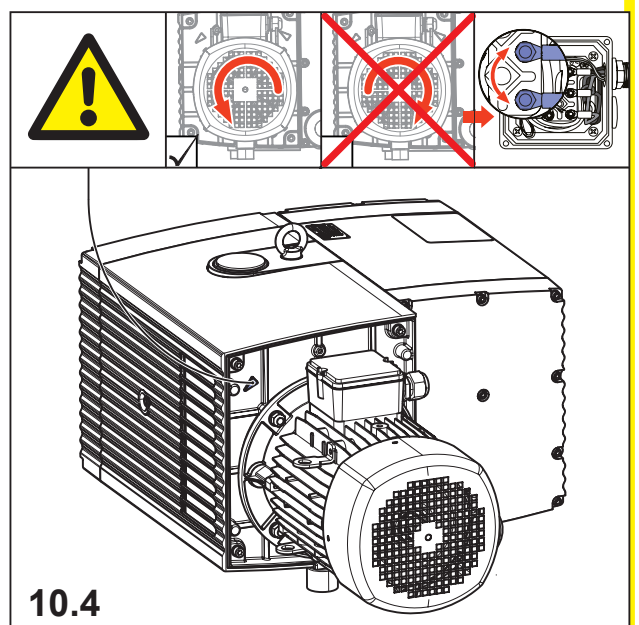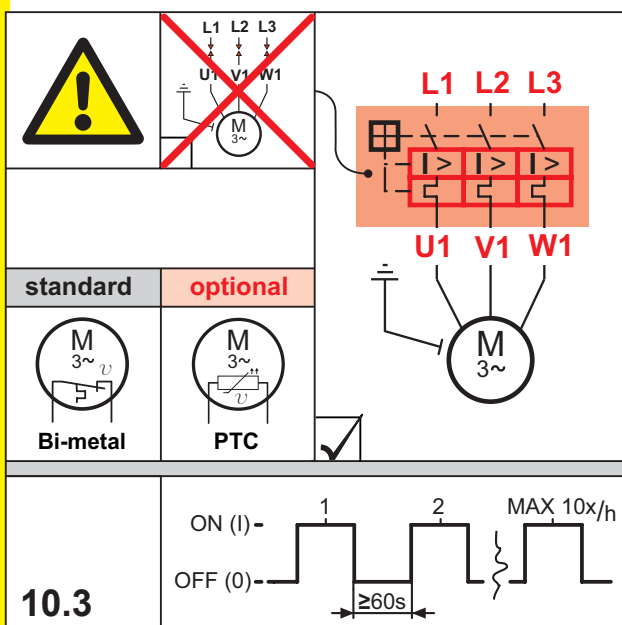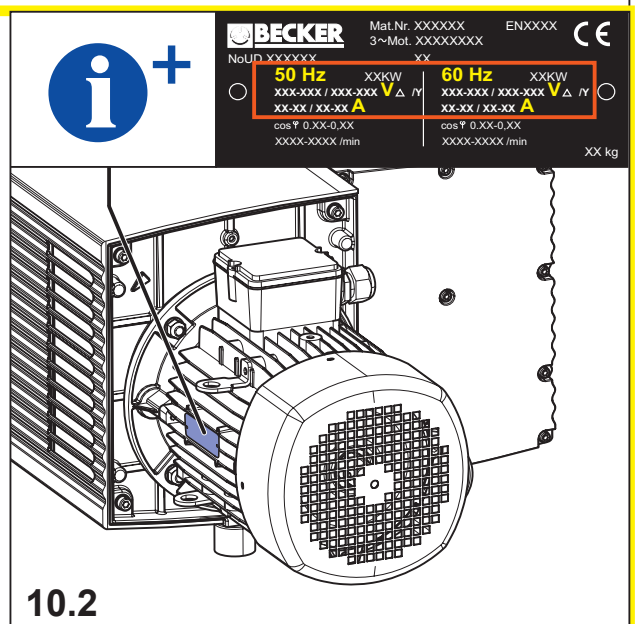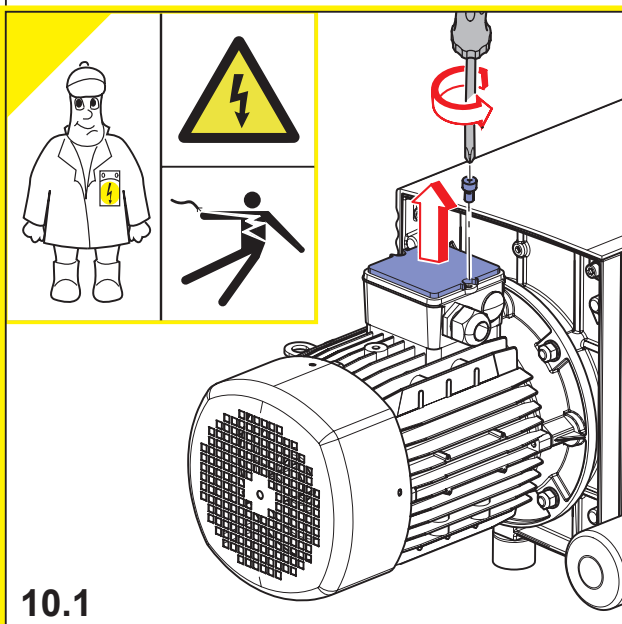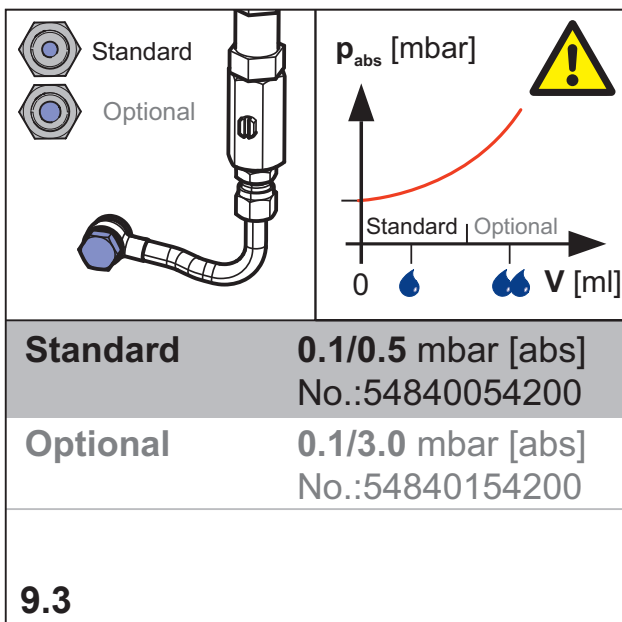

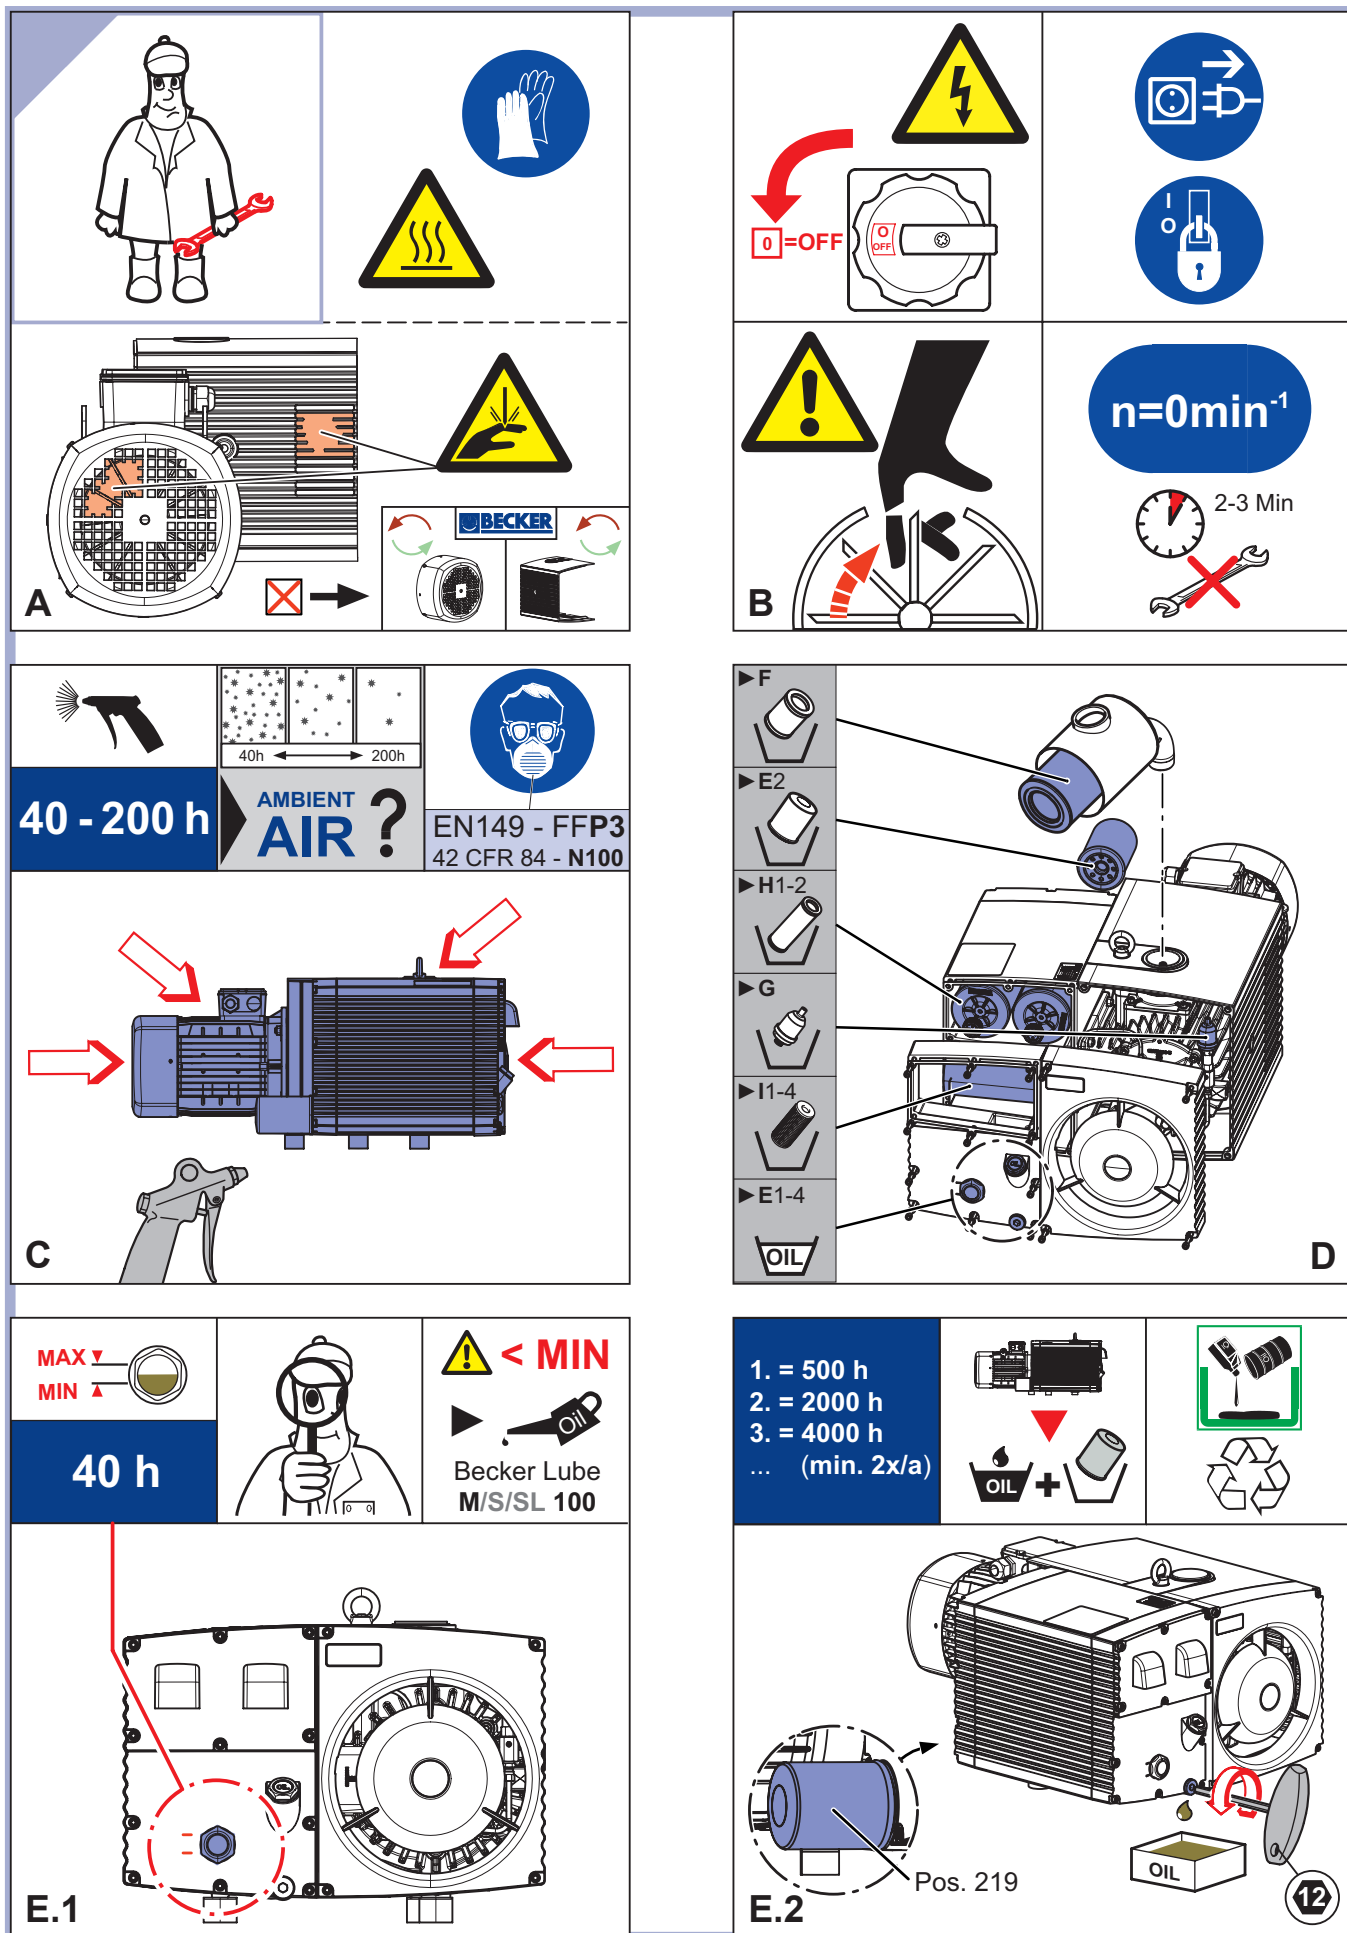

E4

5.0 Liter

E.3

Becker Lube M 100
 (Mineral oil)
 - 1 Liter 96000900000
 - 5 Liter 96000900200

Becker Lube S 100
 (Synthetic oil)
 - 1 Liter 96001600100
 - 5 Liter 96001600200

Becker Lube SL 100
 (Food)
 - 1 Liter 96002300100
 - 5 Liter 96002300200

E.4

MIN 1x/a

40 - 200 h

INTAKE AIR ?

F

MIN 1x/a

Pos. 455

G

MAX 2000 h

INTAKE AIR ?

VACUUM

11x

11Nm

H.1





Pos. 269

1.

2.

Pos. 235

H.2

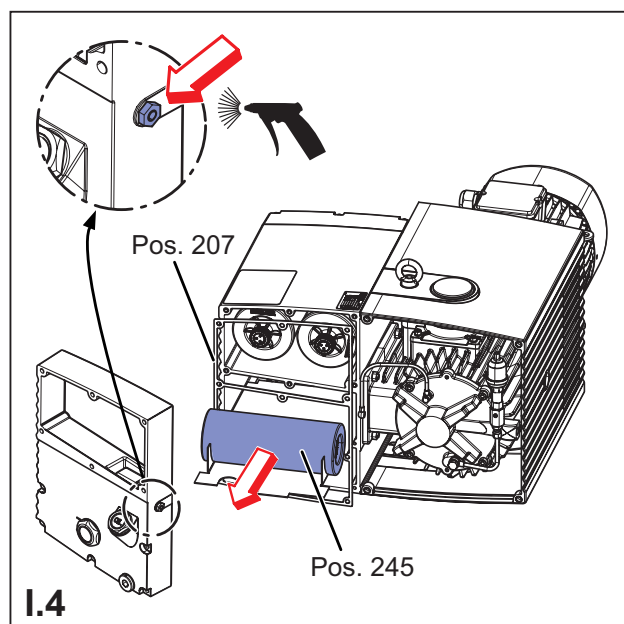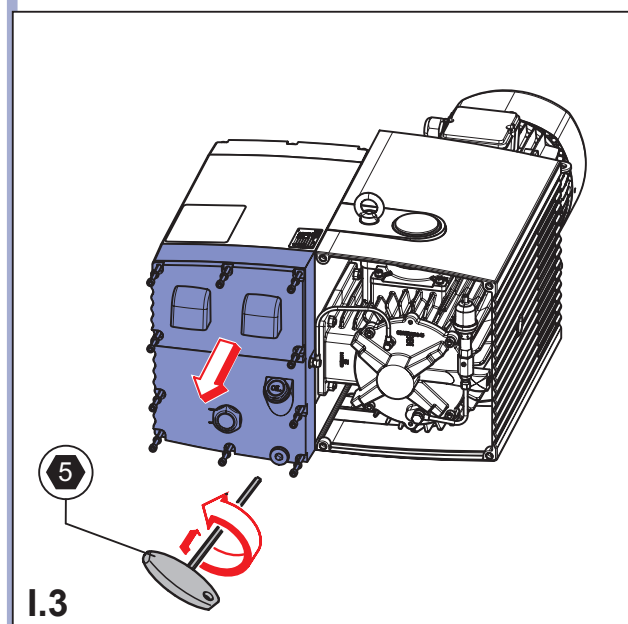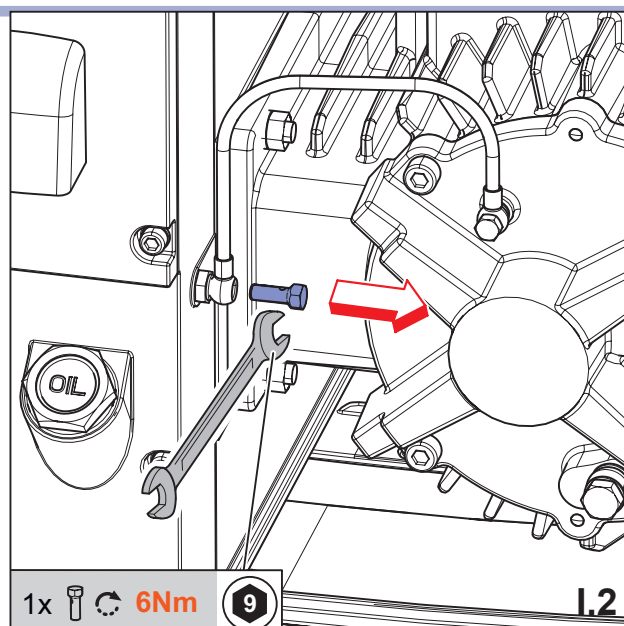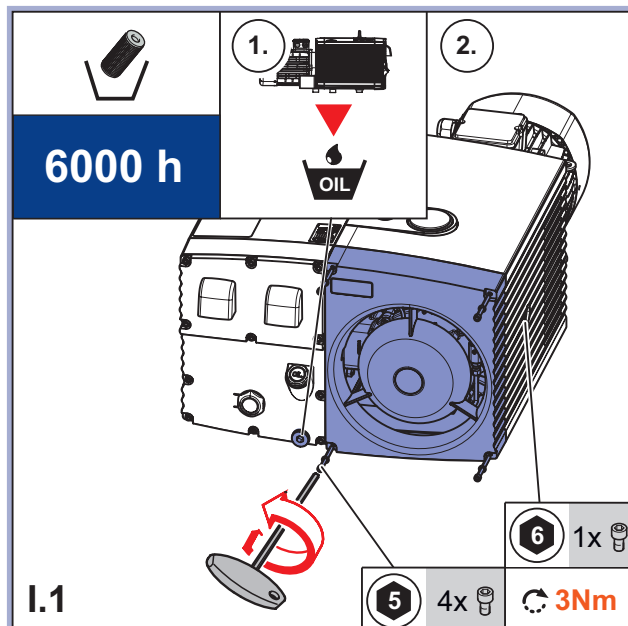

Gebr. Becker GmbH
Hölker Feld 29-31
D-42279 Wuppertal
info@becker-international.com

