

Betriebsanleitung
Operating Instructions
Instructions de service
Istruzioni d'uso
Handleiding
Instrucciones para el manejo
Manual de instruções
Naudojimosi instrukcija
Kasutusjuhend
Lietošanas instrukcija
Driftsinstruks
Driftsinstruktioner
Käyttöohje
Driftsvejledning
Instrukcja obsługi


 


Kezelési útmutató
Návod k obsluze
Navodilo za uporabo
Návod na obsluhu
Upute za rad
Manual de operatii
Teoracha Oibriúcháin
Οδηγίες χρήσης
El Kitabi
Инструкции за експлоатация
Инструкция по эксплуатации
取扱説明書
사용설명서
使用说明书

 
 
 
 

VT 4.8







2006/42/EG










DIN EN ISO 9001
001929 QM
DIN EN ISO 14001:2015

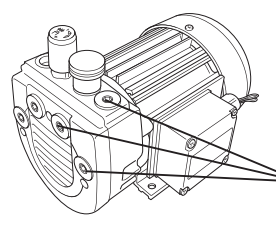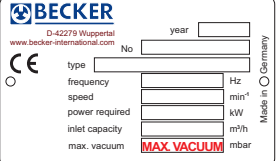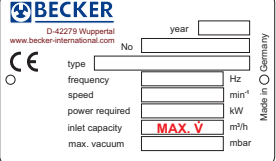 	 		 MAX. VACUUM	 mbar
 AIR	 	 		 MAX.  m³/h L_{pA} = 58 dB(A) - 50Hz L_{pA} = 61 dB(A) - 60Hz K_{pA} = 3 dB(A) DIN EN ISO 3744

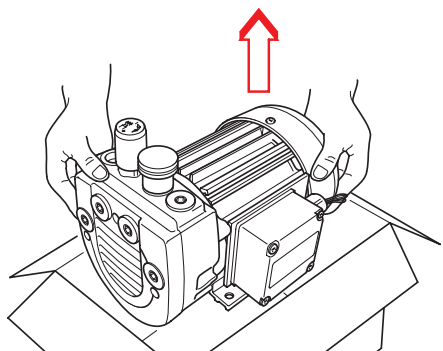					A > 100mm A > 4"	 > 5°C/41°F < 45°C/113°F	 max. 90%	 max. 800m 
								
1  11,5 kg 25,3 lbs								
				</				

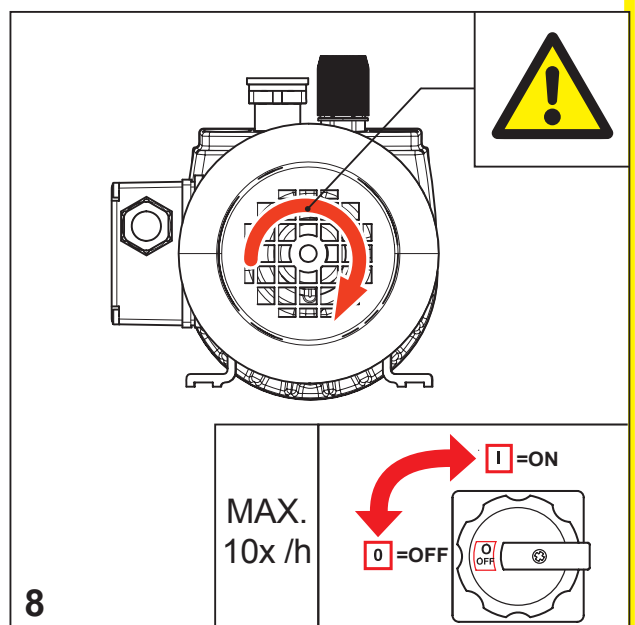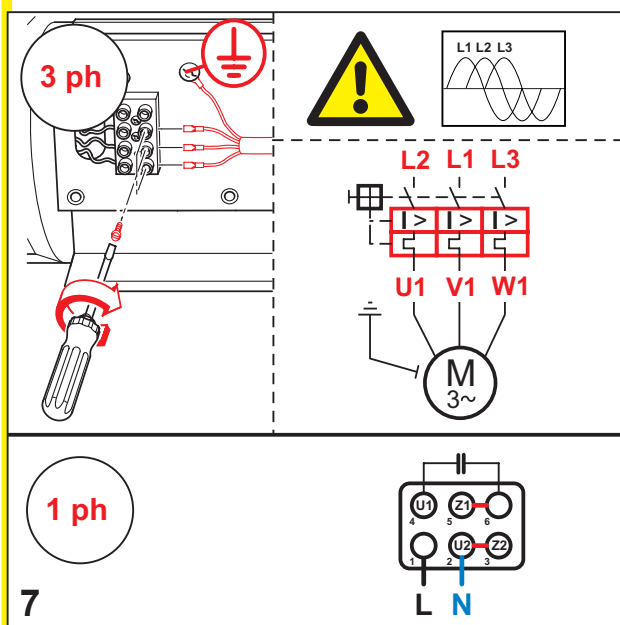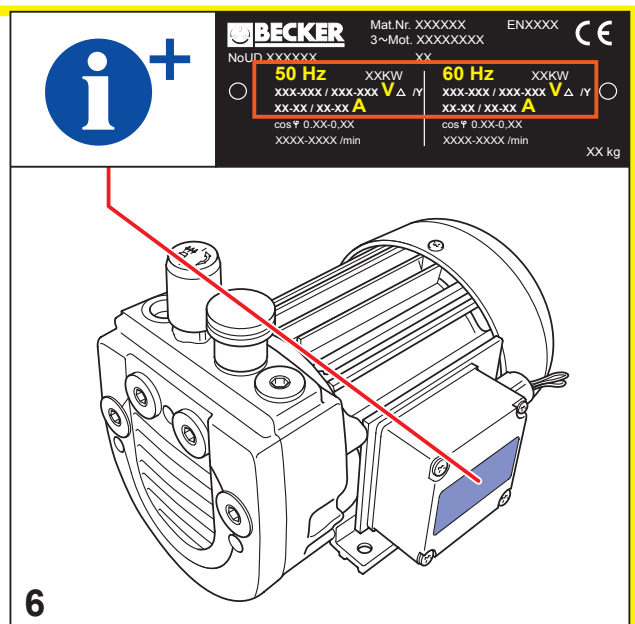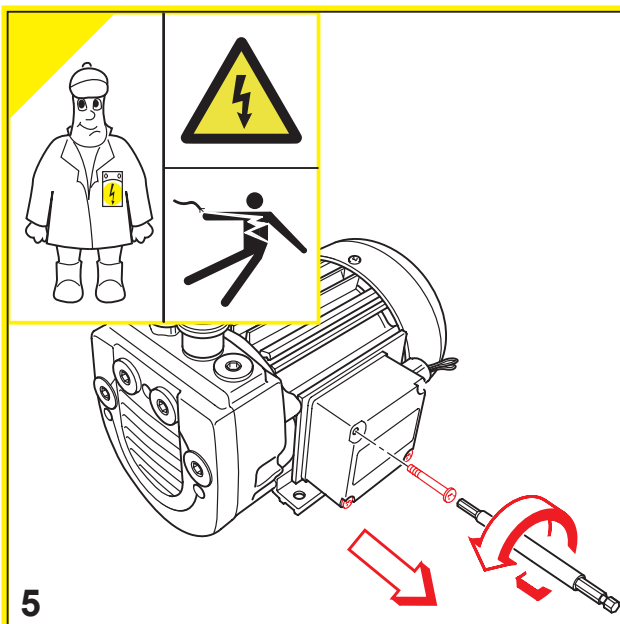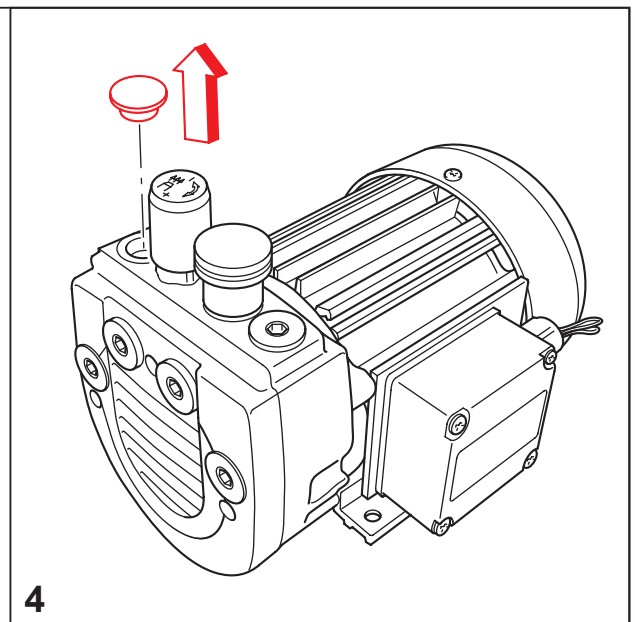
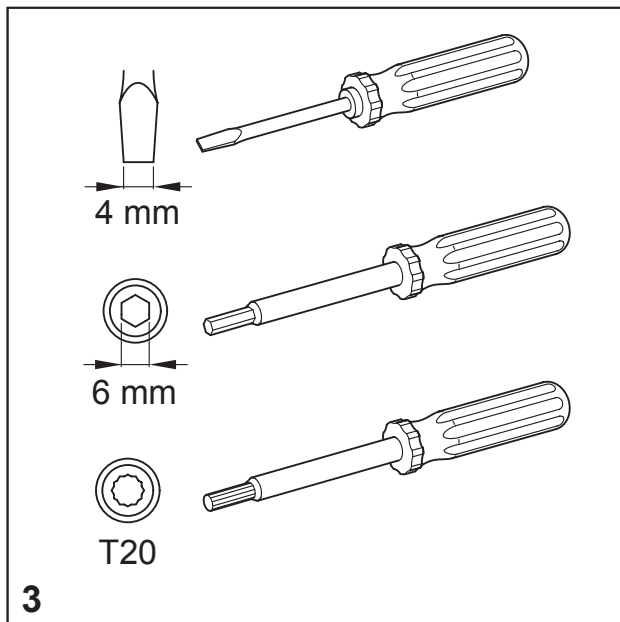


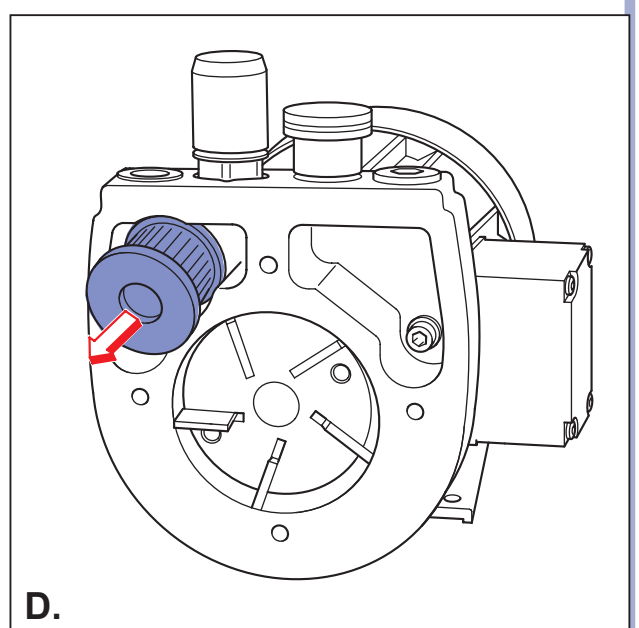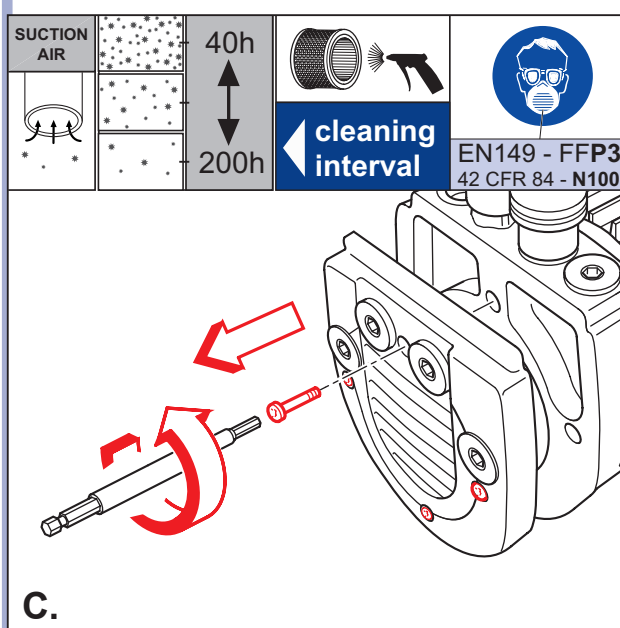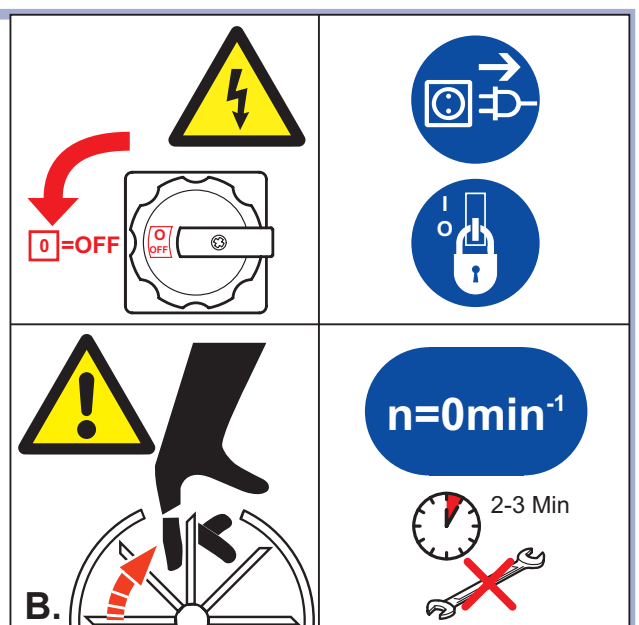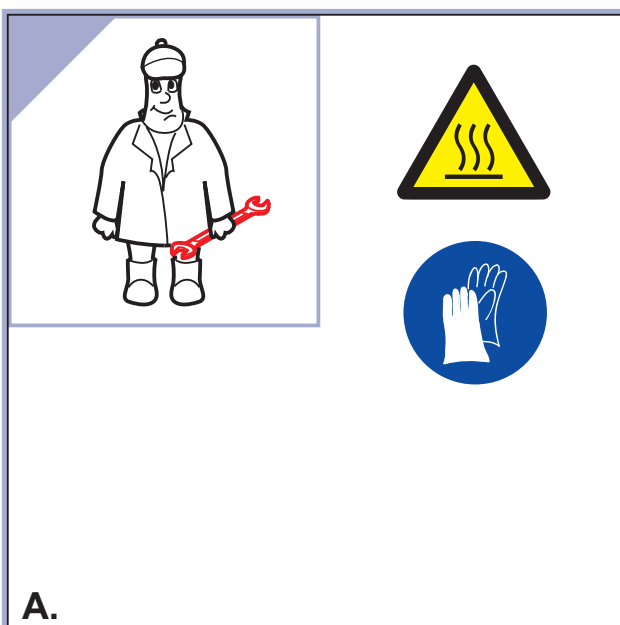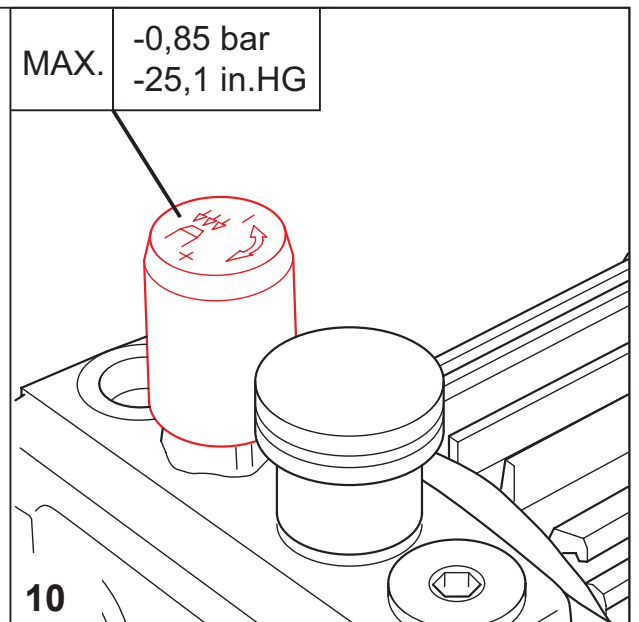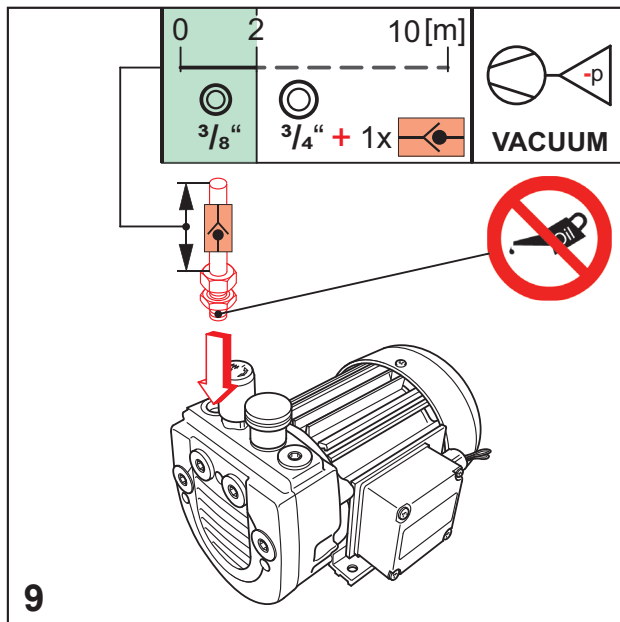

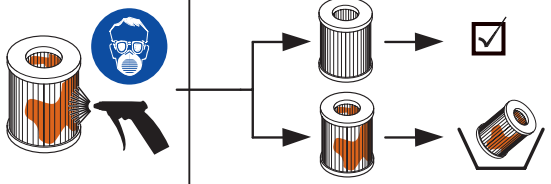

D: 30 mm
H: 32 mm
No.: 90958100000

E.

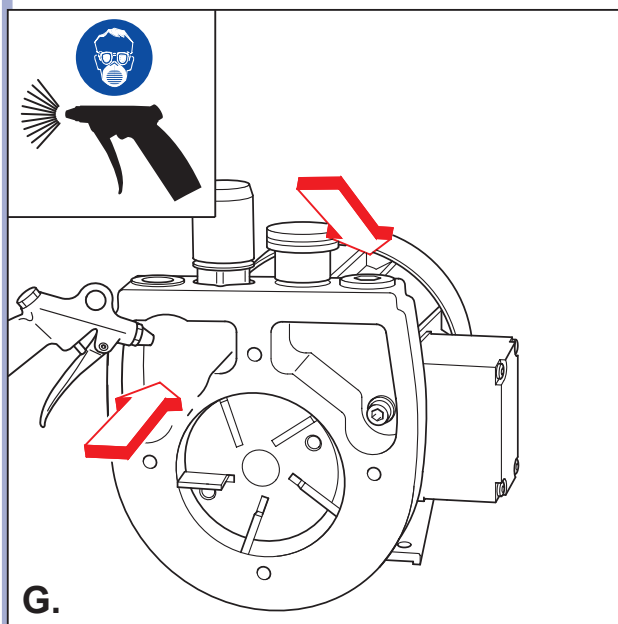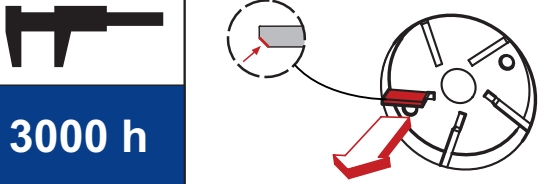3000 h

$A_{MAX} = 18,5\text{mm}$
 $A_{MIN} = 12,5\text{mm}$

$A < 12,5\text{mm}$ → !

No. 90138800005 (SET)

F.



www.becker-international.com



Gebr. Becker GmbH
Hölker Feld 29-31
D-42279 Wuppertal
info@becker-international.com



SERVICE
www.becker-international.com
Sales and service network