



OUR PRODUCTS DEVELOP TOMORROW'S TECHNOLOGIES™

# HALO VIEW WINDOW SYSTEM (HVW)

## USER'S MANUAL



ISO-63, 80, 100, 160, 200 & 250 Viewing Windows

## WARRANTY

Ideal Vacuum warrants, to the original purchaser, this product to be free from defects in workmanship and materials, for a period of one (1) year from the original delivery date. The liability of Ideal Vacuum, under this warranty, is limited to servicing, adjusting, repairing or replacing any unit or component part which, at Ideal Vacuum's sole discretion, is determined to have failed during normal, intended use. This warranty does not cover improper installation, process related damage, product used in any way other than defined in this manual, or any misuse, abuse, negligence, accident, or customer modification to the product. Prior to returning any product, we require that you contact us by phone or email to determine if the issue can be resolved quickly. A technical support representative will try to resolve the problem. If we cannot resolve the issue quickly, we will issue an RMA number and provide product return instructions.

**THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR USE OR FITNESS FOR A PARTICULAR PURPOSE. IDEAL VACUUM SHALL NOT BE LIABLE UNDER ANY CIRCUMSTANCES FOR INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING OUT OF THE USE OF THE PRODUCT. THE TOTAL LIABILITY OF IDEAL VACUUM SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT UNDER ANY CIRCUMSTANCES.**

## CUSTOMER SERVICE AND SUPPORT

If you have any questions concerning the installation or operation of this equipment, or if you need warranty or repair service, please contact us. Customer Service and Technical Support is available weekdays, from 8am-5pm, Mountain Time.

Phone: (505) 872-0037

Fax: (505) 872-9001

Email: [info@idealvac.com](mailto:info@idealvac.com)

[techsupport@idealvac.com](mailto:techsupport@idealvac.com)

Web: [idealvac.com](http://idealvac.com)

## INTELLECTUAL PROPERTY

At Ideal Vacuum we constantly strive to innovate and improve on existing products. Therefore, specifications and information are subject to change without notice. This publication may discuss features that may not be available in certain revisions of the product. The Ideal Vacuum Logo is a registered trademark and the slogan "Our Products Develop Tomorrow's Technologies" and Taper-Seal are trademarks of Ideal Vacuum Products, LLC. Viton is a registered trademark of the Chemours Company. Heraeus TSC-3 is a registered trademark of Heraeus Conamic. Reference to any other products, trademarks and registered trademarks owned by other manufacturers is made strictly for informative purposes and are the sole properties of their respective owners.

Copyright © 2019-2021, Ideal Vacuum Products, LLC. All rights reserved.

# TABLE OF CONTENTS

- Warranty .....2
- Customer Service and Support.....2
- Intellectual Property .....2
- Safety .....4
  - Important Safety Information .....4
  - Warning Symbols and Definitions .....4
- Additional Safety for HALO View Windows (HVW) .....5**
  - Visual Inspection .....5
  - Mounting and Assembly .....5
  - Pressure .....5
  - Temperature Changes and Thermal Shock .....5
- 1. General Information .....6**
  - 1.1 Introduction .....6
  - 1.2 Specifications .....7
  - 1.3 Assemblies, Window Panes and Repair/Rebuild Kits .....7
  - 1.4 Claw Clamps and Centering Rings .....8
  - 1.5 Assembly Diagram and Parts List .....8
  - 1.6 Window Material Characteristics .....9
- 2. Window Pane Service and Replacement .....10**
  - 2.1 Disassembly and Maintenance .....10
  - 2.2 Reassembly .....12

## LIST OF FIGURES

- Figure 1 - HALO View windows. From left: ISO-63, 80, 100, 160, 200 .....6
- Figure 2 - Exploded view .....8
- Figure 3 - Transmissivity of tempered glass and fused quartz .....9
- Figure 4 - Remove the trim ring with bolts still inserted .....11
- Figure 5 - O-ring removal tool .....11
- Figure 6 - O-ring removal recesses .....11
- Figure 7 - Window pane placed onto flange .....12
- Figure 8 - Tighten hold-down bolts .....12

## LIST OF TABLES

- Table 1 - Technical specifications .....7
- Table 2 - Part number selector: assemblies, pane replacements, and repair kits .....7
- Table 3 - Part number selector: claw clamps and centering rings .....8
- Table 4 - Assembly parts list .....8

# SAFETY

## IMPORTANT SAFETY INFORMATION

Thank you for purchasing this equipment from Ideal Vacuum Products. We want you to operate it safely.

- **Read this manual before installing or operating this equipment. Failure to follow the warnings and instructions may result in serious injury or equipment damage.**
- **Keep this manual in a safe location for future reference.**
- **This equipment should only be installed and operated by trained, qualified personnel, wearing appropriate protective equipment.**
- **Follow all codes that regulate the installation and operation of this equipment.**

## WARNING SYMBOLS AND DEFINITIONS



This is the universal safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



Indicates an imminently hazardous situation that, if not avoided, will result in death or severe injury.



Indicates an imminently hazardous situation that, if not avoided, could result in death or severe injury.



Indicates a potentially hazardous situation that, if not avoided, could result in moderate or minor injury. It may also be used to alert against unsafe practices.



Indicates a potentially hazardous situation that, if not avoided, could result in equipment or property damage.



Indicates helpful tips and recommendations, as well as information for efficient, trouble-free operation.

Internationally recognized safety symbols may be used with safety warnings to specify the type of hazard or a safety protocol to follow. For example:



Indicates an electric shock hazard



Indicates safety glasses are required

## ADDITIONAL SAFETY FOR HALO VIEW WINDOWS (HVW)

 **DANGER**



Implosion/explosion hazard. Failure to follow ALL instructions and safety precautions can result in serious injury or death.

 **CAUTION**



Always wear protective equipment, including safety glasses and gloves. Exercise care when working with any vacuum component.

*All viewing windows or ports are inherently fragile. Exercise great care when handling, mounting and when using a chamber with a viewing window. Below are specific warnings and special precautions needed for safely installing and using a viewing window.*

### VISUAL INSPECTION



Visually inspect the window upon receipt and check regularly for scratches or any irregularity. Even small scratches can cause a weak spot in the window causing failure. Keep hard objects away from the window. Use only a soft cloth or lens tissue for cleaning.

### MOUNTING AND ASSEMBLY



Carefully follow all mounting and reassembly instructions in this manual if you are replacing or servicing the window pane. Strictly adhere to the bolt torque specifications and tightening order pattern. Over-tightening of bolts DOES NOT produce a more leak-proof seal. Overtightening, or failure to properly reassemble a viewing window assembly could cause internal strain buildup in the window material resulting in failure.

### PRESSURE



NEVER subject a viewing window equipped chamber to positive internal pressure. The viewing window is designed and rated for vacuum ONLY. Chamber pressures in excess of ambient atmosphere could cause the viewing window assembly to fail catastrophically.

### TEMPERATURE CHANGES AND THERMAL SHOCK



The fragile nature of the window makes it susceptible to thermal shock. Rapid temperature changes under vacuum, hot or cold, can cause failure. Bakeout or cooling is permissible within the temperature rating of the Viton® O-ring seals. Keep chamber temperature change rates to  $<10^{\circ}\text{C}/\text{min}$  ( $<18^{\circ}\text{F}/\text{min}$ ).

If directing a laser beam through the window, make sure the laser's wavelength can be reasonably transmitted through the window's material. Directing a laser through the window of a wavelength the window material absorbs, or focusing a laser of any wavelength within the window medium, will cause a steep thermal gradient extending outward from the point of incidence. This could result in localized weakening or fracturing of the window.

# 1. GENERAL INFORMATION

## 1.1 INTRODUCTION

The HALO View Window System (HVW) is a popular accessory for Ideal Vacuum Cube and other vacuum chamber systems with ISO ports. HALO View windows are used in place of blank ISO flanges and allow a user to inspect chamber processes and perform optical experiments. An HVW can be added to a system at any time.

HALO View windows are available in ISO 63, 80, 100, 160, 200 and 250 flange sizes. Like other ISO fittings, these ISO flanged windows use either single or double claw clamps along with a centering ring fitted with an o-ring. Use double claw clamps to mount to ISO-K flanges. Use single claw clamps to mount to ISO interfaces with tapped holes such as those used on Ideal Vacuum Cube chamber plates. The recommended number and type of claw clamps and the centering ring required is shown in Table 3, [Section 1.4, page 8](#).

Two window materials are available: tempered glass and fused quartz. See [Section 1.3, page 7](#), for complete HVW assemblies and replacement/upgrade window pane options. See [Section 1.6, page 9](#), for material characteristics and suggested uses of the two window material types.

HVW's employ a zero metal-to-glass contact design that holds a 3/8" thick window pane to a stainless steel mounting flange. This cushioned window mounting system ensures operator safety and window longevity. The simple construction makes the HVW field serviceable.

Ideal Vacuum ISO HALO View windows employ Viton O-rings and PTFE spacers. This allows bakeout temperatures to 150 °C are permissible.

All parts that make up the HVW are carefully selected for vacuum system compatibility and longevity. All production, assembly and testing is done in our own manufacturing facility in Albuquerque, NM, U.S.A. Before it ships, every HALO viewing window is fully assembled, visually inspected for window imperfections, helium leak tested, cleaned, and sealed. This ensures that it operates correctly, safely, and is ready for immediate installation upon delivery.



*Figure 1 - HALO View windows. From left: ISO-63, 80, 100, 160, 200*

## 1.2 SPECIFICATIONS

PARAMETER	MEASURE/TYPE	
Ultimate Vacuum Pressure	3 x 10 <sup>-8</sup> Torr	
Leak Rate	<1 x 10 <sup>-8</sup> std cc/sec atm Helium	
Temperature Rating	-20° to 150° C (-4° to 302° F)	
Max. Temperature Change Rate	10° C/min (18° F/min) max	
Part	Materials	
Viewing Window	3/8" thick; tempered glass or fused quartz	
Window Trim Ring	6061-T6 Anodized Aluminum	
ISO-Flange	304 Stainless Steel	
O-Ring Seals	Viton®	
Dowel Pin Spacers	PTFE, 3/16" x 3/8" L	
Trim Ring Hold-Down Bolts	18-8 Stainless Steel, 8-32 x 9/16" L	
Window Size	Flange Diameter	Viewable Area
ISO-63	3.74 in.	3.3 in. <sup>2</sup>
ISO-80	4.33 in.	5.1 in. <sup>2</sup>
ISO-100	5.12 in.	9.3 in. <sup>2</sup>
ISO-160	7.07 in.	21.2 in. <sup>2</sup>
ISO-200	9.45 in.	47.8 in. <sup>2</sup>
ISO-250	11.42 in.	72.1 in. <sup>2</sup>

Table 1 - Technical specifications

## 1.3 ASSEMBLIES, WINDOW PANES AND REPAIR/REBUILD KITS

WINDOW SIZE	LOW IRON TEMPERED GLASS		FUSED QUARTZ (Heraeus TSC-3®)		REPAIR KIT
	Complete Assembly	Window Only	Complete Assembly	Window Only	
					Includes (2) Viton® O-Rings & (4) PTFE Spacers
ISO-63	<a href="#">P1011599</a>	<a href="#">P1011883</a>	<a href="#">P1011868</a>	<a href="#">P1011889</a>	<a href="#">P1011895</a>
ISO-80	<a href="#">P1011600</a>	<a href="#">P1011884</a>	<a href="#">P1011878</a>	<a href="#">P1011890</a>	<a href="#">P1011896</a>
ISO-100	<a href="#">P1011601</a>	<a href="#">P1011885</a>	<a href="#">P1011879</a>	<a href="#">P1011891</a>	<a href="#">P1011897</a>
ISO-160	<a href="#">P1011602</a>	<a href="#">P1011886</a>	<a href="#">P1011880</a>	<a href="#">P1011892</a>	<a href="#">P1011898</a>
ISO-200	<a href="#">P1011603</a>	<a href="#">P1011887</a>	<a href="#">P1011881</a>	<a href="#">P1011893</a>	<a href="#">P1011899</a>
ISO-250	<a href="#">P1011604</a>	<a href="#">P1011888</a>	<a href="#">P1011882</a>	<a href="#">P1011894</a>	<a href="#">P1011900</a>

Table 2 - Part number selector: assemblies, pane replacements, and repair kits

## 1.4 CLAW CLAMPS AND CENTERING RINGS

FLANGE SIZE	MIN. # CLAMPS	OPTIMAL # CLAMPS	DOUBLE CLAW	SINGLE CLAW	CENTERING RING
ISO-63	3	4	<a href="#">P104066</a>	<a href="#">P108058</a>	<a href="#">P101761</a>
ISO-80	4	8	<a href="#">P104066</a>	<a href="#">P108058</a>	<a href="#">P101762</a>
ISO-100	4	8	<a href="#">P104066</a>	<a href="#">P108058</a>	<a href="#">P101763</a>
ISO-160	4	8	<a href="#">P104067</a>	<a href="#">P104065</a>	<a href="#">P101764</a>
ISO-200	6	12	<a href="#">P104067</a>	<a href="#">P104065</a>	<a href="#">P101765</a>
ISO-250	8	12	<a href="#">P104067</a>	<a href="#">P104065</a>	<a href="#">P105424</a>

Table 3 - Part number selector: claw clamps and centering rings

## 1.5 ASSEMBLY DIAGRAM AND PARTS LIST

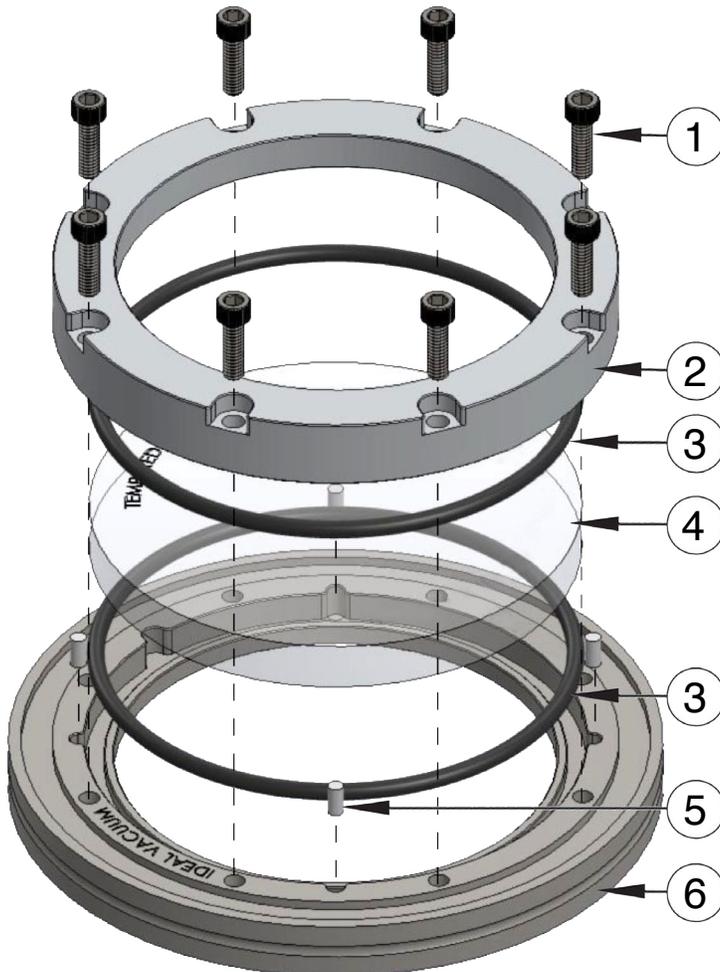


Figure 2 - Exploded view

ITEM	DESCRIPTION	QTY.
1	Hold-down Bolt, 18-8 SS Socket Head, 8-32 x 9/16" L, Torque = 20 in-lb. max.	4 - 16 (depends on ISO size)
2	Window Trim Ring, 6061-T6 Aluminum	1
3	Viton O-ring	2
4	Window, Tempered Glass or Fused Quartz w/Etched Warning Message	1
5	Dowel Pin Spacer, PTFE, 3/16" dia. x 3/8" L	4
6	ISO Flange, 304 Stainless Steel	1

Table 4 - Assembly parts list

## 1.6 WINDOW MATERIAL CHARACTERISTICS

The selection of a suitable window material depends largely on its intended purpose. We offer two window materials for HALO View Windows: standard low-iron tempered float glass and Heraeus TSC-3® fused quartz. Both types are polished plate material.

Our standard, high clarity, tempered window glass has a surface quality and flatness of Q4 per ASTM 1036-06 and 1048-04. This glass exhibits a slight blueish tint. It is the most economical window material we offer and is most commonly used for general, direct observation of roughing or high-vacuum chamber processes. This glass is unsuitable for laser experiments below visible or beyond near-infrared (NIR) wavelengths.

Our higher grade [Heraeus TSC-3® fused quartz](#) window panes have a scratch-dig grade of 80/50, have appreciably improved transmittance, and a wider useful wavelength range than glass. These windows are made with high purity, fused quartz powders. TSC-3® is the standard semiconductor grade material.

Figure 3, below, shows a comparison of the percent transmission of light (compared to reflection) and the range of wavelengths that the two available viewing window pane materials can pass without unreasonable energy absorption. The graph shows that both materials have excellent transmissivity throughout the visible range.

Just below the visible, at approximately 350 nm, standard glass begins to absorb energy significantly. Fused quartz does not become overly absorptive until well into the Mid UV ( $\approx 250$  nm) and maintains excellent transmissivity up to the Mid IR ( $\approx 2500$  nm).

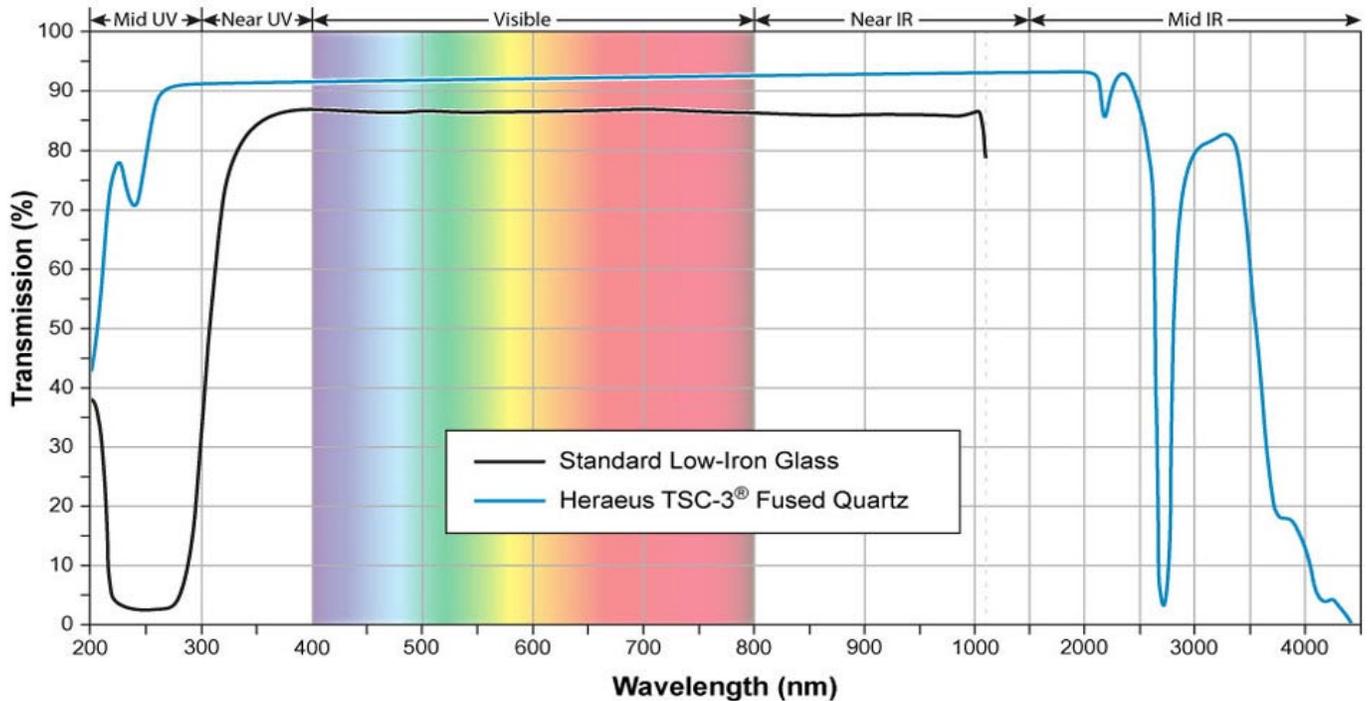


Figure 3 - Transmissivity of tempered glass and fused quartz

## 2. WINDOW PANE SERVICE AND REPLACEMENT

### WARNING



HALO View Windows and window pane materials are engineered with critical tolerances. Use only factory certified windows.

Occasional cleaning and servicing of the HVW is beneficial to maintain good operation. Particulates and other contaminants could begin to accumulate on the window pane, causing reduced transparency. The window could get scratched, chipped or otherwise damaged. O-ring seals could begin to harden over time, particularly if subjected to heating. Inspect the HVW regularly as part of scheduled, system preventive maintenance.

Disassembly may be required for any of these reasons:

1. If the window pane becomes scratched or can not be successfully cleaned.
2. If a window replacement or upgrade is needed or desired.

The design of the HVW allows the window pane to be replaced or upgraded whenever system needs change. Table 2, [Section 1.2, page 7](#), shows all available viewing window assemblies, replacement window panes and repair kits.

### 2.1 DISASSEMBLY AND MAINTENANCE

#### WARNING

Before performing any maintenance or service on the HALO View Window, the vacuum chamber must be at ambient atmosphere.

#### NOTICE

Prepare and use a clean, soft surface to perform maintenance or service on a viewing window assembly. Viewing windows are more fragile than many vacuum components. Be careful, use gloves, clean tools, and only recommended cleaning agents.

The HALO view window is demountable, meaning that the window pane can be removed while the assembly flange remains connected to the chamber's ISO flange. However, we recommend you remove the HALO View Window assembly from the vacuum chamber prior to maintenance or service. Depending on the ISO flange size of the window, a 1/2", 13 mm or 17 mm wrench will be required to remove the claw clamps. Once the HVW is removed from the chamber, it can be disassembled.

All HALO View windows are constructed similarly to the example in Figure 2, [Section 1.5, page 8](#). Each window size has a different number of trim ring hold-down bolts.

1. **Using a 1/8" hex wrench**, gradually unscrew the trim ring hold-down bolts. Use a "star" or "cross" pattern so as not to warp the trim ring. Take several "passes" around the ring until all bolts are free. Once all bolts are loose, the ring is lifted off the flange easily (Figure 4).




*Figure 4 - Remove the trim ring with bolts still inserted*

2. Carefully lift off the window pane and put it aside.
3. Use a plastic O-ring removal tool, like the one shown in Figure 5 ([P1010547](#)), to carefully remove the O-rings from their grooves in the trim ring and ISO flange. Do not use a metal tool which could damage the O-ring or the O-ring groove.



*Figure 5 - O-ring removal tool*

Both the ISO flange and the trim ring have specially machined recesses for easy O-ring removal (Figure 6).

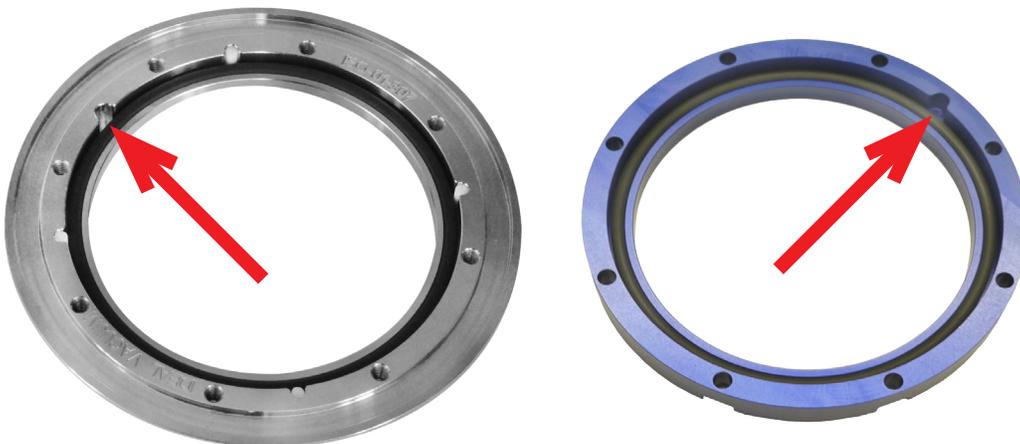

*Figure 6 - O-ring removal recesses*

4. Inspect the (4) PTFE dowel pin spacers.
5. Inspect the O-rings for damage. They can be reused as long as they remain pliable and are not permanently deformed. See Table 3, [Section 1.3, page 7](#), for repair/rebuild kits. Each kit contains two Viton O-rings and four PTFE dowel pin spacers.
6. Use a soft, clean, lint-free cloth and isopropyl alcohol (IPA) to clean the trim ring, ISO flange, O-rings and O-ring grooves.
7. **Use only IPA and lens tissue to clean the window pane.**

## 2.2 REASSEMBLY

Reassemble the HALO View window assembly in reverse order to disassembly.

1. Insert O-rings into the grooves of the ISO flange and trim rings. Do not use vacuum grease.

If the O-ring pops out of the groove, run it through your hands to create friction to warm and slightly stretch it to fit better. To obtain the optimal seal, avoid twisting the O-ring.

2. Gently place the window pane onto the ISO flange, centered on the O-ring.

The glass will fit loosely within the PTFE dowel pins. The engraved text on the glass should be face up so that it is readable (Figure 7).



Figure 7 - Window pane placed onto flange

3. Carefully place the window trim ring onto the flange, around the window pane and align the bolt holes.
4. Insert the 8-32 x 9/16" long bolts into each of the holes and begin to tighten using the 1/8" hex wrench.

Once the bolts are becoming snug, use a "star" or "cross" pattern, similar to tightening the lug nuts on a car, to tighten the bolts so that the trim ring touches the ISO flange all around.

5. Use a torque wrench to tighten the bolts to 20 in-lb. **Maximum torque is 20 in-lb.** When correctly torqued, the window trim ring will be in contact with the ISO flange. Overtightening bolts WILL NOT produce a better seal.



Figure 8 - Tighten hold-down bolts

6. Examine the ISO centering ring and replace it as needed when reinstalling the HVW onto the chamber flange.



**Ideal Vacuum Products, LLC.**  
**5910 Midway Park Blvd NE**  
**Albuquerque, NM 87109**

**Phone: (505) 872-0037**

**Fax: (505) 872-9001**

**Web: [idealvac.com](http://idealvac.com)**

