

***OIL MIST ELIMINATOR
KF 25***

949-9395 serie

(GB) INSTRUCTION MANUAL

Oil Mist Eliminator KF25



VARIAN



vacuum technologies

Dear Customer,

Thank you for purchasing a VARIAN vacuum product. At VARIAN Vacuum Technologies we make every effort to ensure that you will be satisfied with the product and/or service you have purchased.

As part of our Continuous Improvement effort, we ask that you report to us any problem you may have had with the purchase or operation of our product. On the back side you find a Corrective Action Request form that you may fill out in the first part and return to us.

This form is intended to supplement normal lines of communications and to resolve problems that existing systems are not addressing in an adequate or timely manner.

Upon receipt of your Corrective Action Request we will determine the Root Cause of the problem and take the necessary actions to eliminate it. You will be contacted by one of our employees who will review the problem with you and update you, with the second part of the same form, on our actions.

Your business is very important to us. Please, take the time and let us know how we can improve.

Sincerely,

Sergio PIRAS

*Vice President and General Manager
VARIAN Vacuum Technologies*

Note: Fax or mail the Customer Request for Action (see backside page) to VARIAN Vacuum Technologies (Torino) - Quality Assurance or to your nearest VARIAN representative for onward transmission to the same address.

CUSTOMER REQUEST FOR CORRECTIVE / PREVENTIVE / IMPROVEMENT ACTION

TO : VARIAN VACUUM TECHNOLOGIES TORINO - QUALITY ASSURANCE

FAX N° : XXXX - 011 - 9979350

ADDRESS: VARIAN S.p.A. - Via F.lli Varian, 54 - 10040 Leinì (Torino) - Italy

E-MAIL : marco.marzio@varianinc.com

NAME _____	COMPANY _____	FUNCTION _____
ADDRESS : _____		
TEL. N° : _____		FAX N° : _____
E-MAIL : _____		
PROBLEM / SUGGESTION : _____ _____ _____ _____ _____ _____		
REFERENCE INFORMATION (model n°, serial n°, ordering information, time to failure after installation, etc.) : _____ _____ _____ _____		
		DATE _____

CORRECTIVE ACTION PLAN / ACTUATION (by VARIAN VTT)	LOG N° _____
_____ _____ _____ _____ _____ _____	

XXXX = Code for dialing Italy from your country (es. 01139 from USA; 00139 from Japan, etc.)

GENERAL DESCRIPTION

It is assembled at the outlet of rotary pumps and the main purpose is to purify the exhaust gases from oil mists.

The use is advised for pumps which have to work for a long time at intake pressures exceeding 10 mbar, or with the ballasting tap open.

In the event that the exhaust gases also contain condensable vapours, to avoid their return into the pump it is necessary to mount a condensate separator between the exhaust port and the filter.

The oil mist filter is provided with a relief valve to protect the pump from overloads caused by excessive resistance on the-exhaust line.

In case of saturation of the filtering element, it is possible to simply remove and replace it.

TECHNICAL SPECIFICATION

Specification

Part number	949-9395
Weight	140 g
Pneurop fitting	KF 25
Material	Nylon 30VF

Replacement Parts:

Cartridge (Ø 25,4): P/N 949-9394

USE:

Fits on outlet port of oil bath rotary pump with a maximum displacement of 30 m³/h.

Required for installation:

- one centering ring DN 25 with gasket: CK25AB
- one clamping collar DN 25: KQ25AWP

Before installation

- Remove flap valve (if any) from pump outlet port
- Find the end through which the white cartridge is visible and mount this end on the pump.

MAINTENANCE:

Excessive mist means that the cartridge is saturated and must be replaced. The same is true in the case of oil spraying out: this also indicates saturation of the cartridge, which must be replaced.

Disassembly (see drawing):

Remove assembly screws A;

Disassemble:

- Upper casing B
- Spring C
- Valve D
- Cartridge E
- O-ring F.


Clean with a dry cloth and degrease with a water soap solution and rinse with clean water.

Reassembly

Install a new cartridge in the lower casing (B), pressing gently to be sure it is firmly seated.

Install valve D with polished side toward cartridge, center spring C over valve D, fit gasket F in its groove, and cover entire assembly with the second casing B.

Tighten the two casings 8, using assembly screws A. After changing the cartridge several times, it may be necessary to replace the gasket OR 3212 as well as the centering ring gasket.

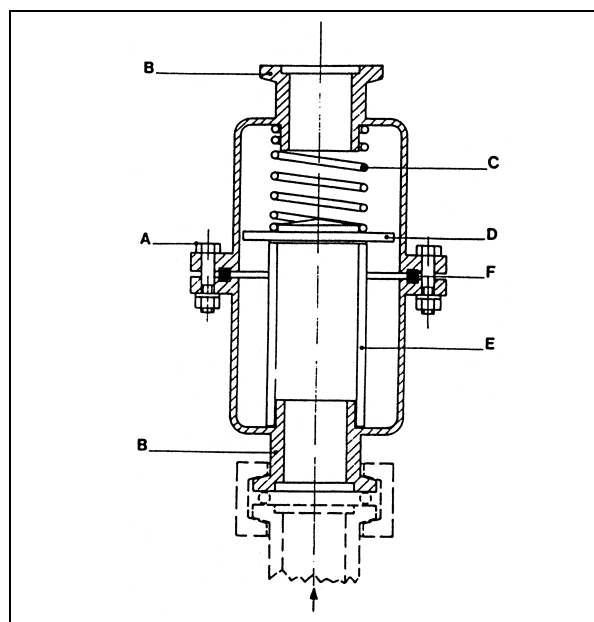


Exhaust flange of the rotary pump

DISPOSAL

Meaning of the "WEEE" logo found in labels

The following symbol is applied in accordance with the EC WEEE (Waste Electrical and Electronic Equipment) Directive.

This symbol (**valid only in countries of the European Community**) indicates that the product it applies to must NOT be disposed of together with ordinary domestic or industrial waste but must be sent to a differentiated waste collection system. The end user is therefore invited to contact the supplier of the device, whether the Parent Company or a retailer, to initiate the collection and disposal process after checking the contractual terms and conditions of sale.

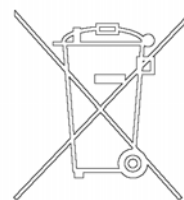



Request for Return



1. A Return Authorization Number (RA#) **WILL NOT** be issued until this Request for Return is completely filled out, signed and returned to Varian Customer Service.
2. Return shipments shall be made in compliance with local and international **Shipping Regulations** (IATA, DOT, UN).
3. The customer is expected to take the following actions to ensure the **Safety** of workers at Varian: (a) Drain any oils or other liquids, (b) Purge or flush all gasses, (c) Wipe off any excess residues in or on the equipment, (d) Package the equipment to prevent shipping damage, (for Advance Exchanges please use packing material from replacement unit).
4. Make sure the shipping documents clearly show the RA# and then return the package to the Varian location nearest you.

North and South America

Varian Vacuum Technologies
121 Hartwell Ave
Lexington, MA 02421
Phone : +1 781 8617200
Fax: +1 781 8609252

Europe and Middle East

Varian SpA
Via Flli Varian 54
10040 Leini (TO) – ITALY
Phone: +39 011 9979111
Fax: +39 011 9979330

Asia and ROW

Varian Vacuum Technologies
Local Office

CUSTOMER INFORMATION

Company name:	
Contact person: Name:	Tel:
Fax:	E-Mail:
Ship Method:	Shipping Collect #: P.O.#:
<u>Europe only:</u> VAT reg. Number: <u>USA only:</u> ☐ Taxable ☐ Non-taxable	
Customer Ship To:	Customer Bill To:
.....	
.....	

PRODUCT IDENTIFICATION

Product Description	Varian P/N	Varian S/N	Purchase Reference

TYPE OF RETURN (check appropriate box)

☐ Paid Exchange	☐ Paid Repair	☐ Warranty Exchange	☐ Warranty Repair	☐ Loaner Return
☐ Credit	☐ Shipping Error	☐ Evaluation Return	☐ Calibration	☐ Other

HEALTH and SAFETY CERTIFICATION

Varian Vacuum Technologies **CAN NOT ACCEPT** any equipment which contains **BIOLOGICAL HAZARDS** or **RADIOACTIVITY**. Call Varian Customer Service to discuss alternatives if this requirement presents a problem.

The equipment listed above (check one):

☐ **HAS NOT** been exposed to any toxic or hazardous materials

OR

☐ **HAS** been exposed to any toxic or hazardous materials. In case of this selection, check boxes for any materials that equipment was exposed to, check all categories that apply:

☐ Toxic ☐ Corrosive ☐ Reactive ☐ Flammable ☐ Explosive ☐ Biological ☐ Radioactive

List all toxic or hazardous materials. Include product name, chemical name and chemical symbol or formula.

.....

Print Name: Customer Authorized Signature:

Print Title: Date:/...../.....

NOTE: If a product is received at Varian which is contaminated with a toxic or hazardous material that was not disclosed, **the customer will be held responsible** for all costs incurred to ensure the safe handling of the product, and **is liable** for any harm or injury to Varian employees as well as to any third party occurring as a result of exposure to toxic or hazardous materials present in the product.

Do not write below this line

Notification (RA)#: Customer ID#: Equipment #:

FAILURE REPORT

TURBO PUMPS and TURBOCONTROLLERS

☐ Does not start ☐ Does not spin freely ☐ Does not reach full speed ☐ Mechanical Contact ☐ Cooling defective	☐ Noise ☐ Vibrations ☐ Leak ☐ Overtemperature	POSITION ☐ Vertical ☐ Horizontal ☐ Upside-down ☐ Other:	PARAMETERS Power: Rotational Speed: Current: Inlet Pressure: Temp 1: Foreline Pressure: Temp 2: Purge flow: OPERATION TIME:
TURBOCONTROLLER ERROR MESSAGE:			

ION PUMPS/CONTROLLERS

☐ Bad feedthrough ☐ Vacuum leak ☐ Error code on display	☐ Poor vacuum ☐ High voltage problem ☐ Other
Customer application:	

VALVES/COMPONENTS

☐ Main seal leak ☐ Solenoid failure ☐ Damaged sealing area	☐ Bellows leak ☐ Damaged flange ☐ Other
Customer application:	

LEAK DETECTORS

☐ Cannot calibrate ☐ Vacuum system unstable ☐ Failed to start	☐ No zero/high background ☐ Cannot reach test mode ☐ Other
Customer application:	

INSTRUMENTS

☐ Gauge tube not working ☐ Communication failure ☐ Error code on display	☐ Display problem ☐ Degas not working ☐ Other
Customer application:	

PRIMARY PUMPS

☐ Pump doesn't start ☐ Doesn't reach vacuum ☐ Pump seized	☐ Noisy pump (describe) ☐ Over temperature ☐ Other
Customer application:	

DIFFUSION PUMPS

☐ Heater failure ☐ Doesn't reach vacuum ☐ Vacuum leak	☐ Electrical problem ☐ Cooling coil damage ☐ Other
Customer application:	

FAILURE DESCRIPTION

(Please describe in detail the nature of the malfunction to assist us in performing failure analysis):

NOTA: Su richiesta questo documento è disponibile anche in Tedesco, Italiano e Francese.

REMARQUE : Sur demande ce document est également disponible en allemand, italien et français.

HINWEIS: Auf Anfrage ist diese Unterlage auch auf Deutsch, Italienisch und Französisch erhältlich.

