



Vacuum Products Division



Wireless Remote Model G8600-60002

for Agilent Technologies Helium
Leak Detection (G8610, G8611, or
G8612)


or for VS Series Leak Detector

Operation Manual

Part Number 699909945

Rev. E

August 2017

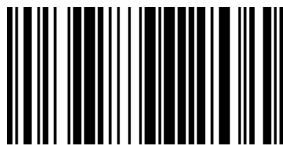

699909945

VS Series Leak Detector Wireless Remote Model G8600-6000



Copyright 2014
Agilent, Inc

Warranty

Products manufactured by Seller are warranted against defects in materials and workmanship for twelve (12) months from date of shipment thereof to Customer, and Seller's liability under valid warranty claims is limited, at the option of Seller, to repair, to replace, or refund of an equitable portion of the purchase price of the Product. Items expendable in normal use are not covered by this warranty. All warranty replacement or repair of parts shall be limited to equipment malfunctions which, in the sole opinion of Seller, are due or traceable to defects in original materials or workmanship. All obligations of Seller under this warranty shall cease in the event of abuse, accident, alteration, misuse, or neglect of the equipment. In-warranty repaired or replaced parts are warranted only for the remaining unexpired portion of the original warranty period applicable to the repaired or replaced parts. After expiration of the applicable warranty period, Customer shall be charged at the then current prices for parts, labor, and transportation. Reasonable care must be used to avoid hazards. Seller expressly disclaims responsibility for loss or damage caused by use of its Products other than in accordance with proper operating procedures. Except as stated herein, Seller makes no warranty, express or implied (either in fact or by operation of law), statutory or otherwise; and, except as stated herein, Seller shall have no liability under any warranty, express or implied (either in fact or by operation of law), statutory or otherwise. Statements made by any person, including representatives of Seller, which are inconsistent or in conflict with the terms of this warranty shall not be binding upon Seller unless reduced to writing and approved by an officer of Seller.

Warranty Replacement and Adjustment

All claims under warranty must be made promptly after occurrence of circumstances giving rise thereto, and must be received within the applicable warranty period by Seller or its authorized representative. Such claims should include the Product serial number, the date of shipment, and a full description of the circumstances giving rise to the claim. Before any Products are returned for repair and/or adjustment, written authorization from Seller or its authorized representative for the return and instructions as to how and where these Products should be returned must be obtained. Any Product returned to Seller for examination shall be prepaid via the means of transportation indicated as acceptable by Seller. Seller reserves the right to reject any warranty claim not promptly reported and any warranty claim on any item that has been altered or has been returned by non-acceptable means of transportation. When any Product is returned for examination and inspection, or for any other reason, Customer shall be responsible for all damage resulting from improper packing or handling, and for loss in transit, notwithstanding any defect or non-conformity in the Product. In all cases, Seller has the sole responsibility for determining the cause and nature of failure, and Seller's determination with regard thereto shall be final. If it is found that Seller's Product has been returned without cause and is still serviceable, Customer will be notified and the Product returned at Customer's expense; in addition, a charge for testing and examination may be made on Products so returned.

This page intentionally left blank

Table of Contents

Warranty	iii
Warranty Replacement and Adjustment	iii
Preface	ix
Documentation Standards	ix
Symbols	ix
Text	ix
Hazard and Safety Information	x
Solvents	xi
Equipment, General	xi
Radio	xii
Power	xiii
External AC/DC Power	xiii
Battery Set Power	xiii
External Headphones	xvi
Radio Compliance	xvii
Agilent Services	xviii
Contacting Agilent	xviii
1 Introduction to the Wireless Remote	1-1
1.1 Wireless Remote	1-1
1.1.1 Wireless Remote Dimensions and Connections	1-2
1.1.2 Front Panel Display and Controls	1-3
2 Enabling Leak Detector for Wireless	2-1
2.1 Agilent Technologies Helium Leak Detector (G8610, G8611, or G8612 Series Leak Detector)	2-1
2.2 VS Series Leak Detector (Legacy)	2-2
3 Operating the Wireless Remote	3-4
3.1 Startup and Shutdown	3-4
3.1.1 Startup	3-4
3.1.2 Shutdown	3-4
3.2 Screens	3-5
3.2.1 Basic Functions	3-5
3.2.2 Home Screen	3-7
3.2.3 Speaker Volume Setup Screen	3-10
3.2.4 Backlight Screen	3-11
3.2.5 Communication Setup Screen	3-13
3.2.6 Contrast Setup Screen	3-22
3.2.7 Sleep Timer Setup	3-24
3.2.8 Version Info	3-27
Appendix A. Specifications	1
A.1 Specifications	1

Table of Figures

Figure 1-1. Wireless Remote Dimensions, Connections, and Controls	1-2
Figure 1-2. Front Panel Displays and Controls	1-3
Figure 1-3. Screen Flow	1-6
Figure 2-1. Helium Leak Detector settings screen	2-1
Figure 2-2. VS Series home screen	2-2
Figure 2-3. VS Series Menus	2-2
Figure 2-4. VS Series set-up screen 1	2-3
Figure 2-5. VS Series set-up screen 2	2-3
Figure 2-6. VS Series wireless set-up	2-3
Figure 3-1. Home Screen - Linear and Log Views	3-7
Figure 3-2. Home Screen - Under and Over Indicators	3-8
Figure 3-3. Operating State Status Messages	3-9
Figure 3-4. Speaker Volume Setup Screen	3-10
Figure 3-5. Speaker Volume Setup Configuration Screen	3-10
Figure 3-6. Speaker Volume Setup Screen	3-11
Figure 3-7. Backlight Screen	3-11
Figure 3-8. Backlight Setup Configuration Screen	3-12
Figure 3-9. Communications Setup - Initial	3-13
Figure 3-10. Choose LD Screen	3-14
Figure 3-11. Speaker Volume Setup Screen	3-14
Figure 3-12. Backlight Screen	3-15
Figure 3-13. Setup Screen	3-15
Figure 3-14. Select Screen	3-15
Figure 3-15. Choose LD Screen	3-16
Figure 3-16. Link Screen	3-16
Figure 3-17. No Available LD	3-16
Figure 3-18. Speaker Volume Setup Screen	3-17
Figure 3-19. Backlight Screen	3-17
Figure 3-20. Setup Screen	3-17
Figure 3-21. Select Screen	3-18
Figure 3-22. Search Screen	3-18
Figure 3-23. Searching Screen	3-18
Figure 3-24. Choose LD Screen	3-19
Figure 3-25. Link Screen	3-19
Figure 3-26. Speaker Volume Setup Screen	3-19
Figure 3-27. Backlight Screen	3-20
Figure 3-28. Backlight Screen	3-20
Figure 3-29. Select Screen	3-20
Figure 3-30. Search Screen	3-21
Figure 3-31. MAC Addresses Screen	3-21
Figure 3-32. Verify MAC Addresses Screen	3-21
Figure 3-33. Speaker Volume Setup Screen	3-22
Figure 3-34. Backlight Screen	3-22
Figure 3-35. Setup Screen	3-22
Figure 3-36. Contrast - Initial Screen	3-23
Figure 3-37. Contrast - Configuration	3-23
Figure 3-38. Speaker Volume Setup Screen	3-24
Figure 3-39. Backlight Screen	3-24
Figure 3-40. Setup Screen	3-25
Figure 3-41. Contrast - Initial Screen	3-25
Figure 3-42. Sleep Timer Screen	3-25
Figure 3-43. Sleep Timer Configuration Screen	3-26

Wireless Remote for Agilent Helium Leak Detector

Figure 3-44. Speaker Volume Setup Screen	3-27
Figure 3-45. Backlight Screen.....	3-27
Figure 3-46. Setup Screen.....	3-27
Figure 3-47. Contrast - Initial Screen.....	3-28
Figure 3-48. Sleep Timer Screen.....	3-28
Figure 3-49. Version - Initial Screen.....	3-28
Figure 3-50. Version - Information Screen	3-29

List of Tables

Table 1. Wireless Remote: Recommended Cells and Service Life..... xvi

Table 3-1. Screen Basic Functional Items3-5

Table 3-2. Status Messages3-6

Table A-1. Wireless Remote Specifications..... A-1

Preface

Documentation Standards

Symbols

This manual uses the following documentation standards:

Note



Notes contain important information.

Caution



Cautions appear before instructions, which if not followed, could cause damage to the equipment or data loss.

Warning



Warnings appear for a particular procedure or practice which, if not followed correctly, could lead to serious injury or death.










Text

- Hard buttons are depicted in text in **bold** text.
- *Italics* is used for emphasis or to indicate screen text.
- Wireless Remote is used for leak detector Wireless Remote Control handheld (HH) unit.

Hazard and Safety Information

Operators and service personnel must be aware of all hazards associated with this equipment. They must know how to recognize hazardous and potentially hazardous conditions, and know how to avoid them. The consequences of unskilled, improper, or careless operation of the equipment can be serious. Every operator or service person must read and thoroughly understand operation/maintenance manuals and any additional information provided by Agilent. All warning and cautions must be read carefully and strictly observed. Consult local, state, and national agencies regarding specific requirements and regulations. Address any safety, operation, and/or maintenance questions to your nearest Agilent office.

The common international symbols used in this manual and on the equipment are defined below:

OFF	OFF Supply (Power)		Direct Current
ON	ON Supply (Power)		Indoor, Dry Location Use Only
	Warning, Risk of danger Refer to documentation		No Serviceable Part Inside
	Alternating Current		Positioning Cell (Battery)
	Headphone		DC Input
	Do Not Place in Trash		

Solvents

Warning



To clean the unit's plastic enclosure, the LCD display and Front Panel buttons, use only a soft cloth slightly dampened with water or a mild soap.

Do NOT use excess water or cleaning solvents of any kind.

Avoid splashing any cleaning solvents into the unit through the openings or the enclosure Front Panel buttons, e.g. the speaker grid, DC Power and Headphone Jacks. Wipe the surface with a dry lint-free cloth.

Do not let any water or other foreign object get inside the equipment. If the Wireless Remote is dropped into water or if water gets into the internal parts, it could result in fire or electrical shock. Remove the battery cells immediately and contact Agilent's service center.

Equipment, General

Caution



The performance and operating safety of this equipment can only be guaranteed if it is operated according to normal conditions of use.

Caution



Do not leave the Wireless Remote in places with high temperature and high humidity or where temperature and humidity fluctuate greatly.

Avoid dropping or hitting the Wireless remote or subjecting it to severe vibration or impact.

Warning



Do not use in presence of flammable or explosive gas.

Do not attempt to disassemble or modify the equipment: Wireless Remote, External AC/DC power supply and/or battery charger. Such action could lead to electric shock or injury. Agilent's authorized technician will do any repair work.

Warning



If an operator notices smoke or an unusual smell or noise, stop using the Wireless Remote immediately, remove the battery cell taking care to avoid burns, and contact the Agilent Service Center.

Remove the battery cells outdoors, away from anything combustible, and avoid touching it with bare hands.

Continued operation could result in fire or burns.

Warning



Be careful with the strap when carrying the Wireless Remote as it can catch on stray objects, causing injury or damage.

Wireless Remote for Agilent Helium Leak Detector

LCD Display

Caution

Do not apply excessive pressure to the LCD display as this may cause smears.



Caution

In general, the lower the temperature, the longer it takes the LCD display to turn on. Performance of the LCD display may deteriorate in low temperature.



Warning

If the LCD display breaks, avoid getting any liquid crystal in mouth or eyes. If it gets on the operator hands, feet or clothing, wash it immediately with soap and water.



Radio

The wireless remote is built around an RF transceiver module operating in 2.4 GHz ISM band. The same type of the RF module used in this unit is built into the Wireless Remote Base Unit for Agilent Helium Leak Detector (G8610-63000 for field install or make to order), or legacy VS Series G8600-68000 (factory installed) and G6800-68001 (field installed).

The wireless remote operates in a point-to-point or point-to-multipoint, client-server or peer-to-peer architecture. One RF transceiver is configured as a server and there can be one or many clients. To establish synchronization between transceivers, the server emits a beacon. Upon detecting a beacon, a client transceiver informs its host and a RF link is established.

Warning



The Wireless Remote Contains FCC ID: KQL-RM024, IC: 2268C-RM024 RF transceiver module. The enclosed device complies with Part 15 of the FCC Rules and Industry Canada License Exempt RSS Standard(s).

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

To satisfy FCC RF exposure requirements for mobile type transmitting devices, a separation distance of 20 cm or more should be maintained between the antenna of the Wireless Remote and persons during operation, with exception of hands wrist, feet, and ankles. To ensure compliance, operations at closer distance than this distance are prohibited.

An operator should keep the separation distance of 20 cm or more from the RF antenna of the leak detector with a Wireless Base Station.

Power

The wireless remote is the digital device, which compromise a microprocessor based digital electronics, LCD display and 2.4 GHz, radio module. During RF transmission and software program execution the unit consumes high current pulses from a power source: an external AC/DC power supply or a battery set (4-AA cells, primary or rechargeable types).

External AC/DC Power

External Supply

Use only UL/CSA and/or International Safety Agency approved external AC/DC power supply, wall-mount plug-in or desktop type, which meet the follow specifications:

Output

- Voltage: (4.0 to 6.0) VDC
- Current: 1.0 A min.
- Plug:
 - Barrel type: 2.5 mm ID x 5.5 mm OD, Female
 - Barrel's polarization: Internal (+), External (-)

Battery Set Power

Battery Supply

The unit uses 4, alkaline, NiMH or other AA size battery set, primary or rechargeable cells batteries, that supply voltage from 4.0 VDC to 6.0 VDC and suitable for the high current pulse application.

The battery set is automatically disconnected when the external AC/DC power supply is connected to the unit.

Rechargeable batteries will not be charged while the DC power supply is plugged into the charger. Rechargeable batteries must be charged externally on a separate battery charger.

Service life for a fresh charged 4-AA cells battery set depends on the cell type and the operating schedule of the unit (see Table 1).

The wireless device is capable of operating continuously for eight hours with the backlight OFF, when batteries are fresh.

Warning



Take the follow actions to maximize battery safety, when using:

- *Primary: alkaline (Ultra, Ultra+, Industrial or Nickel Oxy)*
 - *Lithium/Iron (e2-Lithium) and/or Rechargeable (NiMH) cells:*
 - *Never use the cells that have physical damage.*
 - *Never remove plastic film labels from the metal raw cells.*
 - *They provide electrical insulation.*
 - *Do not open cell casings.*
 - *Never short circuit the cells - they may ignite, explode, leak, or get hot causing injury.*
 - *Never mix the cells from different chemistry, capacity, lot and date codes.*
 - *Don't mix old cells with new ones. This helps ensure the cells do not leak or rupture.*
 - *Do not insert cells backwards into the unit battery compartment. Confirm the cell's polarity (+) and (-) contacts are correctly oriented in the battery compartment*
 - *Never dispose of the cells in a fire as it may cause them to explode.*
 - *Never leave any type of cells in the unit if it is not be used for a long period of time.*
 - *Never try to charge the primary cells. It may cause explosion or leakage, which may result in bodily injury.*
- *Rechargeable (NiMH) cells:*
 - *Do not insert NiMH cells backwards into the charger.*
 - *Confirm the cell's polarity (+) and (-) contacts are correctly oriented in the charger bay.*
 - *Never charge NiMH cells with different capacities and date code.*
 - *Immediately after a fast charge is finished the NiMH cells are hot! Avoid touching the cells using bare hands when replacing them, as it may cause burns*
 - *Never leave the charger connected to AC power if it is not used.*

When using rechargeable (NiMH) cells, the following will ensure longer battery life:

- NiMH cells prefer deep discharge and fast-charge. Lingering slow charges cause crystalline formation (memory).
- Use only an authorized 15-minutes AA NiMH Fast Charger.
- To get the best performance, charge the NiMH cells in the temperature range between +59 °F and +77 °F. If the area too warm, the cells will not be fully charged. If the area is too cold, the cells can permanently lose their ability to charge.
- For best performance let the fresh fast charged NiMH cells cool to room temperature before using it in the unit.
- If not used immediately, remove the NiMH cells from the charger and then apply a topping-charge before use. Do not leave the cells in the charger for more than a few days, even if on trickle charge.
- NiMH cells that have not been used for several months may not receive a full charge the first time. Two or three cycles with deep discharge generally allows them to reach full capacity.
- NiMH cells are best stored in a cool, dry place at normal room temperature.

Note



Agilent strongly advises customer to use and replace NiMH cells with Energizer, NH15 (AA, 1.2 V, 2200mAh) type.

Agilent strongly advises customers to use and replace the charger with an UL/CSA approved brand and/or vendor, such as: Energizer (www.energizer.com), CH15MN (15-minutes AA NiMH charger) with CH15MN-ADP (AC/DC adapter).

Customers can use equivalent AA NiMH cells and charger only after consultation with Agilent. Failing to do so may void the warranty of the unit.

Warning



Use of an unauthorized AA NiMH charger and or an AA NiMH cell may result in damage or malfunction of the unit, leading to accidents.

Table 1. Wireless Remote: Recommended Cells and Service Life

MANUFACTURER/ TRADE NAME	MODEL, TYPE, P/N	SERVICE LIFE	CATEGORY
Rechargeable 4-AA Cells with Battery Charger			
Eveready battery co./Energizer www.energizer.com	AA, NH15	~ (12-14) h/cycle, ~500 cycles	NiMH cell, 1.2 V, 2200 mAh
Primary Cells			
Eveready battery co./Energizer www.energizer.com	AA, e2 Lithium L91	~ (12 - 15)	Lithium/Iron 1.5V, 3000 mAh
Duracell www.duracell.com/oem	AA, Alkaline NX1500	~ (6 -10)	Nickel Oxy Hydroxide Power Pix, NiOx 1.5V, 1500mAh
Panasonic www.panasonic.com	AA, Alkaline ZR6	~ (6 -10)	Nickel Oxy Hydroxide Xtreme Power or Oxiride, 1.5V
Duracell www.duracell.com/oem	AA, Alkaline MX1500	~ (4 - 8)	Ultimate or Ultra Digital 1.5V, 1500 mAh
Panasonic www.panasonic.com	AA, Alkaline AM-3PI	~ (4 - 8)	Industrial, 1.5V
Duracell www.duracell.com/oem	AA, Alkaline MN1500	~ (2 -4)	Ultra+ or Coppertop

External Headphones

Caution



Use mono headphones with a 3.5 mm plug and at least a 32 Ohm impedance, 100 -10000 Hz frequency response.

Agilent strongly advises to use and replace the headphones with an approved brand and/or vendor, such as: Telex EH2, Model 510, Mono Headset with 3.5 mm plug and Mylar[®] speakers (www.telex.com).

Radio Compliance

The RF transceiver module in the unit has been tested and found to comply with the limits for:

- A mobile Spread Spectrum Transmitter operating under USA: FCC Part 15C, Section 15.247 and Canada: CAN/IC, RSS-210, Issue 8, December 2010 and
- Class 2 transceiver operating under Europe: R&TTE Directive 1999/5/EC and ETSI EMC Standards: EN 300 328-1 V1.7.1 (2006-10), EN 301 489-1 V1.9.2 (2011-09)), EN 301 489-3 V1.5.1(2012-07) and EN 301 489-17 V2.2.1 (2012-09) that meets regulations for the 2.4 GHz ISM band.
- Taiwan NCC LP0002

These limits are designed to provide reasonable protection against harmful interference when it is operated in a commercial environment.

This equipment generates, uses, and can radiate RF energy, which if not installed and used in accordance with the instructional manual, can cause harmful interference to radio communications.

When this equipment is operated in a commercial environment, operation is subject to the following two conditions:

- This equipment must not cause harmful interference.
- This equipment must accept any interference received, including interference (RF and ESD) that may cause undesired operation.
- Any modifications on the unit made by the user are liable to cause non-compliance with regulations or affect the EMC performance and the safety of the product. Agilent cannot be held responsible for consequences resulting from such intervention.
- The unit can be damaged by:
 - Radio Frequency (RF) and Electrostatic Discharge (ESD) energy inputs that exceed the maximum ratings
 - Immersion in liquids
 - Physical abuse

To avoid electric shock, connect the product power cord of the external AC/DC power supply to a grounded power receptacle. A power cord with a grounding conductor is required.

Agilent Services

Agilent offers:

- Preventive maintenance services
- Overhaul services
- Support agreements
- On-site support

Please see our catalog or contact us to learn about available services.

Contacting Agilent

In the United States, you can contact Agilent Customer Service at 1-800-882-7426. See the back cover of this manual for a listing of our sales and service offices.

Visit our web site at:

<http://www.chem.agilent.com/en-US/Products/Instruments/vacuum/pages/default.aspx>.

1 Introduction to the Wireless Remote

1.1 Wireless Remote

The Agilent Helium Leak Detector Wireless Remote is a convenient means for operating multiple leak detectors. The wireless remote (Model G8600-60002) has the following capabilities:

- Enter the leak detector unit into Test and Hold modes.
- Read the leak detector unit's leak rate in a linear or logarithmic bar graph.
- Turn on and read the leak detector unit's standard leak (internal calibrated leak).
- Zero the leak detector unit's leak rate and helium background.
- Able to operate on 19 different channels, which are selectable at the leak detector. See the *VS Series Helium Mass Spectrometer Leak Detector Operations Manual* for details.
- The wireless device can operate multiple systems (remote handsets and leak detectors) in a common area, with only one link active at any moment. A leak detector can only communicate with one wireless device at a time.
- When fully charged, it can communicate with a leak detector from a distance of 100 m, indoors, not through walls or doors.

1.1.1 Wireless Remote Dimensions and Connections

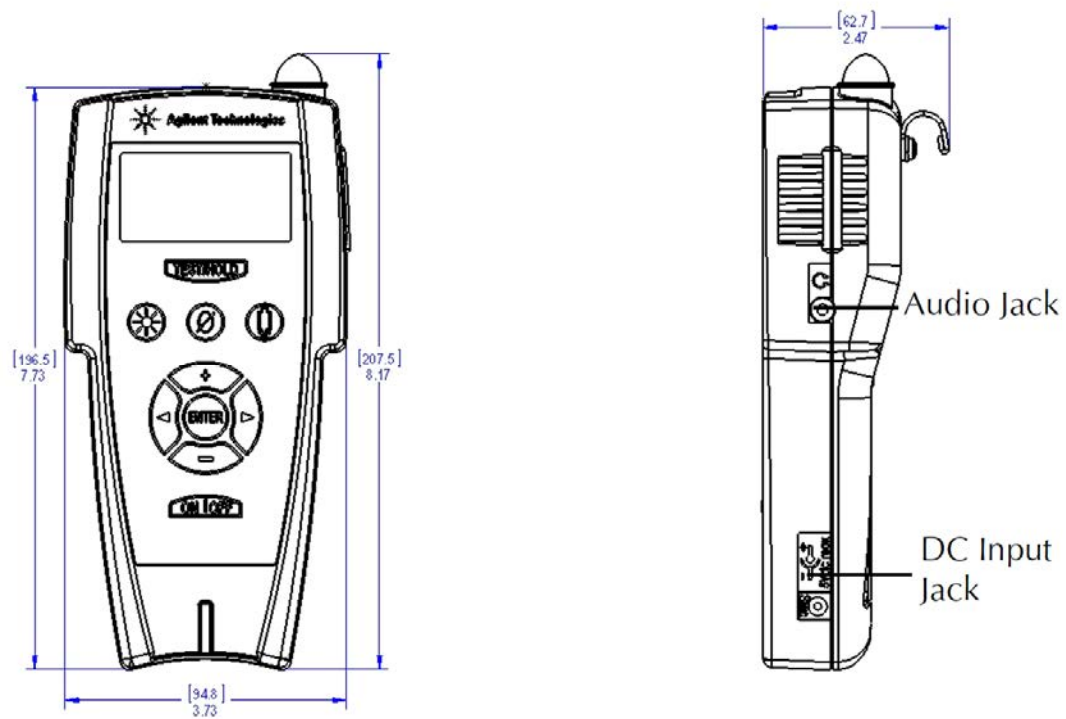


Figure 1-1. Wireless Remote Dimensions, Connections, and Controls

1.1.2 Front Panel Display and Controls

The front panel (Figure 1-2) consists of ten *hard* buttons and an LCD display to access the software control screens. Button functionality is discussed after the figure. All operator control and monitoring of results is achieved via the resident software accessed from the Home screen. Figure 1-3 on page 1-6 shows a flow chart of the main sub-screens. Operational discussions are in Section 2 "Operating the Wireless Remote" on page 2-1.

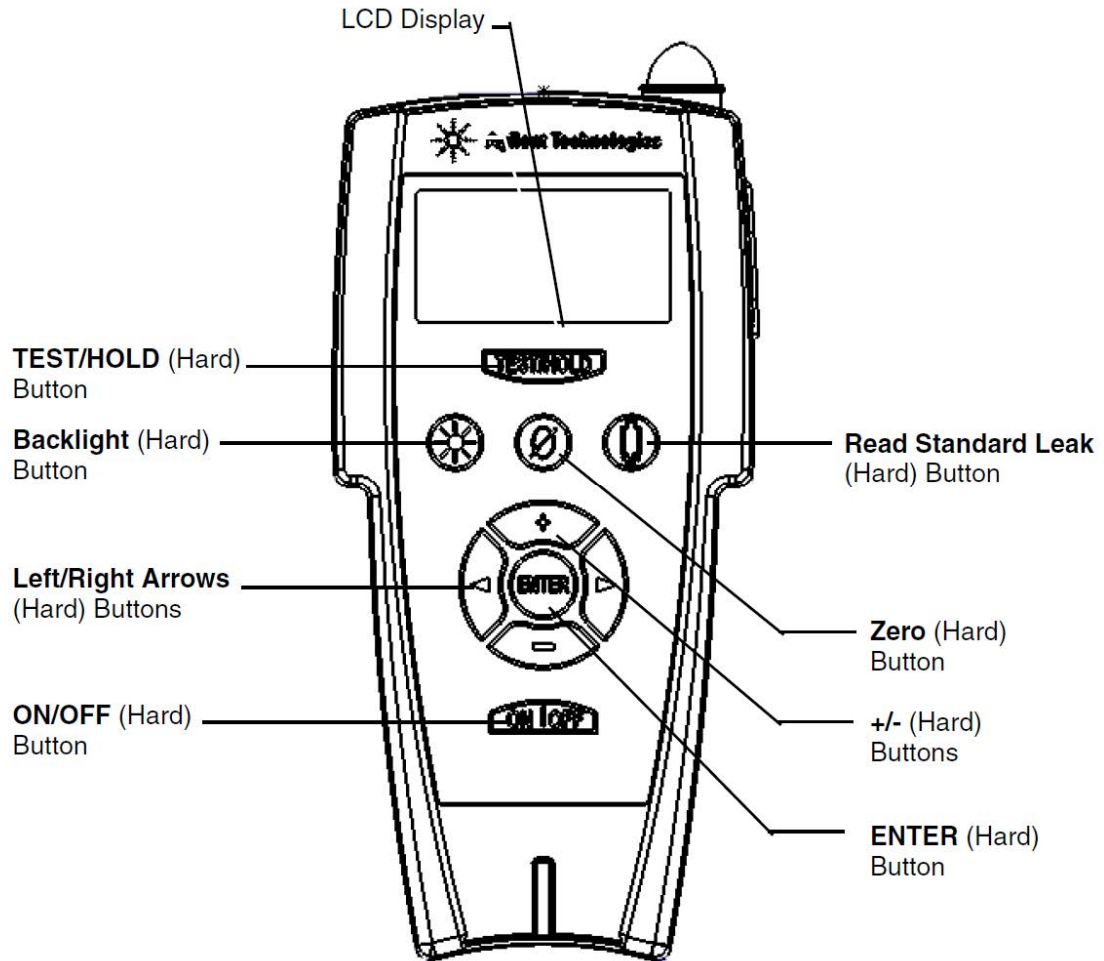


Figure 1-2. Front Panel Displays and Controls

1.1.1.1. LCD Display

1.1.2.1.1 Represents:

- Leak Rate - in a Bar Graph format with a numeric range indicator
- Leak Rate, System Status and Parameters - in alphanumeric format
- Series of screens with the hard key buttons for operator interface

1.1.2.1.2 Leak Rate, System Status, and Parameters in alphanumeric format:

- Leak Rate is presented in a scientific notation: $XXE-YY$ with appropriate units, where:
 - $X.X$ mantissa is a leak rate value
 - $E-Y = 10^{-YY}$ exponent is a leak rate range
 - X and Y are any numbers from 0 to 9
- System Status and/or Mode are represented on the screen in alpha format on the screen and an italic font in this manual
- Parameters are represented on the screen in alphanumeric format a bold font in this manual.

1.1.2.1.3 Leak Rate Bar Graph

The large bar graph displays the leak rate in one of two forms:

- A linear bar graph - Mantissa (2 divisions per segment, 10 segments per decade)
- A logarithmic bar graph - Mantissa (2 divisions per segment). The displayable ranges for each of the UNITS that the system can operate in are:
 - For LOG, display bar graph atm-cc/sec across $E-11$ to $E-3$
 - For LOG, display bar graph mbar-l/sec across $E-11$ to $E-3$
 - For LOG, display bar graph Torr-l/sec across $E-11$ to $E-3$
 - For LOG, display bar graph Pa-m³/sec across $E-12$ to $E-4$
 - For LOG, display bar graph Cubic Ft/year across $E-8$ to $E-0$

Over-range and under-range conditions are indicated using:

- $>$ - To the right side of the bar graph indicates an over-range condition.
- $<$ - To the left side of the bar graph indicates an under-range condition.

Note



The wireless remote automatically displays the same leak rate that the leak detector. Since the wireless remote knows the leak rate units setting for the leak detector, it displays the appropriate ranges for LOG mode.

Test/Hold

Toggles the leak detector between the TEST and HOLD sequences.

Backlight

Toggles the backlight for the display ON or OFF.

Left/Right Arrows

Scroll through the screen features.

ON/OFF

ON: A momentary press turns the wireless remote ON.

OFF: Pressing and holding the OFF button turns the wireless remote OFF. Hold the button down until the display goes blank (approximately three seconds).

Read Standard Leak

Toggles the standard leak ON/OFF for system access.

ZERO

Zeroes out the helium signal indicated on the display.

+/-

These buttons increment/decrement values. On the TOOLS screen, they return the system to the HOME screen icon or the back-arrow icon, which allows the user to go back one screen.

ENTER

Selects or accepts a value or change when navigating or performing control functions.

The unit functions through a series of screens, which are navigated as in Figure 1-3.

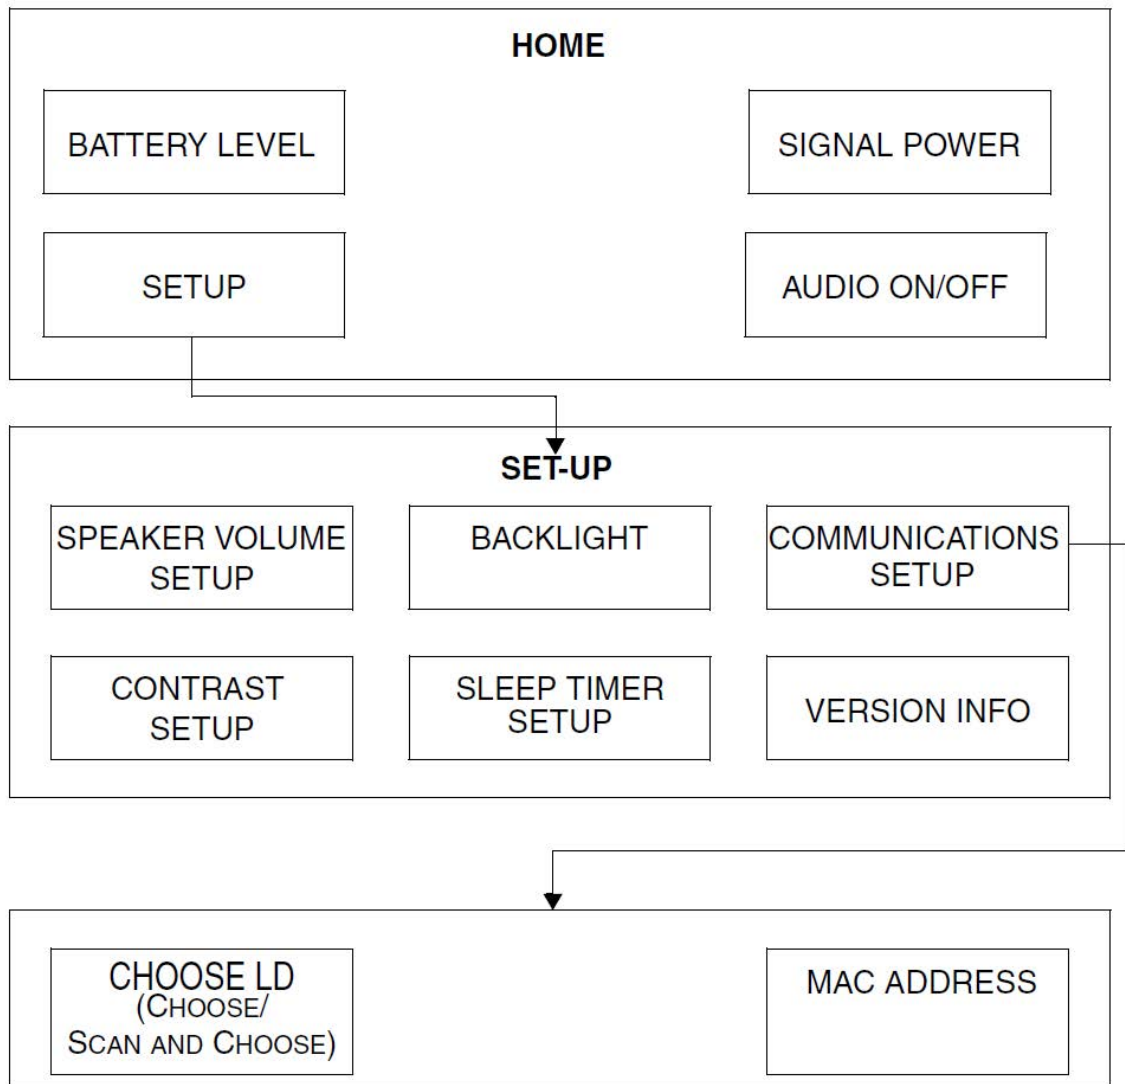


Figure 1-3. Screen Flow

2 Enabling Leak Detector for Wireless

2.1 Agilent Technologies Helium Leak Detector (G8610, G8611, or G8612 Series Leak Detector)

Before powering on the wireless remote control, enable the helium leak detector for remote control. Navigate through:

- Menu
- Settings
- Remote Control

Check on the "Remote Control" checkbox, as shown in Figure 2-1. Select a channel from 1-19. Turn on the remote control and follow the setup instructions outlined in Section 3 of this manual. An icon in the bottom left hand corner of the screen will appear once the remote is connected. Tapping this icon will cause it to disappear and for the remote to disconnect.

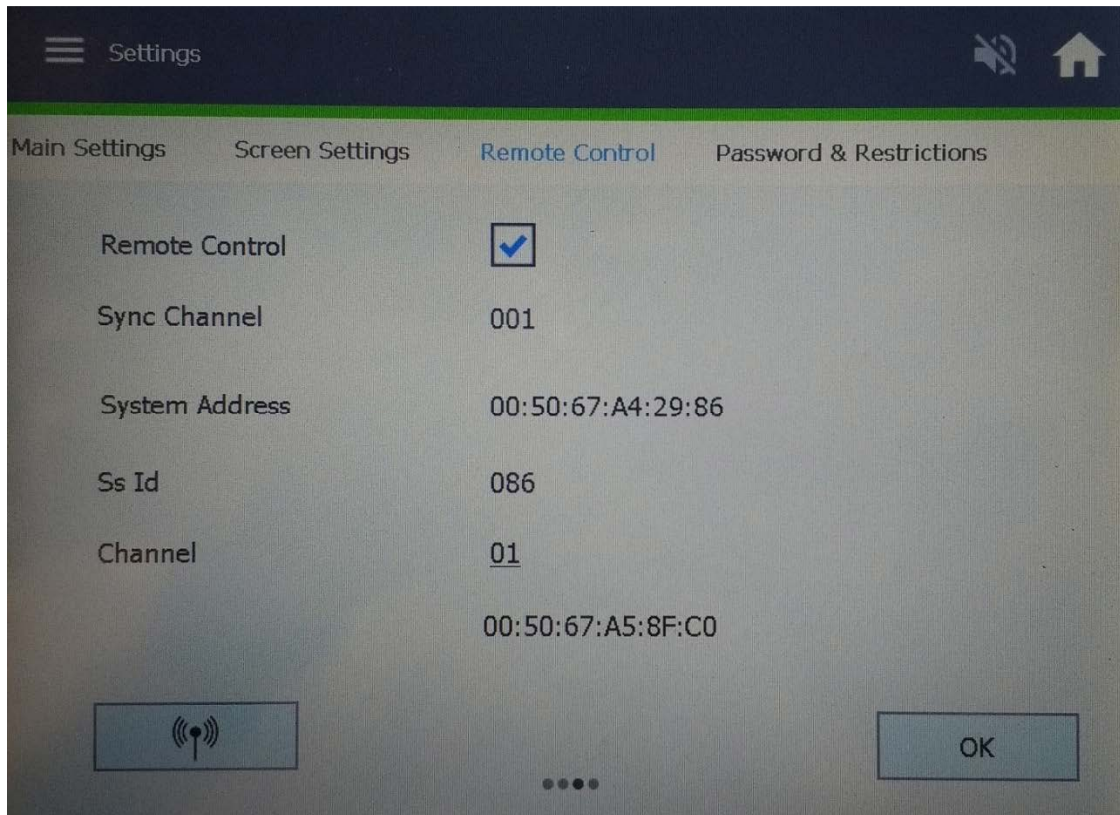


Figure 2-1. Helium Leak Detector settings screen

2.2 VS Series Leak Detector (Legacy)

If using a legacy VS Series Agilent helium leak detector, the leak detector must be configured for wireless operation before powering on the wireless remote. From the home screen (Figure 2-2), select "MENUS".

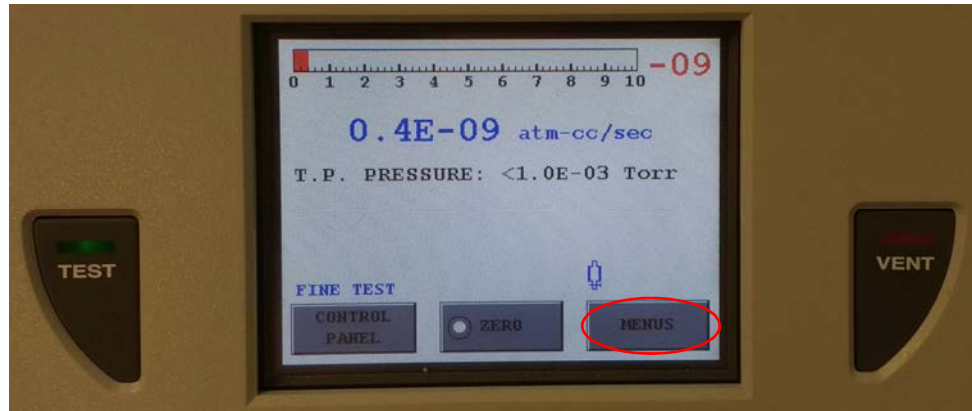


Figure 2-2. VS Series home screen

From the menu screen (Figure 2-3), select "SET-UP".



Figure 2-3. VS Series Menu

Wireless Remote for Agilent Helium Leak Detector

From the set-up screen 1 (Figure 2-4), select the right arrow

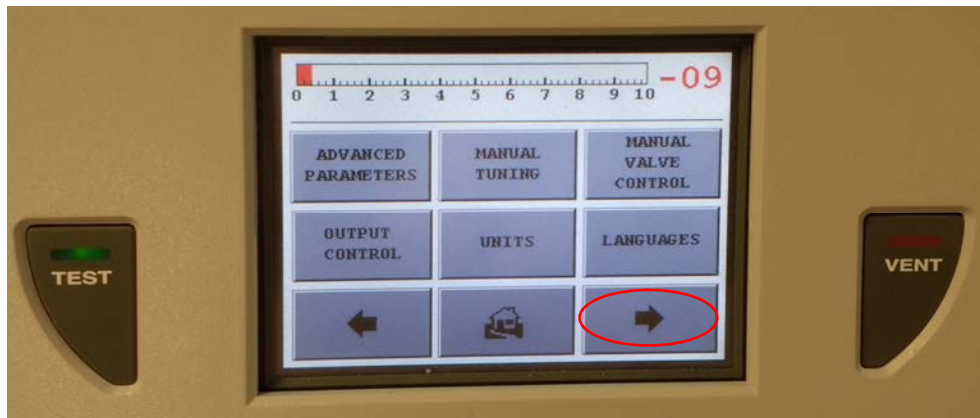


Figure 2-4. VS Series set-up screen 1


From the set-up screen 2 (Figure 2-5), select the wireless icon 



Figure 2-5. VS Series set-up screen 2

From the wireless set-up screen (Figure 2-6), turn on the check box and select the desired remote channel (1-19).

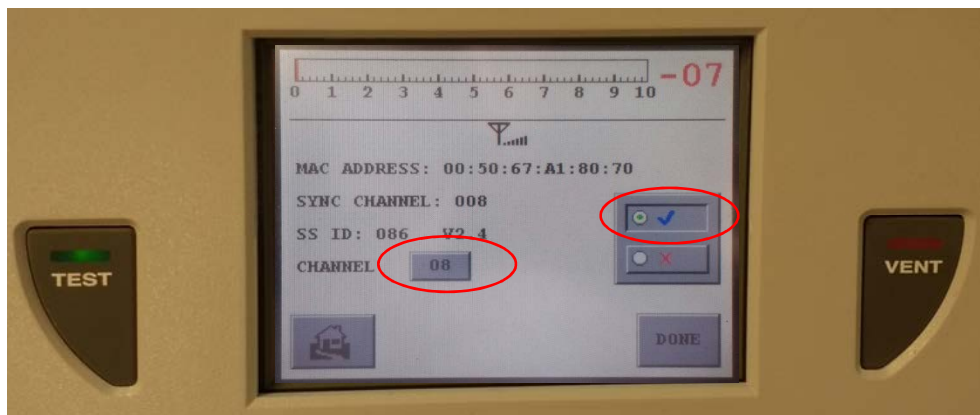


Figure 2-6. VS Series wireless set-up

3 Operating the Wireless Remote

3.1 Startup and Shutdown

3.1.1 Startup

To start the wireless remote unit:

Battery powered:

- Press the **ON** button

External wall-mount plug-in or desktop AC/DC power supply powered

- a) Plug the wall-mount plug-in unit or desktop's leak detector power cord into an appropriate mains power voltage supply receptacle.
- b) Insert a 2.5 mm barrel type plug into the DC input of the wireless remote.
- c) Press the **ON** button.

If the wireless remote was:

- Connected in a session to a leak detector at the previous power-down, and it can connect to the same leak detector again, then the remote's display transitions to the HOME screen.
- Not connected at the previous power-down, or it can no longer establish a session with the same leak detector, the remote goes into Searching mode. Searching mode is also accessed manually via the Setup screen.

Note



The term session, used in the operational descriptions, refers to an established, exclusive point-to-point link between the wireless remote and a leak detector.

3.1.2 Shutdown

The wireless remote can be in any mode when shut down.

To shut down the wireless remote:

- Push and hold the **OFF** button until the LCD display and audio signal go off

3.2 Screens

Use the LCD display for the initial set-up and configuration of the wireless remote. Once the wireless link is set up and configured for a specific application, leak detector basic operation is controlled primarily using the leak detector **TEST** and **VENT** hard buttons and the leak detector **ZERO** and **STDLK** soft buttons and/or the wireless remote keypad **TEST/HOLD**, **READ STANDARD LEAK**, and **Zero** buttons.

The wireless remote updates the LCD display for leak rate and status approximately once per second.

3.2.1 Basic Functions

Table 3-1 explains the basic on-screen functions used to enter or manipulate values.

Table 3-1. Screen Basic Functional Items




Item	Function
	Appears on screens more than one level from the Home screen. Highlight this button and press the Enter button to return directly to the Home screen.
	Saves all values on the screen and exits to the next higher screen.
	Scrolls through menu selection screens when there is more than one screen choice.

Table 3-2 explains the status messages that appear on the wireless remote Home Screen.

Table 3-2. Status Messages

Icon	Meaning
<i>TEST, HOLD, VENT, ROUGHING or CALIBRATING</i>	Indicates the leak detector is in this mode
<i>STANDARD LEAK</i>	Indicates the leak detector is reading the internal calibrated leak.
<i>NO CONNECTION</i>	Indicates the connection has failed. This may be momentary or it may indicate that the: <ul style="list-style-type: none">• wireless remote's signal is obstructed.• wireless remote's is out of range.• leak detector is not configured for wireless communication.• leak detector is off.

3.2.2 Home Screen


This screen appears on power up if the wireless remote establishes a wireless link to a leak detector.

On the Home screen, a highlighted pointer appears on one of the selected functions: Linear or Log Rate, Tools and Speaker icons.

To select a function:

1. Press the **►**, **◄**, **+**, or **-** hard buttons to move the pointer around the screen and highlight an item.
2. Press the **ENTER** button to select that function.

To set the volume on/off:

1. Press the **►**, **◄**, **+**, or **-** hard buttons to select the speaker icon  on the *Home* screen.
2. Press the **ENTER** button once to set the speaker off.
3. Press the **ENTER** button again to return the speaker to on. the volume level is restored to the level it was at prior to being turned off.

The Home screen displays a summary of the following status, configuration settings, and icons (Figure 3-1):

1. Digital leak rate
2. Leak rate bar graph
3. Linear (3a) or Log scale (3b)
4. Exponent range
5. Battery power level icon
6. Tools icon
7. Speaker icon
8. RF signal strength icon
9. Leak detector status message

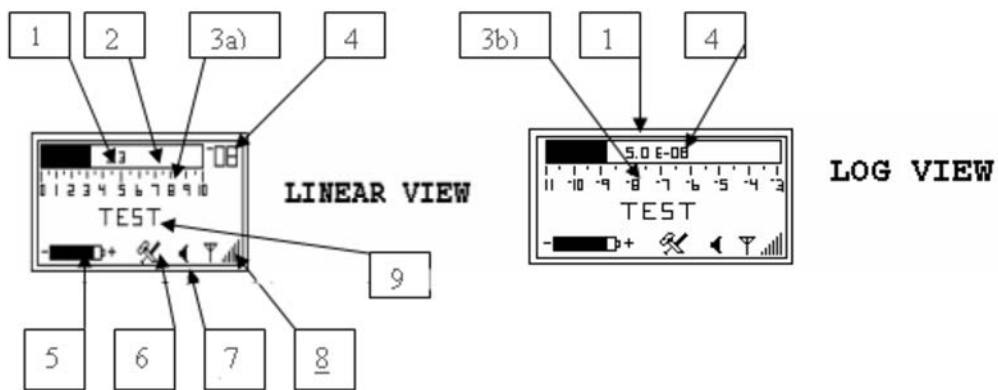


Figure 3-1. Home Screen - Linear and Log Views

1, 2, 3a, 3b and 4 - Leak Rate Display

The wireless remote displays leak rate in either LOG or Linear modes. The wireless remote automatically displays the same leak rate that the leak detector is displaying. Since the wireless remote knows the leak rate units setting for the leak detector, it displays the appropriate ranges for LOG mode.

When the helium leak rate signal is either Under or Over range, a single arrow: ► or ◄ blinks within the leak rate bar graph to indicate that condition.

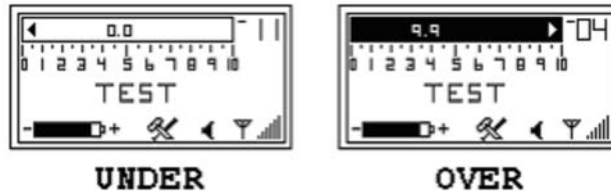




Figure 3-2. Home Screen - Under and Over Indicators

5 - Battery Power Level Icon


The battery power level indicator  appears only on the Home screen and represents the voltage level of the battery. When the battery voltage is depleted to less than ¼ of the indicator length (black filled rectangle) be prepared to change the battery cells.

6 - Tools Icon


The Tools icon  appears only on the *Home* screen and accesses the six various Set Up and Information screens. The Tools screens include:

- Speaker Volume (page 3-10)
- Backlight (page 3-11)
- Communications Setup (page 3-13)
- Contrast Setup (page 3-22)
- Sleep Timer (page 3-24)
- Version (page 3-27)

7 - Speaker Icon

The speaker icon  appears only on the Home screen and accesses the audio ON/OFF function.

8 - RF Signal Strength Icon

The RF signal strength icon  appears only on the Home screen and represents the strength of RF analogue signal. If the wireless remote is too far from the host leak detector, the RF signal will be weak or undetectable (vertical bars).

9 - Leak Detector Status

The current leak detector operating state appears below the test port pressure reading Linear or Log Bar Graph (Figure 3-3).

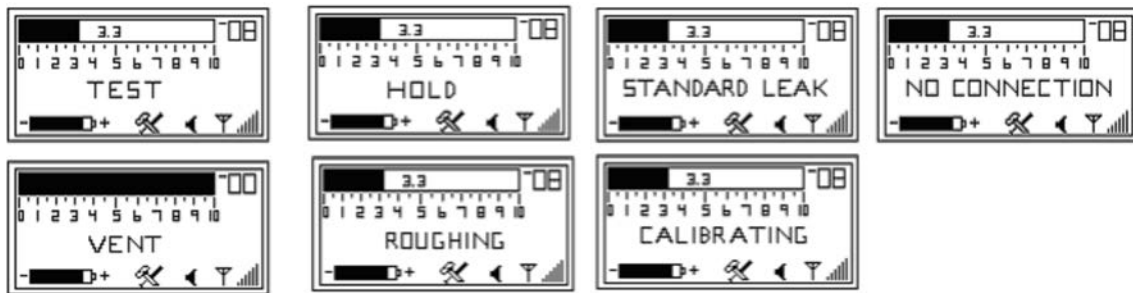


Figure 3-3. Operating State Status Messages

3.2.3 Speaker Volume Setup Screen


Use this screen to setup the desired level of the volume when the speaker is turned on.

Audio Volume

When the leak rate bar graph display is set to Linear mode:

- The audio signal increases from a low to high frequency as the leak rate increases within each decade
- The pitch cycles low to high as it passes through each decade. The audio response corresponds directly to the size of the leak.

To set the volume:

1. Press the **►**, **◄**, **+**, or **-** hard buttons to highlight the *Home* screen Tools icon  and press **Enter** and the *Speaker Volume* setup screen appears (Figure 3-4).

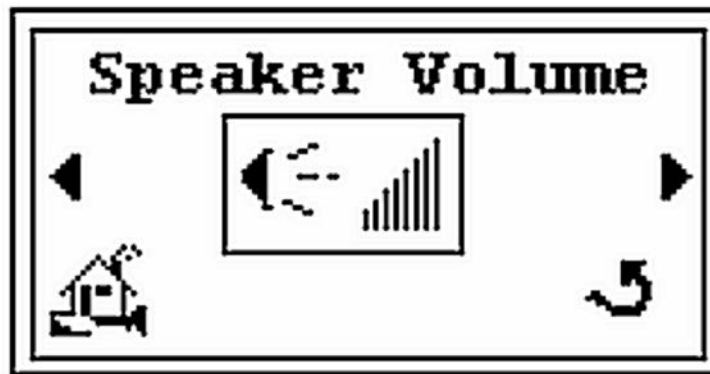


Figure 3-4. Speaker Volume Setup Screen

2. Press **Enter** and the configuration screen appears (Figure 3-5).

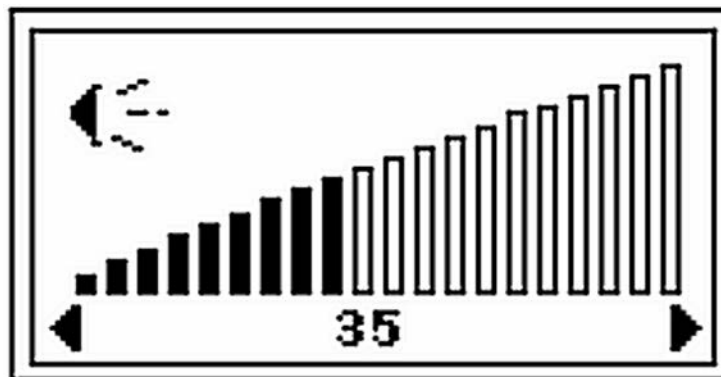






Figure 3-5. Speaker Volume Setup Configuration Screen

3. Press the **►**, **◄** buttons to set desired volume.
4. Press **Enter** and Figure 3-4 reappears.
5. Press the **►**, **◄** to highlight the Home screen icon  and press **Enter** and the Home screen reappears.

3.2.4 Backlight Screen

Use this screen to setup the desired level for the LCD backlight intensity.

To set the backlight intensity level:

1. Press the , , +, or - hard buttons to highlight the *Home* screen Tools icon  and press **Enter** and Speaker Volume setup screen appears (Figure 3-4).

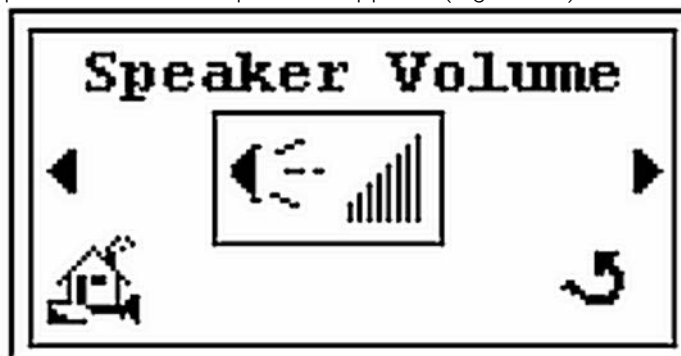


Figure 3-6. Speaker Volume Setup Screen


2. Press the  once and the Backlight screen appears (Figure 3-7. Backlight Screen).



Figure 3-7. Backlight Screen

3. Press Enter and the configuration screen appears (Figure 2-8).

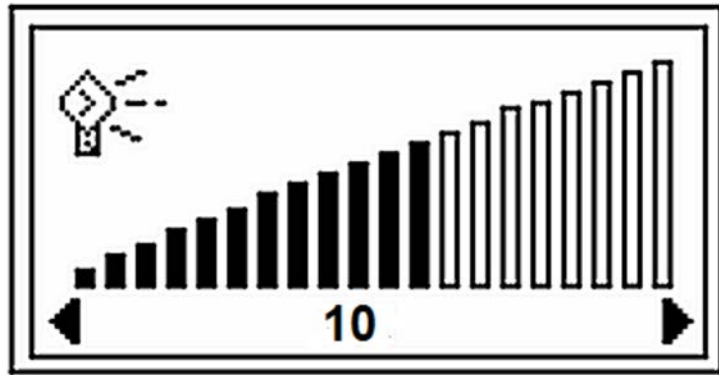



Figure 3-8. Backlight Setup Configuration Screen

4. Press the ►, ◀ buttons to set desired backlight intensity level (e.g. 0 to 30).
5. Press **Enter** and Figure 3-7 reappears.
6. Press the ►, ◀ to highlight the Home screen icon  and press **Enter** and the Home screen reappears.

3.2.5 Communication Setup Screen

Use this Setup screen (Figure 3-9) to choose the leak detector that the wireless remote is associated with, if there is more than one potential leak detector host. The first choice allows you to select a wireless remote from the known list of available leak detectors. The second choice allows you to search for all available leak detectors and present a selection list of leak detector MAC sub-addresses.



Figure 3-9. Communications Setup - Initial

Use this screen to navigate to the three sub-screens to:

- Use the *SELECT* screen to choose a leak detector from a list of leak detectors within communications range that are is not already connected. While up to 10 leak detectors MAC addresses can be configured at one time, only one connection can be active (page 3-14).
- Use the *Search* screen to scan the area for available leak detector RF channels (from 1 to 19) and then choose a leak detector from a list of leak detectors within communications range (page 3-17).
- Use the *MAC addresses* screen to verify the leak detector and wireless remote addresses (page 3-19).

3.2.5.1. Communication Setup Screen

The following appears on this screen (Figure 3-10):

- The number on the left (e.g. 8) is the leak detector channel number.
- The string on the right (e.g. 11:3C:0C) is the lower three-byte portion of the leak detector MAC address. The MAC information is used to identify potential host leak detectors, or, if more than one leak detector is set to the same channel, selecting the leak detector via MAC address.

Once the desired MAC channel is shown in the *Choose LD* screen, pressing **ENTER** causes the wireless remote to attempt to establish a session with that leak detector. The leak detector and wireless remote MAC addresses are viewed in the *MAC Address* screen (see TBD Section 2.2.5.3 "MAC Address Verification" on page 2-16).

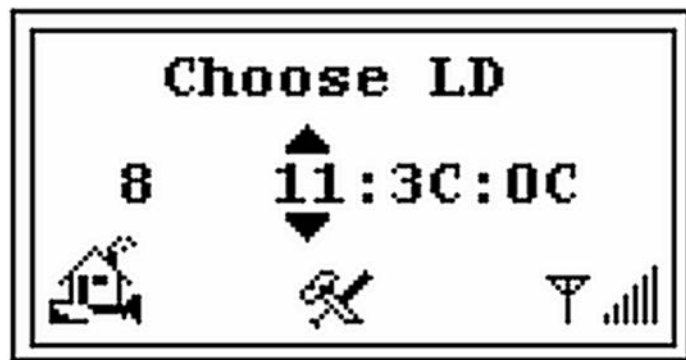


Figure 3-10. Choose LD Screen

To choose from an existing list:

1. Press the , , +, or - hard buttons to highlight the *Home* screen Tools icon and press **Enter** and the Speaker Volume screen appears (Figure 3-11).

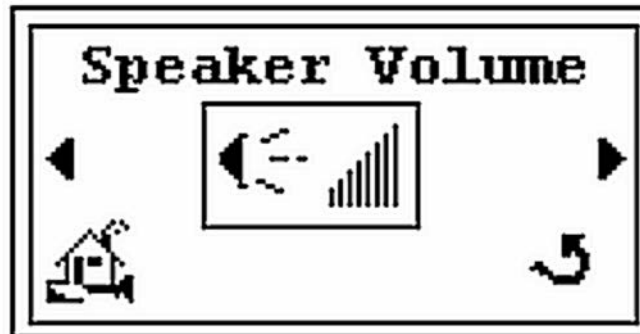


Figure 3-11. Speaker Volume Setup Screen

2. Press the , and the Backlight screen appears (Figure 3-12).



Figure 3-12. Backlight Screen

3. Press the , and the Backlight screen appears (Figure 3-13).



Figure 3-13. Setup Screen

4. Press **Enter** and the Select screen appears (Figure 3-14).

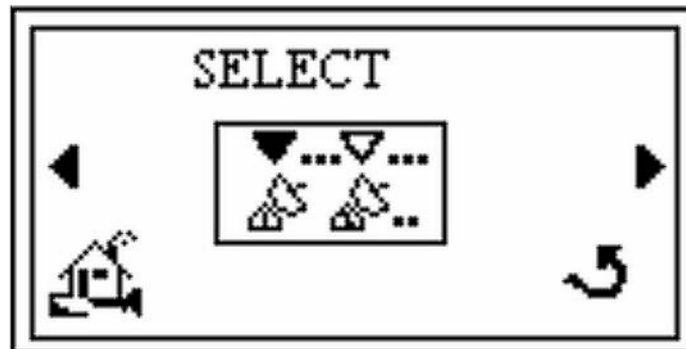


Figure 3-14. Select Screen

5. Press **Enter** and the *Choose LD* screen appears (Figure 3-15Figure 3-14).



Figure 3-15. Choose LD Screen



6. Press the ,  buttons to select the leak detector from the list of available leak detectors (e.g. 23.3C:0C).
7. Press **Enter** and the *Link* screen appears (Figure 3-16) for one to three seconds and then the *Home* screen reappears.



Figure 3-16. Link Screen

Note




*If the Choose LD process finds a leak detector that is currently in session with another remote, the leak detector won't allow a new session and Figure 3-17 appears. Press the **ENTER** button to establish the new session.*



Figure 3-17. No Available LD

3.2.5.2. Scan and Choose a Leak Detector

To search for a new list and choose a leak detector from the *Home* screen:

1. Press the ►, ◀, +, or - hard buttons to highlight the Home screen Tools icon  and press Enter and the Speaker Volume screen appears (Figure 3-18).

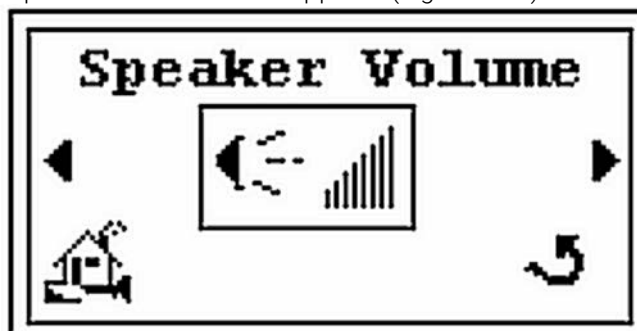


Figure 3-18. Speaker Volume Setup Screen

2. Press the ► and the Backlight screen appears (Figure 3-19).



Figure 3-19. Backlight Screen

3. Press the ► and the Setup screen appears (Figure 3-20).



Figure 3-20. Setup Screen

4. Press **Enter** and the *Select* screen appears (Figure 3-21).

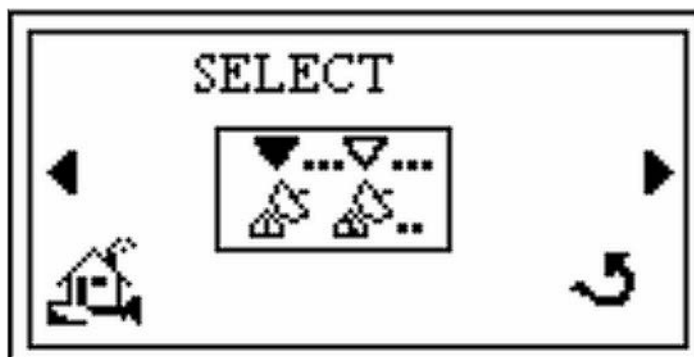


Figure 3-21. Select Screen

5. Press the  and the *Search* screen appears (Figure 3-20).

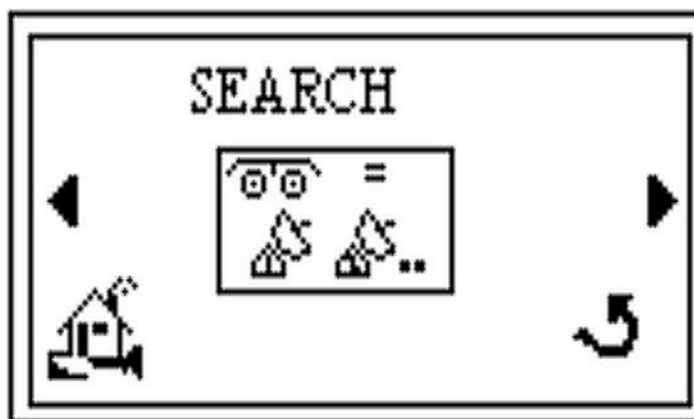


Figure 3-22. Search Screen

6. Press **Enter** and the *Searching* screen appears (Figure 3-23) followed by the *Choose LD* screen (Figure 3-24).

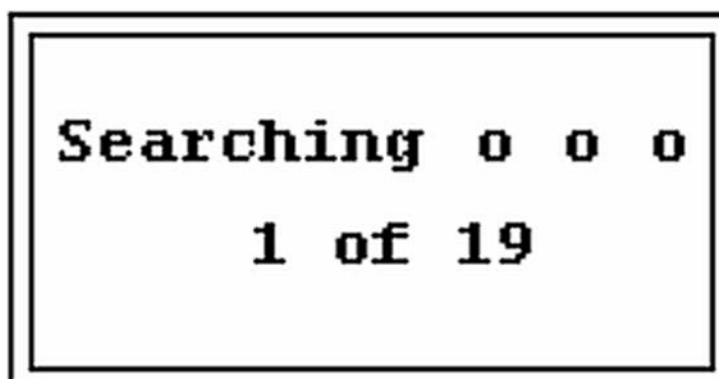


Figure 3-23. Searching Screen



Figure 3-24. Choose LD Screen

7. Press the + or - hard buttons and choose from the leak detector list (e.g. channels #8 or #12).
8. Press **Enter** and the *Link* screen appears (Figure 3-25) for one to three seconds and then the *Home* screen reappears.




Figure 3-25. Link Screen

3.2.5.3. MAC Address Verification

Use this screen to see the MAC addresses of both the leak detector and the wireless remote that is communicating with the leak detector. If the MAC address of the previous leak detector is unknown, the display leaves the leak detector MAC address blank.

To view and verify the MAC addresses from the *Home* screen:

1. Press the ►, ◀, +, or - hard buttons to highlight the *Home* screen Tools icon  and press **Enter** and the *Speaker Volume* screen appears (Figure 3-26).

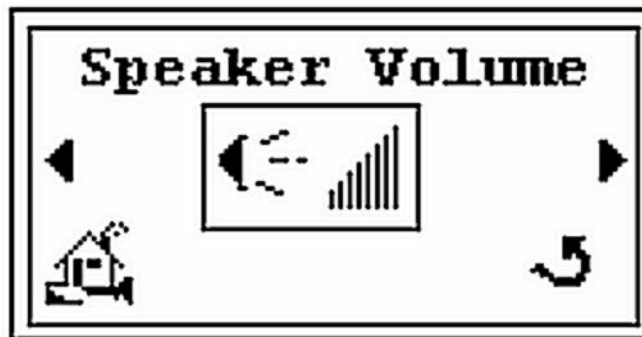


Figure 3-26. Speaker Volume Setup Screen

2. Press the  and the *Backlight* screen appears (Figure 3-27).



Figure 3-27. Backlight Screen

3. Press the  and the *Setup* screen appears (Figure 3-28).

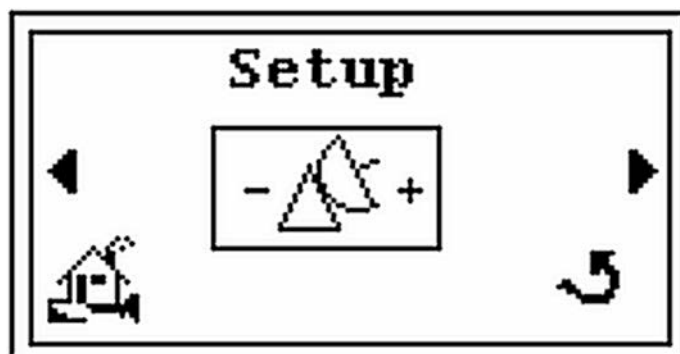


Figure 3-28. Backlight Screen

4. Press Enter and the *Select* screen appears (Figure 3-29).

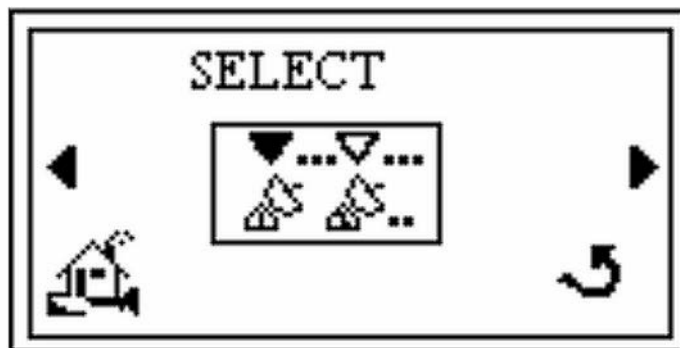



Figure 3-29. Select Screen

5. Press the  and the *Search* screen appears (Figure 3-30Figure 3-29).

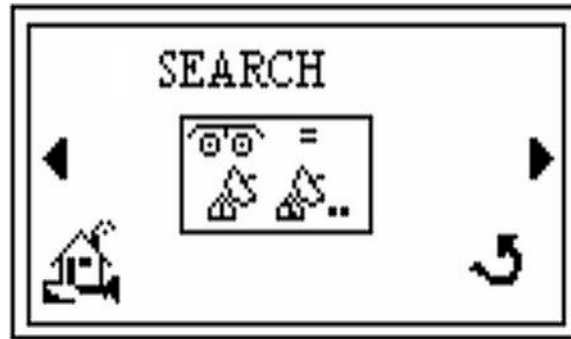



Figure 3-30. Search Screen

6. Press the  and the *MAC Addresses* screen appears (Figure 3-31Figure 3-29).

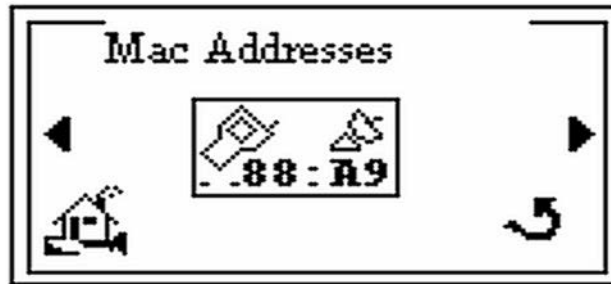


Figure 3-31. MAC Addresses Screen

7. Press **Enter** and the *Verify MAC Addresses* screen appears (Figure 3-32Figure 3-29), for example.

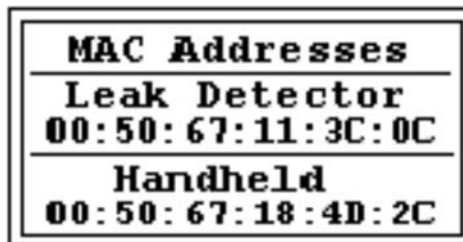






Figure 3-32. Verify MAC Addresses Screen

8. Press **Enter** and the *MAC Addresses* screen reappears (Figure 3-31Figure 3-29).
9. Press the , , **+**, or **-** hard buttons to highlight the *Home* screen icon  and press **Enter** and the *Home* screen reappears.

3.2.6 Contrast Setup Screen

Use this screen to setup the desired level for the LCD display contrast.

To set the contrast level:

1. Press the ►, ◀, +, or - hard buttons to highlight the *Home* screen Tools icon  and press **Enter** and the *Speaker Volume* screen appears (Figure 3-33).

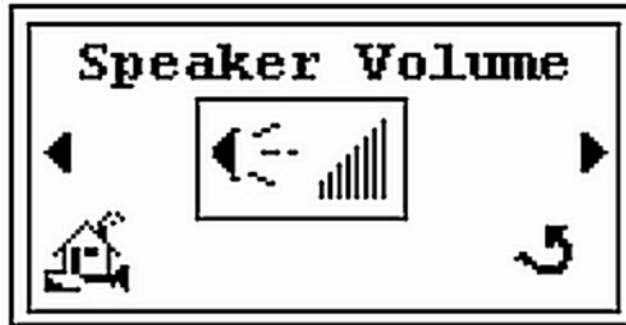


Figure 3-33. Speaker Volume Setup Screen

2. Press the ► and the *Backlight* screen appears (Figure 3-34).



Figure 3-34. Backlight Screen

3. Press the ► and the *Setup* screen appears (Figure 3-35).

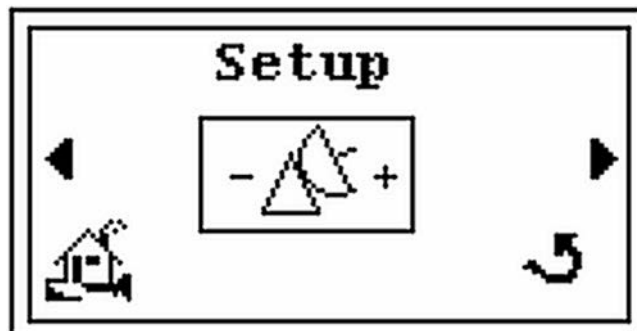



Figure 3-35. Setup Screen

4. Press the  and the *Contrast - Initial* screen appears (Figure 3-36).

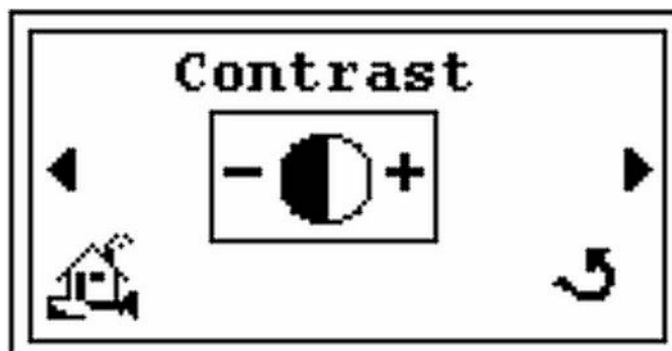


Figure 3-36. Contrast - Initial Screen

5. Press **Enter** and the *Contrast - Configuration* screen appears (Figure 3-36).

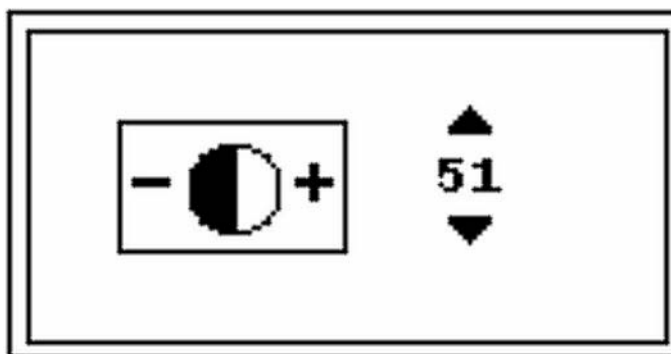






Figure 3-37. Contrast - Configuration

6. Press the + or - hard buttons to set the desired contrast level (e.g. 51).
7. Press **Enter** and the *Contrast - Initial* screen appears (Figure 3-36).
8. Press the , , +, or - hard buttons to highlight the *Home* screen icon  and press **Enter** and the *Home* screen reappears.

3.2.7 Sleep Timer Setup

Use this feature to adjust the time (in minutes) that the unit operates without user activity before shutting down. If the buttons on the keypad are not pressed for a sleep timer amount of time, the unit automatically shuts down to save battery life. The range is from 1 to 60 minutes. When set to *OFF*, the sleep timer never automatically shuts the wireless remote down.

To set the sleep timer:

1. Press the ►, ◀, +, or - hard buttons to highlight the *Home* screen Tools icon  and press **Enter** and the *Speaker Volume* screen appears (Figure 3-38).

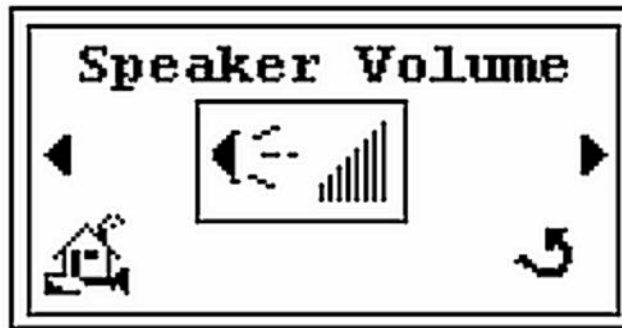


Figure 3-38. Speaker Volume Setup Screen

2. Press the ► and the *Backlight* screen appears (Figure 3-39).



Figure 3-39. Backlight Screen

3. Press the ► and the *Setup* screen appears (Figure 3-40).

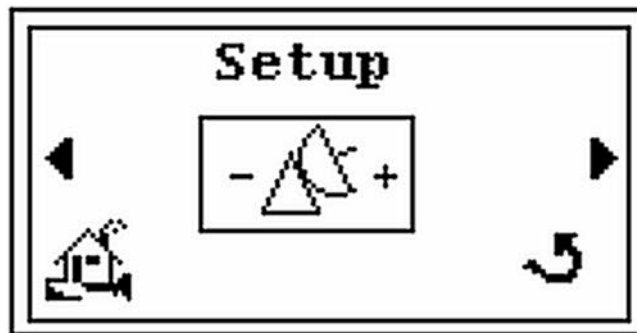


Figure 3-40. Setup Screen

4. Press the ► and the *Contrast - Initial* screen appears (Figure 3-41).

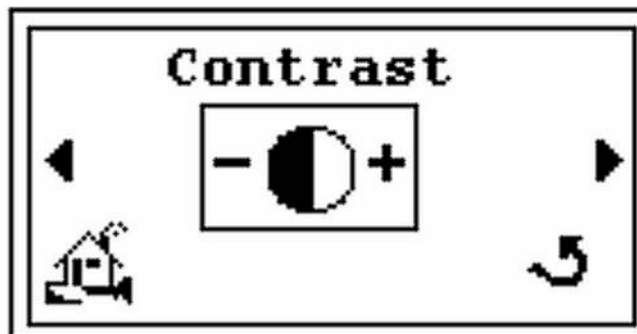


Figure 3-41. Contrast - Initial Screen

5. Press the ► and the *Sleep Timer* screen appears (Figure 3-42).



Figure 3-42. Sleep Timer Screen

6. Press **Enter** and the *Sleep Timer Configuration* screen appears (Figure 3-42).

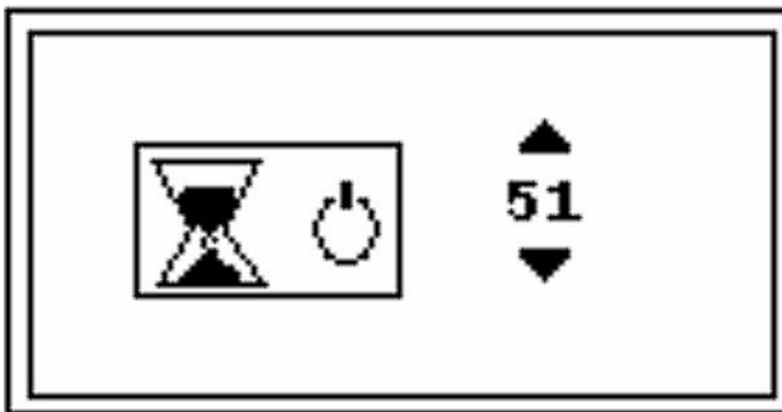




Figure 3-43. Sleep Timer Configuration Screen

7. Press the + or - hard buttons to set the desired sleep time from 1 to 60 minutes or OFF (infinite time ON).
8. Press **Enter** and the *Sleep Timer* screen reappears (Figure 3-42).
9. Press the ►, ◀, +, or - hard buttons to highlight the *Home* screen icon  and press **Enter** and the *Home* screen reappears.

3.2.8 Version Info

Use this feature to verify the versions of the Firmware and Radio module of the Wireless Remote.

To see the Version Info:

1. Press the ►, ◀, +, or - hard buttons to highlight the *Home* screen Tools icon  and press **Enter** and the *Speaker Volume* screen appears (Figure 3-44).

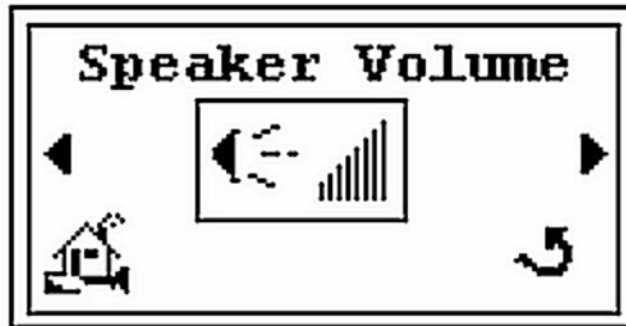


Figure 3-44. Speaker Volume Setup Screen

2. Press the ► and the *Backlight* screen appears (Figure 3-45).



Figure 3-45. Backlight Screen

3. Press the ► and the *Setup* screen appears (Figure 3-46).



Figure 3-46. Setup Screen

4. Press the ► and the *Contrast - Initial* screen appears (Figure 3-47).

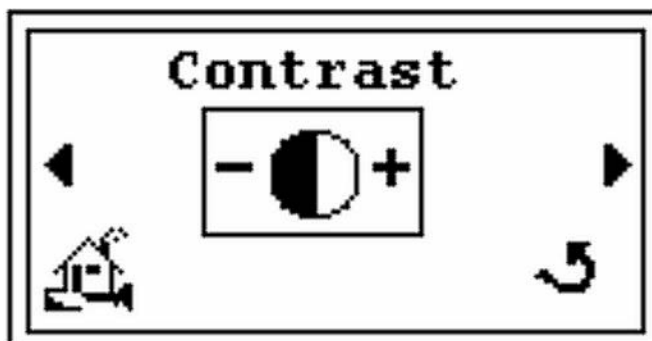


Figure 3-47. Contrast - Initial Screen

5. Press the ► and the *Sleep Timer* screen appears (Figure 3-48).



Figure 3-48. Sleep Timer Screen

6. Press the ► and the *Version - Initial* screen appears (Figure 3-49).



Figure 3-49. Version - Initial Screen

7. Press **Enter** and the *Information* screen appears (Figure 3-50).






Figure 3-50. Version - Information Screen

Note

Firmware BB03.04 and Radio 1.3 or higher.



8. Press **Enter** and the *Version - Initial* screen appears (Figure 3-49).
9. Press the , , +, or - hard buttons to highlight the *Home* screen icon  and press **Enter** and the *Home* screen reappears.

Appendix A. Specifications

A.1 Specifications

The Specifications for the unit are provided in Table A-1.

Table A-1. Wireless Remote Specifications

Specifications	Definition
Radio Type	ISM band, 2404 -2431 MHz, FHSS (US/Canada/Europe)
Channels	19 (used to create independent networks) One Wireless remote unit can operate with up to 10 helium leak detectors without cross talk or interference
Output Power	50 mW typical (conducted, no antenna)
Effective Isotropic Radiated Power	100 mW typical (EIRP with 2 dBi gain 2.4 GHz dipole antenna)
Operational Range	Up to 100 m (328'), indoors, based on 2 dBi gain antenna
Power Requirements	<ul style="list-style-type: none"> • Average power: ≤ 1.0 W • Battery Supply: <ul style="list-style-type: none"> ○ 4 (four) AA size cells ○ Type: Primary e^2 (alkaline or Lithium/Iron) or Rechargeable NiMH cells suitable for the high current pulse application ○ Battery Voltage: (4.0 to 6.0 VDC) ○ Operating Life: ≤ 12 hours (depend on the cell type and the operating schedule of the wireless unit) ○ External AC/DC Supply (Wall Plug-In or Desktop type): ○ Output: (4.0-6.0) VDC, 1 A min • Plug: <ul style="list-style-type: none"> ○ Barrel type, 2.5 mm ID x 5.5 mm OD, female ○ Barrel polarization: Internal (+), External (-) <p>See Table 1 for the recommended battery cells and AC/DC supplies types.</p>

Wireless Remote for Agilent Helium Leak Detector

Table A-1. Wireless Remote Specifications (Continued)

Specifications	Definition	
LCD display	<ul style="list-style-type: none"> Viewing Area: 27.5 mm x 55.4 mm Viewing Angle: $\geq 30^\circ$ Color: Silver/Gray Adjustable Contrast and Backlight control Display Update Rate: 1 Hz 	
Agency Identification Numbers	<ul style="list-style-type: none"> US/FCC ID: KQL-RM024 CAN/IC: 2268C-RM024 EUR/ETSI EN: CE Taiwan: CCAI13LP3400T1, CCAI13LP3330T3 	
Regulatory	<p>Safety:</p> <ul style="list-style-type: none"> Low Voltage Directive (LDV) 73/23/EEC:1973 as Amended 93/68/EEC:1993 <p>EMC:</p> <ul style="list-style-type: none"> Electromagnetic Compatibility (EMC) Directive 89/336/EEC:1989 as Amended by 93/68/EEC:1993 Radio and Telecommunication Terminal Equipment (R&TTE Directive, 1999/5/EC: 1999 <p>For particular Safety and EMC Standards see Declaration of Conformity</p>	
Internal Speaker	<ul style="list-style-type: none"> Impedance: 8.0 Ohm Frequency Response: 200-6000 Hz Sound Level: > 85 dB min @ 1.0 Ft 	
Headphones	<ul style="list-style-type: none"> Mono, 3.5 mm male plug Impedance: > 32.0 Ohm Frequency Response: 100-10000 Hz <p>Note: stereo headphones can be used with a 3.5 mm mono male to stereo female adapter, the adapter will not produce stereo sound.</p>	
Installation	Indoor use only. Altitude up to 2000 m (6,400'). Material Group III, POLLUTION DEGREE 2 according to IEC 61010-1:2001	
Temperature	Operating	+12° C to +40° C
	Storage	-20 °C (-4 °F) to +60 °C (140 °F), Relative humidity: 0% to 95%, non-condensing
Operating Humidity	Maximum relative humidity (HR) 80% for temperatures up to +31 °C decreasing linearly to 50% relative humidity at +40 °C	
Dimensions	261.3 [10.3] x 94.8 [3.7] x 62.8 [2.5] mm [inch]	
Weight	≤ 0.5 kg with batteries installed.	

This page intentionally left blank



Vacuum Products Division Instructions for returning products

Dear Customer,

Please follow these instructions whenever one of our products needs to be returned.

Complete the attached **Request for Return form** and send it to Agilent Technologies (see below), taking particular care to include the completed **Health and Safety** declaration Section. No work can be started on your unit until we receive a completed copy of this form.

After evaluating the information, Agilent Technologies will provide you with a **Return Authorization (RA)** number via email or fax, as requested. Note: Depending on the type of return, a Purchase Order may be required at the time the **Request for Return** is submitted. We will quote any necessary services (evaluation, repair, special cleaning, etc.).

Product preparation

- Remove all accessories from the core product (e.g. inlet screens, vent valves).
- Prior to shipment and if applicable for your product, drain any oils or other liquids, purge or flush all gasses, and wipe off any excess residue.
- If ordering an Advance Exchange product, please use the packaging from the Advance Exchange to return the defective product.
- Seal the product in a plastic bag, and package product carefully to avoid damage in transit. You are responsible for loss or damage in transit.
- Include a copy of the Health and Safety Declaration in the shipping documentation on the outside of the shipping box of your returning product.
- Clearly label package with RA number. Using the shipping label provided will ensure the proper address and RA number are on the package. Packages shipped to Agilent without a RA clearly written on the outside cannot be accepted and will be returned.
- Return only products for which the RA was issued.

Shipping

- Ship to the location specified on the printable label, which will be sent, along with the RA number, as soon as we have received all of the required information. Customer is responsible for freight charges on returning product.
- Return shipments must comply with all applicable Shipping Regulations (IATA, DOT, ADR, etc.) and carrier requirements.

RETURN THE COMPLETED **REQUEST FOR RETURN** FORM TO YOUR NEAREST LOCATION:

Europe
Fax: 00 39 011 9979 330
Fax Free: 00 800 345 345 00
Toll Free: 00 800 234 234 00
vpt-customer@agilent.com

North America
Fax: 1 781 860 9252
-- --
Toll Free: 800 882 7426
vpl-ra@agilent.com

Pacific Rim
please visit our website
for individual
office information
<http://www.agilent.com>

TERMS AND CONDITIONS

Please read the terms and conditions below as they apply to all returns and are in addition to the Agilent Technologies Vacuum Product Division – Products and Services Terms of Sale.

- Unless otherwise pre-negotiated, customer is responsible for the freight charges for the returning product. Return shipments must comply with all applicable Shipping Regulations (IATA, DOT, etc.) and carrier requirements.
- Agilent Technologies is not responsible for returning customer provided packaging or containers.
- Customers receiving an Advance Exchange product agree to return the defective, rebuildable part to Agilent Technologies within 15 business days. Failure to do so, or returning a non-rebuildable part (crashed), will result in an invoice for the nonreturned/ non-rebuildable part.
- Returns for credit toward the purchase of new or refurbished Products are subject to prior Agilent approval and may incur a restocking fee. Please reference the original purchase order number.
- Units returned for evaluation will be evaluated, and a quote for repair will be issued. If you choose to have the unit repaired, the cost of the evaluation will be deducted from the final repair pricing. A Purchase Order for the final repair price should be
- issued within 3 weeks of quotation date. Units without a Purchase Order for repair will be returned to the customer, and the evaluation fee will be invoiced.
- Products returned that have not been drained from oil will be disposed.
- A Special Cleaning fee will apply to all exposed products
- If requesting a calibration service, units must be functionally capable of being calibrated.

Customer Information		
Company:		Contact Name:
Address:		Tel: Fax:
Email:		

Equipment			
Product Description:		Agilent Part No.:	Agilent Serial No.:
			Original Purchasing Reference:
Failure Description:		Type of Process (for which the equipment was used)	

Type of Return	
<input type="checkbox"/> Non-billable <input type="checkbox"/> Billable → New PO # (Hard copy must be submitted with this form): _____ <input type="checkbox"/> Exchange <input type="checkbox"/> Repair <input type="checkbox"/> Upgrade <input type="checkbox"/> Consignment/Demo <input type="checkbox"/> Calibration <input type="checkbox"/> Evaluation <input type="checkbox"/> Return for Credit	

Health and safety		Substances (please refer to MSDS forms)			
The product has been exposed to the following substances: (by selecting 'YES' you MUST complete the table to the right)		* Agilent will not accept delivery of any product that is exposed to radioactive, biological, explosive substances or dioxins, PCB's without written evidence of decontamination.			
		Trade Name	Chemical Name	Chemical Symbol	CAS Number
Toxic	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Harmful	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Corrosive	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Reactive	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Flammable	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Explosive (*)	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Radioactive (*)	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Biological (*)	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Oxidizing	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Sensitive	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Other Dangerous Substance	<input type="checkbox"/> YES <input type="checkbox"/> NO				
Goods Preparation					
If you have replied YES to one of the above questions. Has the product been purged? <input type="checkbox"/> YES <input type="checkbox"/> NO If yes, which cleaning agent/method:					
Has the product been drained from oil? <input type="checkbox"/> YES <input type="checkbox"/> NO <input type="checkbox"/> NOT APPLICABLE I confirm to place this declaration on the outside of the shipping box.					

I declare that the above information is true and complete to the best of my knowledge and belief. I understand and agree to the terms and conditions on page 2 of this document.	
Name:	Authorized Signature:
Position:	
Date:	
NOTE: If a product is received at Agilent which is contaminated with a toxic or hazardous material that was not disclosed, the customer will be held responsible for all costs incurred to ensure the safe handling of the product, and is liable for any harm or injury to Agilent employees as well as to any third party occurring as a result of exposure to toxic or hazardous materials present in the product.	

Agilent Vacuum Products Division/Sales and Service Offices

United States

Agilent Technologies
121 Hartwell Avenue
Lexington, MA 02421 - USA
Tel. +1 781 861 7200
Fax. +1 781 860 5437
Toll-Free: +1 800 882 7426
vpl-customerarcare@agilent.com

Belgium

Agilent Technologies Belgium S.A./N.V.
Customer Contact Center
Pegasus Park
De Kleetlaan 12A bus 12
B-1831 Diegem
Tel. +32 2 404 92 22
Fax. +32 2 626 46 30
customerarcare_belgium@agilent.com

Brazil

Agilent Technologies Brasil
Avenida Marcos Penteado de Ulhoa
Rodrigues, 939 - 6° andar
Castelo Branco Office Park
Torre Jacarandá - Tamboré
Barueri, São Paulo CEP: 06460-040
Toll-Free: +0800 728 1405

China

Agilent Technologies (China) Co. Ltd
No.3, Wang Jing Bei Lu, Chao Yang District
Beijing, 100102, China
Tel. +86 (0)10 64397888
Fax. +86 (0)10 64392765
Toll free: 800 820 6778 (Phone)
Toll free: 400 820 6778 (Cell Phone)
vacuum.cnmarketing@agilent.com
vpc-customerservice@agilent.com

France

Agilent Technologies
Parc Technopolis - Z.A. de Courtaboeuf
3, avenue du Canada - CS 90263
91978 Les Ulis cedex, France
Tel. +33 (0) 1 64 53 61 15
Fax. +33 (0) 1 64 53 50 01
vpf.sales@agilent.com

Germany and Austria

Agilent Technologies
Sales & Services GmbH & Co. KG
Lyoner Str. 20
60 528 Frankfurt am Main
GERMANY
Ph. +49 69 6773 43 2230
Fax. +49 69 6773 43 2250

India (Sales)

Agilent Technologies India Pvt. Ltd.
Unit Nos 110-116, & Part of 101 & 109
First Floor, Splendor Forum,
Plot No. -3, District Centre, Jasola
New Delhi-110025
Tel. +91 11 4623 7100
Fax. +91 4623 7105

India (Service)

Agilent Technologies India Pvt. Ltd.
C-Block, RMZ Centennial Plot Number -8A,
8B, 8C, 8D,
Doddanakundi Industrial Area, ITPL Road,
Mahadevapura Post, Bangalore- 560048
Tel. +91 80 40614000
Fax. +91 80 40148991

Italy

Agilent Technologies Italia S.p.A.
Via F.lli Varian, 54
10040 Leini, (Torino) - Italy
Tel. +39 011 9979 111
Fax. +39 011 9979 350
Toll free: 00800 234 234 00
vpt-customerservice@agilent.com

Japan

Agilent Technologies Japan, Ltd.
9-1 Takakura-cho Hachioji-city,
Tokyo, Japan
Tel. +81- 3-5232-1253
Fax. +81-120-565-154
Toll-Free: +81-120-477-111
jp-vvt-sales.pdl-ext@agilent.com

Korea

Agilent Technologies Korea, Ltd.
Ilshin Building 4F
Yongsan-gu Hannam-daero
Seoul Korea 04418
Tel. +82 (0)2 2194 9449
Fax. +82 (0)2 2194 9853
Toll free: 080 222 2452
vpc-customerservice@agilent.com

Mexico

Agilent Technologies
Concepcion Beistegui No. 109
Col Del Valle
C.P. 03100 - Mexico, D.F.
Tel. +52 5 523 9465
Fax. +52 5 523 9472

Netherlands

Agilent Technologies Netherlands B.V.
Customer Contact Center
Laan van Langerhuize 1, toren A-8
1186 DS Amstelveen
Tel. +31 020 547 2600
Fax. +31 020 654 5748
customerarcare_netherlands@agilent.com

Singapore

Agilent Technologies Singapore Pte. Ltd,
1 Yishun Avenue 7,
Singapore 768923
Tel. (65) 6215 8045
Fax. (65) 6754 0574
Toll-Free: 1 800 2762622
vps-customerservice@agilent.com

Southeast Asia

Agilent Technologies Sales Sdn Bhd
Unit 201, Level 2 uptown 2,
2 Jalan SS21/37, Damansara Uptown
47400 Petaling Jaya, Selangor, Malaysia
Tel. +603 7712 6181
Fax. +603 7727 1239
Toll-Free: +1 800 880 805
vps-customerservice@agilent.com

Taiwan

Agilent Technologies Taiwan Limited
No. 20 Gao-shuang Road, Ping-zhen Dis
Tao-Yuan City
32450 Taiwan, R.O.C.
Tel. +8863 3 4959004
Toll-Free: 0800 018 768
vpw-customerservice@agilent.com

UK and Ireland

Agilent Technologies LDA UK Limited
Lakeside Cheadle Royal Business Park
Cheadle, Cheshire SK8 3GR,
United Kingdom
Tel. +44 01865291570
Fax. +44 01865291571
Toll-Free: 00 800 234 234 00
Toll-Free fax.: 00 800 345 345 00
vpt-customerarcare@agilent.com

Other Countries

Agilent Technologies Italia S.p.A.
Via F.lli Varian, 54
10040 Leini, (Torino) - Italy
Tel. +39 011 997 9111
Fax. +39 011 997 9350
Toll-Free: 00 800 234 234 00
vpt-customerarcare@agilent.com

Customer Support & Service

NORTH AMERICA:
Toll Free: 800 882 7426
vpl-ra@agilent.com
Lexington-service@agilent.com

EUROPE:

Toll-Free: 00 800 234 234 00
vpt-customerarcare@agilent.com

PACIFIC RIM:

please visit our website for individual office
information
<http://www.agilent.com/chem/vacuum>

Worldwide Web Site, Catalog and Order
Online:
www.agilent.com/chem/vacuum

Representatives in most countries