



MKS Types 41B, 42B, 51B, and 52B Pressure/Vacuum Switches

Instruction Manual

2 Technology Drive
Andover, MA, USA 01810

Main: 978.645.5500
USA: 800.227.8766
www.mksinst.com

1034125-001
Rev. B, 04/13
Instruction Manual



WARRANTY

Type 41B, 42B, 51B, and 52B Equipment

MKS Instruments, Inc. (MKS) warrants that for two years from the date of shipment the equipment described above (the "equipment") manufactured by MKS shall be free from defects in materials and workmanship and will correctly perform all date-related operations, including without limitation accepting data entry, sequencing, sorting, comparing, and reporting, regardless of the date the operation is performed or the date involved in the operation, provided that, if the equipment exchanges data or is otherwise used with equipment, software, or other products of others, such products of others themselves correctly perform all date-related operations and store and transmit dates and date-related data in a format compatible with MKS equipment. THIS WARRANTY IS MKS' SOLE WARRANTY CONCERNING DATE-RELATED OPERATIONS.

For the period commencing with the date of shipment of this equipment and ending two years later, MKS will, at its option, either repair or replace any part which is defective in materials or workmanship or with respect to the date-related operations warranty without charge to the purchaser. The foregoing shall constitute the exclusive and sole remedy of the purchaser for any breach by MKS of this warranty.

The purchaser, before returning any equipment covered by this warranty, which is asserted to be defective by the purchaser, shall make specific written arrangements with respect to the responsibility for shipping the equipment and handling any other incidental charges with the MKS sales representative or distributor from which the equipment was purchased or, in the case of a direct purchase from MKS, with the MKS home office in Andover, Massachusetts, USA.

This warranty does not apply to any equipment which has not been installed and used in accordance with the specifications recommended by MKS for the proper and normal use of the equipment. MKS shall not be liable under any circumstances for indirect, special, consequential, or incidental damages in connection with, or arising out of, the sale, performance, or use of the equipment covered by this warranty.

MKS recommends that all MKS pressure and flow products be calibrated periodically (typically every 6 to 12 months) to ensure accurate readings. When a product is returned to MKS for this periodic re-calibration it is considered normal preventative maintenance not covered by any warranty.

THIS WARRANTY IS IN LIEU OF ALL OTHER RELEVANT WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, AND ANY WARRANTY AGAINST INFRINGEMENT OF ANY PATENT.


04/13

1034125-001


SPECIAL NOTICE

This warranty is void if the product is installed using single or double metal ferrule compression type vacuum fittings, shown below. These fittings are commonly tightened incorrectly, causing damage to the pressure sensor.

Single Ferrule



Double Ferrule



MKS Types 41B, 42B, 51B, and 52B Vacuum/Pressure Switches

Copyright © 2013 by MKS Instruments, Inc.

All rights reserved. No part of this work may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system, except as may be expressly permitted in writing by MKS Instruments, Inc.

Printed in the United States of America

Baratron[®] is a registered trademark of MKS Instruments, Inc., Andover, MA, USA.

Swagelok[®], VCR[®], and VCO[®] are registered trademarks of Swagelok Co., Solon, OH, USA.

Inconel[®] and Incoloy[®] are registered trademarks of Inco Alloys International, Inc., Huntington, WV, USA.

Some Baratron[®] products may not be exported to many end user countries without both US and local government export licenses under ECCN 2B230.

Table of Contents

Safety Information	1
Symbols Used in This Instruction Manual.....	1
Symbols Found on the Unit	2
Safety Procedures and Precautions	3
Sicherheitshinweise für den Druckmeßumformer	5
In dieser Betriebsanleitung vorkommende Symbole	5
Erklärung der am Gerät angebrachten Symbole	6
Sicherheitsvorschriften und Vorsichtsmaßnahmen.....	7
Informations relatives à la sécurité pour le transducteur de pression	9
Symboles utilisés dans ce manuel d'utilisation	9
Symboles apparaissant sur l'unité	10
Mesures de sécurité et précautions	11
Medidas de seguridad del transductor de presión	13
Símbolos usados en este manual de instrucciones	13
Símbolos hallados en la unidad.....	14
Procedimientos y precauciones de seguridad.....	15
Chapter One: General Information	17
Introduction.....	17
How This Manual is Organized	18
Customer Support	18
Chapter Two: Installation	19
How To Unpack the Type 41B/42B/51B/52B Unit.....	19
Unpacking Checklist.....	19
Product Location and Requirements.....	20
Setup	20
Dimensions of the Single-Ended Units.....	20
Dimensions of the Flow-Through Units	22
Mounting.....	22
Electrical Information	23

D-Subminiature Connector	23
Flying Leads Connector	24
Trip Point Relay	24
Interface Cables	25
Connecting a Pressure Switch with a D-subminiature Connector	25
Connecting a Pressure Switch with a Flying Leads Cable.....	25
Generic Shielded Cable Description.....	26
Special Consideration for the Ground Connection	27
Chapter Three: Overview.....	29
General Information.....	29
Labels.....	29
Serial Number Label.....	29
Trip Point Label.....	30
Sensor.....	30
Trip Point Value.....	31
How Full Scale Range Affects Trip Point Accuracy	31
Method of Operation.....	32
Units Set to Energize <i>Above</i> the Trip Point Pressure.....	32
Units Set to Energize <i>Below</i> the Trip Point Pressure.....	33
Hysteresis.....	33
How A Gauge Switch Works.....	34
Reverse Calibration Switch.....	34
Atmospheric Switch.....	34
Chapter Four: Operation	35
How To Use the Pressure Switch.....	35
Chapter Five: Maintenance	37
General.....	37
Repair.....	37
Appendix A: Product Specifications.....	39
Performance Specifications	39
Physical Specifications	40
Electrical Specifications.....	41

Environmental Specifications	41
Appendix B: Model Code Explanation.....	43
Model Code.....	43
Index	49

List of Figures and Tables

Figures

Figure 1: Dimensions of High Pressure Single-Ended Units.....	20
Figure 2: Dimensions of Low Pressure Single-Ended Units	21
Figure 3: Dimensions of Flow-Through Units.....	22
Figure 4: Components of a Cable to Connect to a D-subminiature Connector.....	27
Figure 5: Expanded View of the Cable	27
Figure 6: Flying Leads Connector	28
Figure 7: Serial Number Label	29
Figure 8: Trip Point Label.....	30
Figure 9: Trip Point Set to Energize Above the Trip Point Pressure	33
Figure 10: Trip Point Set to Energize Below the Trip Point Pressure	33


Tables


Table 1: Definition of Symbols Found on the Unit	2
Tabelle 2: Bedeutung der am Gerät angebrachten Symbole.....	6
Tableau 3: Définition des symboles apparaissant sur l'unité	10
Tabla 4: Definición de los símbolos hallados en la unidad.....	14
Table 2: Description of the 41B/42B/51B/52B Vacuum/Pressure Switch	17
Table 3: Configuration Options of the Single-Ended and Flow-Through Versions	17
Table 4: Pinout of the 9-Pin D-subminiature Connector	23
Table 5: Pinout of the Flying Leads Connector	24
Table 6: Trip Point Signals	32


Safety Information

Symbols Used in This Instruction Manual

Definitions of WARNING, CAUTION, and NOTE messages used throughout the manual.

Warning  The **WARNING** sign denotes a hazard. It calls attention to a procedure, practice, condition, or the like, which, if not correctly performed or adhered to, could result in injury to personnel.

Caution  The **CAUTION** sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of all or part of the product.

Note  The **NOTE** sign denotes important information. It calls attention to a procedure, practice, condition, or the like, which is essential to highlight.

Symbols Found on the Unit

The following table describes symbols that may be found on the unit.















Definition of Symbols Found on the Unit			
			
On (Supply) IEC 417, No.5007	Off (Supply) IEC 417, No.5008	Earth (ground) IEC 417, No.5017	Protective earth (ground) IEC 417, No.5019
			
Frame or chassis IEC 417, No.5020	Equipotentiality IEC 417, No.5021	Direct current IEC 417, No.5031	Alternating current IEC 417, No.5032
			
Both direct and alternating current IEC 417, No.5033-a	Class II equipment IEC 417, No.5172-a	Three phase alternating current IEC 617-2 No.020206	
			
Caution, refer to accompanying documents ISO 3864, No.B.3.1	Caution, risk of electric shock ISO 3864, No.B.3.6	Caution, hot surface IEC 417, No.5041	

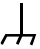Table 1: Definition of Symbols Found on the Unit

Safety Procedures and Precautions

The following general safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of intended use of the instrument and may impair the protection provided by the equipment. MKS Instruments, Inc. assumes no liability for the customer's failure to comply with these requirements.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT

Do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to an MKS Calibration and Service Center for service and repair to ensure that all safety features are maintained.

SERVICE BY QUALIFIED PERSONNEL ONLY

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified service personnel only.

USE CAUTION WHEN OPERATING WITH HAZARDOUS MATERIALS

If hazardous materials are used, users must take responsibility to observe the proper safety precautions, completely purge the instrument when necessary, and ensure that the material used is compatible with sealing materials.

DO NOT OPERATE IN EXPLOSIVE ATMOSPHERES

To avoid explosion, do not operate this product in an explosive atmosphere unless it has been specifically certified for such operation.

USE PROPER FITTINGS AND TIGHTENING PROCEDURES

All instrument fittings must be consistent with instrument specifications, and compatible with the intended use of the instrument. Assemble and tighten fittings according to manufacturer's directions.

CHECK FOR LEAK-TIGHT FITTINGS

Before proceeding to instrument setup, carefully check all plumbing connections to the instrument to ensure leak-tight installation.

OPERATE AT SAFE INLET PRESSURES

This unit should never be operated at pressures higher than the rated maximum pressure (refer to the product specifications for the maximum allowable pressure).

INSTALL A SUITABLE BURST DISC

When operating from a pressurized gas source, a suitable burst disc should be installed in the vacuum system to prevent system explosion should the system pressure rise.

KEEP THE UNIT FREE OF CONTAMINANTS

Do not allow contaminants of any kind to enter the unit before or during use. Contamination such as dust, dirt, lint, glass chips, and metal chips may permanently damage the unit.

Sicherheitshinweise für den Druckmeßumformer

In dieser Betriebsanleitung vorkommende Symbole

Bedeutung der mit WARNUNG!, VORSICHT! und HINWEIS gekennzeichneten Absätze in dieser Betriebsanleitung.

Warnung!



Das Symbol **WARNUNG!** weist auf eine Gefahr für das Bedienpersonal hin. Es macht auf einen Arbeitsablauf, eine Arbeitsweise, einen Zustand oder eine sonstige Gegebenheit aufmerksam, deren unsachgemäße Ausführung bzw. ungenügende Berücksichtigung zu Verletzungen führen kann.

Vorsicht!



Das Symbol **VORSICHT!** weist auf eine Gefahr für das Gerät hin. Es macht auf einen Bedienungsablauf, eine Arbeitsweise oder eine sonstige Gegebenheit aufmerksam, deren unsachgemäße Ausführung bzw. ungenügende Berücksichtigung zu einer Beschädigung oder Zerstörung des Gerätes oder von Teilen des Gerätes führen kann.

Hinweis



Das Symbol **HINWEIS** macht auf wichtige Informationen bezüglich eines Arbeitsablaufs, einer Arbeitsweise, eines Zustands oder einer sonstige Gegebenheit aufmerksam.

Erklärung der am Gerät angebrachten Symbole

Nachstehender Tabelle sind die Bedeutungen der Symbole zu entnehmen, die am Gerät angebracht sein können.















Bedeutung der am Gerät angebrachten Symbole			
			
Ein (Energie) IEC 41B7, No.5007	Aus (Energie) IEC 41B7, No.5008	Erdanschluß IEC 41B7, No.5017	Schutzleiteranschluß IEC 41B7, No.5019
			
Masseanschluß IEC 41B7, No.5020	Aquipotential- anschluß IEC 41B7, No.5021	Gleichstrom IEC 41B7, No.5031	Wechselstrom IEC 41B7, No.5032
			
Gleich- oder Wechselstrom IEC 41B7, No.5033-a	Durchgängige doppelte oder verstärkte Isolierung IEC 41B7, No.51B72- a	Dreileiter- Wechselstrom (Drehstrom) IEC 617-2, No.020206	
			
Warnung vor einer Gefahrenstelle (Achtung, Dokumen- tation beachten) ISO 3864, No.B.3.1	Warnung vor gefährlicher elektrischer Spannung ISO 3864, No.B.3.6	Höhere Temperatur an leicht zugänglichen Teilen IEC 41B7, No.5041B	

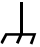Tabelle 2: Bedeutung der am Gerät angebrachten Symbole

Sicherheitsvorschriften und Vorsichtsmaßnahmen

Folgende allgemeine Sicherheitsvorschriften sind während allen Betriebsphasen dieses Gerätes zu befolgen. Eine Mißachtung der Sicherheitsvorschriften und sonstiger Warnhinweise in dieser Betriebsanleitung verletzt die für dieses Gerät und seine Bedienung geltenden Sicherheitsstandards, und kann die Schutzvorrichtungen an diesem Gerät wirkungslos machen. MKS Instruments, Inc. haftet nicht für Mißachtung dieser Sicherheitsvorschriften seitens des Kunden.

Niemals Teile austauschen oder Änderungen am Gerät vornehmen!

Ersetzen Sie keine Teile mit baugleichen oder ähnlichen Teilen, und nehmen Sie keine eigenmächtigen Änderungen am Gerät vor. Schicken Sie das Gerät zwecks Wartung und Reparatur an den MKS-Kalibrierungs- und -Kundendienst ein. Nur so wird sichergestellt, daß alle Schutzvorrichtungen voll funktionsfähig bleiben.

Wartung nur durch qualifizierte Fachleute!

Das Auswechseln von Komponenten und das Vornehmen von internen Einstellungen darf nur von qualifizierten Fachleuten durchgeführt werden, niemals vom Bedienpersonal.

Vorsicht beim Arbeiten mit gefährlichen Stoffen!

Wenn gefährliche Stoffe verwendet werden, muß der Bediener die entsprechenden Sicherheitsvorschriften genauestens einhalten, das Gerät, falls erforderlich, vollständig spülen, sowie sicherstellen, daß der Gefahrstoff die am Gerät verwendeten Materialien, insbesondere Dichtungen, nicht angreift.

Spülen des Gerätes mit Gas!

Nach dem Installieren oder vor dem Ausbau aus einem System muß das Gerät unter Einsatz eines reinen Trockengases vollständig gespült werden, um alle Rückstände des Vorgängermediums zu entfernen.

Anweisungen zum Spülen des Gerätes

Das Gerät darf nur unter einer Ablufthaube gespült werden. Schutzhandschuhe sind zu tragen.

Gerät nicht zusammen mit explosiven Stoffen, Gasen oder Dämpfen benutzen!

Um der Gefahr einer Explosion vorzubeugen, darf dieses Gerät niemals zusammen mit (oder in der Nähe von) explosiven Stoffen aller Art eingesetzt werden, sofern es nicht ausdrücklich für diesen Zweck zugelassen ist.

Anweisungen zum Installieren der Armaturen!

Alle Anschlußstücke und Armaturenteile müssen mit der Gerätespezifikation übereinstimmen, und mit dem geplanten Einsatz des Gerätes kompatibel sein. Der Einbau, insbesondere das Anziehen und Abdichten, muß gemäß den Anweisungen des Herstellers vorgenommen werden.

Verbindungen auf Undichtigkeiten prüfen!

Überprüfen Sie sorgfältig alle Verbindungen der Vakuumkomponenten auf undichte Stellen.

Gerät nur unter zulässigen Anschlußdrücken betreiben!

Betreiben Sie das Gerät niemals unter Drücken, die den maximal zulässigen Druck (siehe Produktspezifikationen) übersteigen.

Geeignete Berstscheibe installieren!

Wenn mit einer unter Druck stehenden Gasquelle gearbeitet wird, sollte eine geeignete Berstscheibe in das Vakuumsystem installiert werden, um eine Explosionsgefahr aufgrund von steigendem Systemdruck zu vermeiden.

Verunreinigungen im Gerät vermeiden!

Stellen Sie sicher, daß Verunreinigungen jeglicher Art weder vor dem Einsatz noch während des Betriebs in das Instrumenteninnere gelangen können. Staub- und Schmutzpartikel, Glassplitter oder Metallspäne können das Gerät dauerhaft beschädigen oder Prozeß und Meßwerte verfälschen.

Bei Geräten mit Temperaturkontrolle korrekte Anwärmzeit einhalten!

Temperaturkontrollierte Geräte arbeiten nur dann gemäß ihrer Spezifikation, wenn genügend Zeit zum Erreichen und Stabilisieren der Betriebstemperatur eingeräumt wird. Kalibrierungen und Nulleinstellungen sollten daher nur nach Abschluß des Anwärmvorgangs durchgeführt werden.

Informations relatives à la sécurité pour le transducteur de pression

Symboles utilisés dans ce manuel d'utilisation

Définitions des indications AVERTISSEMENT, ATTENTION, et REMARQUE utilisées dans ce manuel.

Avertissement



L'indication **AVERTISSEMENT** signale un danger pour le personnel. Elle attire l'attention sur une procédure, une pratique, une condition, ou toute autre situation présentant un risque d'accident pour le personnel, en cas d'exécution incorrecte ou de non respect des consignes.

Attention



L'indication **ATTENTION** signale un danger pour l'appareil. Elle attire l'attention sur une procédure d'exploitation, une pratique, ou toute autre situation, présentant un risque d'endommagement ou de destruction d'une partie ou de la totalité de l'appareil, en cas d'exécution incorrecte ou de non respect des consignes.

Remarque



L'indication **REMARQUE** signale une information importante. Elle attire l'attention sur une procédure, une pratique, une condition, ou toute autre situation, présentant un intérêt particulier.

Symboles apparaissant sur l'unité

Le tableau suivant décrit les symboles pouvant apparaître sur l'unité.















Définition des symboles apparaissant sur l'unité			
			
Marche (sous tension) IEC 41B7, No.5007	Arrêt (hors tension) IEC 41B7, No.5008	Terre (masse) IEC 41B7, No.5017	Terre de protection (masse) IEC 41B7, No.5019
			
Masse IEC 41B7, No.5020	Equipotentialité IEC 41B7, No.5021	Courant continu IEC 41B7, No.5031	Courant alternatif IEC 41B7, No.5032
			
Courant continu et alternatif IEC 41B7, No.5033-a	Matériel de classe II IEC 41B7, No.51B72- a	Courant alternatif triphase IEC 617-2, No.020206	
			
Attention : se reporter à la documentation ISO 3864, No.B.3.1	Attention : risque de choc électrique ISO 3864, No.B.3.6	Attention : surface brûlante IEC 41B7, No.5041B	

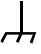Tableau 3: Définition des symboles apparaissant sur l'unité

Mesures de sécurité et précautions

Prendre les précautions générales de sécurité suivantes pendant toutes les phases d'exploitation de cet appareil. Le non respect des ces précautions ou des avertissements contenus dans ce manuel constitue une violation des normes de sécurité relatives à l'utilisation de l'appareil et peut diminuer la protection fournie par l'appareil. MKS Instruments, Inc. n'assume aucune responsabilité concernant le non respect des consignes par les clients.

PAS DE SUBSTITUTION DE PIÈCES OU DE MODIFICATION DE L'APPAREIL

Ne pas installer des pièces de substitution ou effectuer des modifications non autorisées sur l'appareil. Renvoyer l'appareil à un centre de service et de calibrage MKS pour tout dépannage ou réparation afin de garantir le l'intégrité des dispositifs de sécurité.

DÉPANNAGE UNIQUEMENT PAR DU PERSONNEL QUALIFIÉ

Le personnel d'exploitation ne doit pas essayer de remplacer des composants ou de faire des réglages internes. Tout dépannage doit être uniquement effectué par du personnel qualifié.

PRÉCAUTION EN CAS D'UTILISATION AVEC DES PRODUITS DANGEREUX

Si des produits dangereux sont utilisés, l'utilisateur est responsable de la prise des mesures de précaution appropriées, de la purge complète de l'appareil quand cela est nécessaire, et de la garantie que les produits utilisés sont compatibles avec les composants de cet appareil, y compris les matériaux d'étanchéité.

PURGE DE L'APPAREIL

Après l'installation de l'unité, ou avant son enlèvement d'un système, purger l'unité complètement avec un gaz propre et sec afin d'éliminer toute trace du produit de flux utilisé précédemment.

UTILISATION DES PROCÉDURES APPROPRIÉES POUR LA PURGE

Cet appareil doit être purgé sous une hotte de ventilation, et il faut porter des gants de protection.

PAS D'EXPLOITATION DANS UN ENVIRONNEMENT EXPLOSIF

Pour éviter toute explosion, ne pas utiliser cet appareil dans un environnement explosif, sauf en cas d'homologation spécifique pour une telle exploitation.

UTILISATION D'ÉQUIPEMENTS APPROPRIÉS ET PROCÉDURES DE SERRAGE

Tous les équipements de l'appareil doivent être cohérents avec ses spécifications, et compatibles avec l'utilisation prévue de l'appareil. Assembler et serrer les équipements conformément aux directives du fabricant.

VÉRIFICATION DE L'ÉTANCHÉITÉ DES CONNEXIONS

Vérifier attentivement toutes les connexions des composants pour le vide afin de garantir l'étanchéité de l'installation.

EXPLOITATION AVEC DES PRESSIONS D'ENTRÉE NON DANGEREUSES

Ne jamais utiliser des pressions supérieures à la pression nominale maximum (se reporter aux spécifications de l'unité pour la pression maximum admissible).

INSTALLATION D'UN DISQUE D'ÉCHAPPEMENT ADAPTÉ

En cas d'exploitation avec une source de gaz pressurisé, installer un disque d'échappement adapté dans le système à vide, afin d'éviter une explosion du système en cas d'augmentation de la pression.

MAINTIEN DE L'UNITÉ À L'ABRI DES CONTAMINATIONS

Ne pas laisser des produits contaminants pénétrer dans l'unité avant ou pendant l'utilisation. Des produits contaminants tels que des poussières et des fragments de tissu, de glace et de métal peuvent endommager l'unité d'une manière permanente ou contaminer le processus.

RESPECT DU TEMPS D'ÉCHAUFFEMENT APPROPRIÉ POUR LES UNITÉS À TEMPÉRATURE CONTRÔLÉE

Les unités à température contrôlée atteignent leurs spécifications uniquement quand on leur laisse un temps suffisant pour atteindre d'une manière stable la température d'exploitation. Ne pas remettre à zéro ou calibrer l'unité tant que l'échauffement n'est pas terminé.

Medidas de seguridad del transductor de presión

Símbolos usados en este manual de instrucciones

Definiciones de los mensajes de advertencia, precaución y de las notas usados en el manual.

Advertencia



El símbolo de advertencia indica la posibilidad de que se produzcan daños personales. **Pone de relieve un procedimiento, práctica, estado, etc. que en caso de no realizarse u observarse correctamente puede causar daños personales.**

Precaución



El símbolo de precaución indica la posibilidad de producir daños al equipo. **Pone de relieve un procedimiento operativo, práctica, estado, etc. que en caso de no realizarse u observarse correctamente puede causar daños o la destrucción total o parcial del equipo.**

Nota



El símbolo de notas indica información de importancia. Este símbolo pone de relieve un procedimiento, práctica o condición cuyo conocimiento es esencial destacar.

Símbolos hallados en la unidad

La tabla siguiente contiene los símbolos que puede hallar en la unidad.















Definición de los símbolos hallados en la unidad			
			
Encendido (alimentación eléctrica) IEC 41B7, N° 5007	Apagado (alimentación eléctrica) IEC 41B7, N° 5008	Puesta a tierra IEC 41B7, N° 5017	Protección a tierra IEC 41B7, N° 5019
			
Caja o chasis IEC 41B7, N° 5020	Equipotencialidad IEC 41B7, N° 5021	Corriente continua IEC 41B7, N° 5031	Corriente alterna IEC 41B7, N° 5032
			
Corriente continua y alterna IEC 41B7, N° 5033-a	Equipo de clase II IEC 41B7, N° 51B72-a	Corriente alterna trifásica IEC 617-2, N° 020206	
			
Precaución. Consulte los documentos adjuntos ISO 3864, N° B.3.1	Precaución. Riesgo de descarga eléctrica ISO 3864, N° B.3.6	Precaución. Superficie caliente IEC 41B7, N° 5041B	

Tabla 4: Definición de los símbolos hallados en la unidad

Procedimientos y precauciones de seguridad

Las precauciones generales de seguridad descritas a continuación deben observarse durante todas las etapas de funcionamiento del instrumento. La falta de cumplimiento de dichas precauciones o de las advertencias específicas a las que se hace referencia en el manual, constituye una violación de las normas de seguridad establecidas para el uso previsto del instrumento y podría anular la protección proporcionada por el equipo. Si el cliente no cumple dichas precauciones y advertencias, MKS Instruments, Inc. no asume responsabilidad legal alguna.

NO UTILICE PIEZAS NO ORIGINALES O MODIFIQUE EL INSTRUMENTO

No instale piezas que no sean originales ni modifique el instrumento sin autorización. Para asegurar el correcto funcionamiento de todos los dispositivos de seguridad, envíe el instrumento al Centro de servicio y calibración de MKS toda vez que sea necesario repararlo o efectuar tareas de mantenimiento.

LAS REPARACIONES DEBEN SER EFECTUADAS ÚNICAMENTE POR TÉCNICOS AUTORIZADOS

Los operarios no deben intentar reemplazar los componentes o realizar tareas de ajuste en el interior del instrumento. Las tareas de mantenimiento o reparación deben ser realizadas únicamente por personal autorizado.

TENGA CUIDADO CUANDO TRABAJE CON MATERIALES TÓXICOS

Cuando se utilicen materiales tóxicos, es responsabilidad de los operarios tomar las medidas de seguridad correspondientes, purgar totalmente el instrumento cuando sea necesario y comprobar que el material utilizado sea compatible con los materiales del instrumento e inclusive, con todos los materiales de sellado.

PURGUE EL INSTRUMENTO

Una vez instalada la unidad o antes de retirarla del sistema, purgue completamente la unidad con gas limpio y seco para eliminar todo resto de la sustancia líquida empleada anteriormente.

USE PROCEDIMIENTOS ADECUADOS PARA REALIZAR LA PURGA

El instrumento debe purgarse debajo de una campana de ventilación y deben utilizarse guantes protectores.

NO HAGA FUNCIONAR EL INSTRUMENTO EN AMBIENTES CON RIESGO DE EXPLOSIÓN

Para evitar que se produzcan explosiones, no haga funcionar este instrumento en un ambiente con riesgo de explosiones, excepto cuando el mismo haya sido certificado específicamente para tal uso.

USE ACCESORIOS ADECUADOS Y REALICE CORRECTAMENTE LOS PROCEDIMIENTOS DE AJUSTE

Todos los accesorios del instrumento deben cumplir las especificaciones del mismo y ser compatibles con el uso que se debe dar al instrumento. Arme y ajuste los accesorios de acuerdo con las instrucciones del fabricante.

COMPRUEBE QUE LAS CONEXIONES SEAN A PRUEBA DE FUGAS

Inspeccione cuidadosamente las conexiones de los componentes de vacío para comprobar que hayan sido instalados a prueba de fugas.

HAGA FUNCIONAR EL INSTRUMENTO CON PRESIONES DE ENTRADA SEGURAS

No haga funcionar nunca el instrumento con presiones superiores a la máxima presión nominal (en las especificaciones del instrumento hallará la presión máxima permitida).

INSTALE UNA CÁPSULA DE SEGURIDAD ADECUADA

Cuando el instrumento funcione con una fuente de gas presurizado, instale una cápsula de seguridad adecuada en el sistema de vacío para evitar que se produzcan explosiones cuando suba la presión del sistema.

MANTENGA LA UNIDAD LIBRE DE CONTAMINANTES

No permita el ingreso de contaminantes en la unidad antes o durante su uso. Los productos contaminantes tales como polvo, suciedad, pelusa, lascas de vidrio o virutas de metal pueden dañar irreparablemente la unidad o contaminar el proceso.

CALIENTE ADECUADAMENTE LAS UNIDADES CONTROLADAS POR MEDIO DE TEMPERATURA

Las unidades controladas por medio de temperatura funcionarán de acuerdo con las especificaciones sólo cuando se las caliente durante el tiempo suficiente para permitir que lleguen y se estabilicen a la temperatura de operación indicada. No calibre la unidad y no la ponga en cero hasta que finalice el procedimiento de calentamiento.

Chapter One: General Information

Introduction

Note



Some Baratron[®] products may not be exported to many end user countries without both US and local government export licenses under ECCN 2B230.

The MKS Type 41B/42B/51B/52B Vacuum/Pressure Switch is based on the proven Type 700/800 Series mini-Baratron[®] capacitance sensor technology. The small footprint of the 41B/42B/51B/52B pressure switch makes it ideal for applications with limited space. The products are compliant with RoHS (Restriction of Hazardous Substances) directives, and are available in single-ended or flow-through configurations in either an absolute or gauge transducer. Table 5 lists the various configurations available. Table 6 lists the features available on the single-ended (41B and 51B) and flow-through versions (42B and 52B).

Description of the 41B/42B/51B/52B Vacuum/Pressure Switch	
Model Type	Description
41B	Single-Ended Gauge Transducer
51B	Single-Ended Absolute Transducer
42B	Flow-Through Gauge Transducer
52B	Flow-Through Absolute Transducer

Table 5: Description of the 41B/42B/51B/52B Vacuum/Pressure Switch

Configuration Options of the Single-Ended and Flow-Through Versions		
Feature	Single-Ended (41B and 51B)	Flow-Through (42B and 52B)
Connector	9-pin D-subminiature or flying leads	9-pin D-subminiature or flying leads
Fittings	4-VCR fixed male, 1/4" NPT male, 1/8" NPT male, or KF-16	Swagelok [®] 4-VCR fixed male
Full Scale Range	10 Torr to 25,000 Torr (500 psi)	1000 Torr (\approx 20 psi) to 500 psi

Table 6: Configuration Options of the Single-Ended and Flow-Through Versions

The pressure switch output signal changes state when the measured pressure crosses a trip point pressure value. The trip point pressure value is selected at the time the unit is ordered and the

value set at the factory. The trip point direction, whether to trip when the pressure rises above or drops below the trip point value, is also defined when the unit is ordered. The pressure switch arrives fully configured so all you need to do is install it into your system.

How This Manual is Organized

This manual is designed to provide instructions on how to set up, install, and operate a Type 41B/42B/51B/52B unit.

Before installing your 41B/42B/51B/52B unit in a system and/or operating it, carefully read and familiarize yourself with all precautionary notes in the *Safety Messages and Procedures* section at the front of this manual. In addition, observe and obey all WARNING and CAUTION notes provided throughout the manual.

Chapter One, *General Information*, (this chapter) introduces the product and describes the organization of the manual.

Chapter Two, *Installation*, explains the environmental requirements and describes how to mount the instrument in your system.

Chapter Three, *Overview*, gives a brief description of the instrument and its functionality.

Chapter Four, *Operation*, describes how to use the instrument and explains all the functions and features.

Chapter Five, *Maintenance*, lists any maintenance required to keep the instrument in good working condition.

Appendix A, *Product Specifications*, lists the specifications of the instrument.

Appendix B, *Model Code Explanation*, describes the model code.

Customer Support

Standard maintenance and repair services are available at all of our regional MKS Calibration and Service Centers, listed on the back cover. In addition, MKS accepts the instruments of other manufacturers for recalibration using the Primary and Transfer Standard calibration equipment located at all of our regional service centers. Should any difficulties arise in the use of your 41B/42B/51B/52B instrument, or to obtain information about companion products MKS offers, contact any authorized MKS Calibration and Service Center. If it is necessary to return the instrument to MKS, please obtain an RMA (Return Material Authorization) Number from the MKS Calibration and Service Center before shipping. The RMA Number expedites handling and ensures proper servicing of your instrument.

Please refer to the inside of the back cover of this manual for a list of MKS Calibration and Service Centers.

Warning



All returns to MKS Instruments must be free of harmful, corrosive, radioactive, or toxic materials.

Chapter Two: Installation

How To Unpack the Type 41B/42B/51B/52B Unit

MKS has carefully packed the Type 41B/42B/51B/52B unit so that it will reach you in perfect operating order. Upon receiving the unit, however, you should check for defects, cracks, broken connectors, etc., to be certain that damage has not occurred during shipment.

Note

Do *not* discard any packing materials until you have completed your inspection and are sure the unit arrived safely.

If you find any damage, notify your carrier and MKS immediately. If it is necessary to return the unit to MKS, obtain an RMA (Return Material Authorization) Number from the MKS Service Center before shipping. Please refer to the inside of the back cover of this manual for a list of MKS Calibration and Service Centers.

Caution

Only qualified individuals should perform the installation and any user adjustments. They must comply with all the necessary ESD and handling precautions while installing and adjusting the instrument. Proper handling is essential when working with all highly sensitive precision electronic instruments.

Unpacking Checklist

Standard Equipment:

- Type 41B/42B/51B/52B Unit
- Type 41B/42B/51B/52B Instruction Manual (this book)

Optional Equipment:

- Electrical Connector Accessories Kit - XXA-K1 where XX designates your specific model (contains a mate for the electrical connector)
- Interface cable CB41AS-1

Product Location and Requirements

- Ambient Operating Temperature: 0° to 50° C (32° to 122° F)
- Ventilation requirements include sufficient air circulation
- Storage Temperature Range: -20° to +80° C (-4° to 176° F)
- Input power: 10 to 20 VDC @ 35 mA maximum or 20 to 30 VDC @ 30 mA maximum

Setup

Dimensions of the Single-Ended Units

Note



All dimensions are listed in inches with millimeters referenced in parentheses.

The dimensions of single-ended units depend upon the full scale range of the unit. High pressure units have a full scale range of 50 psi through 500 psi (2600 Torr through 25000 Torr). Low pressure units have a full scale range of 10 through 1200 Torr.

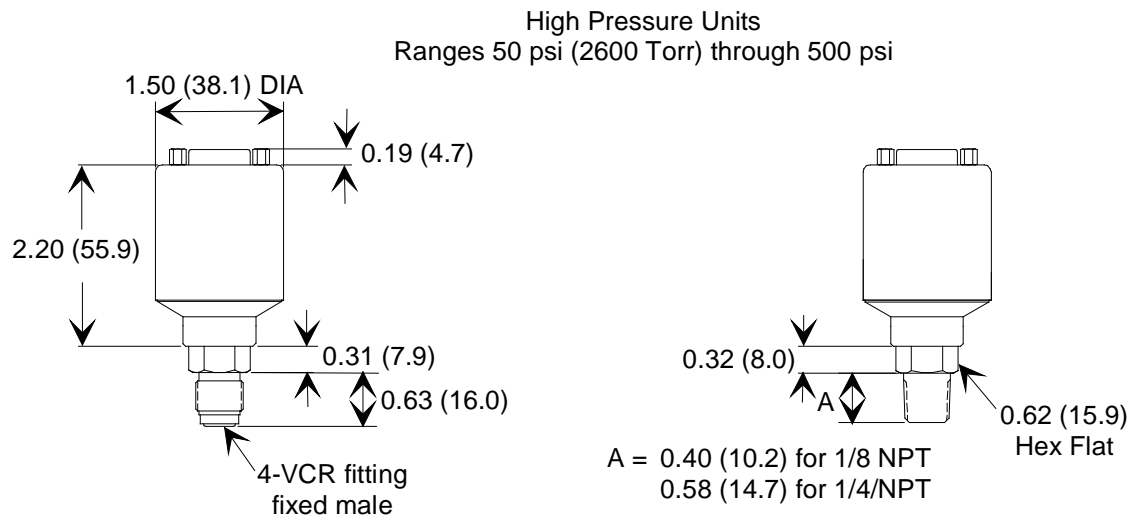


Figure 1: Dimensions of High Pressure Single-Ended Units

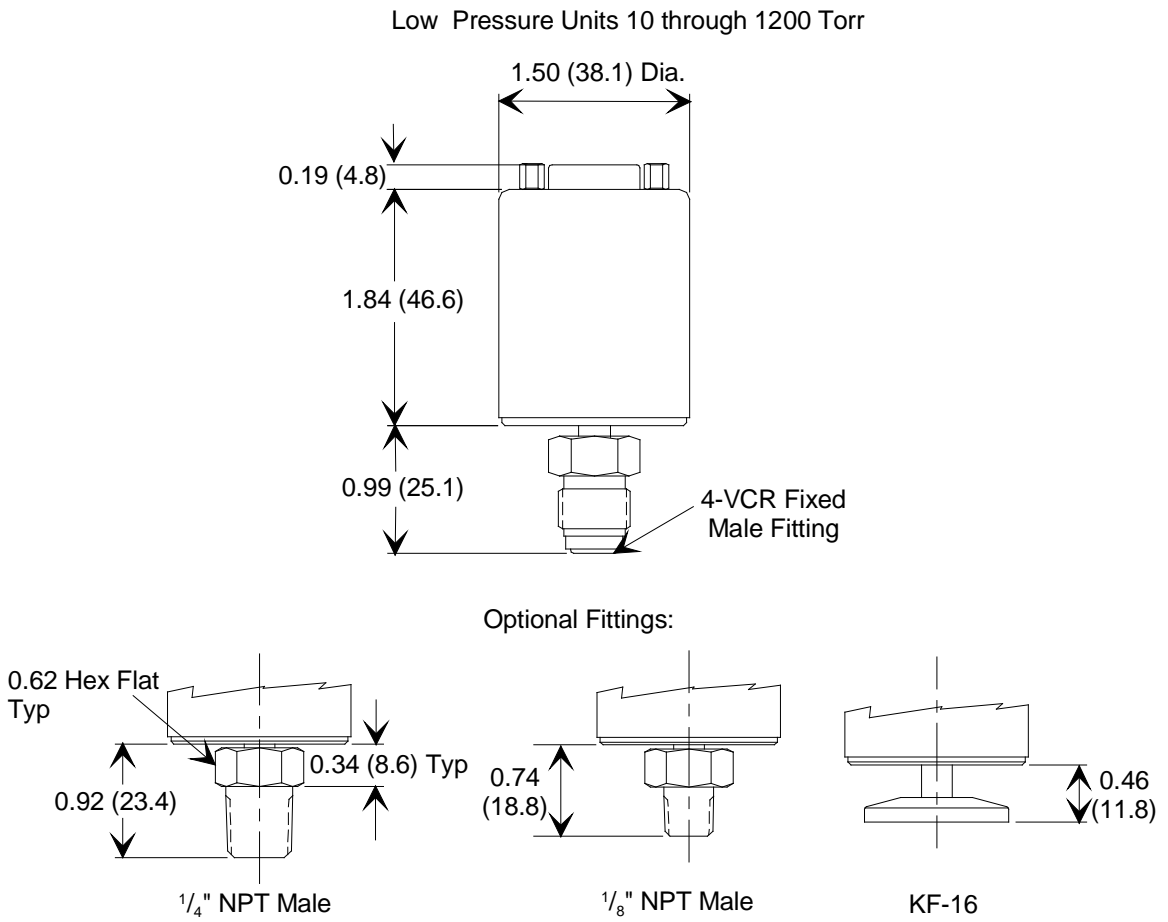


Figure 2: Dimensions of Low Pressure Single-Ended Units

Dimensions of the Flow-Through Units

Note



All dimensions are listed in inches with millimeters referenced in parentheses.

The dimensions of the flow-through version are the same for high and low pressure units.

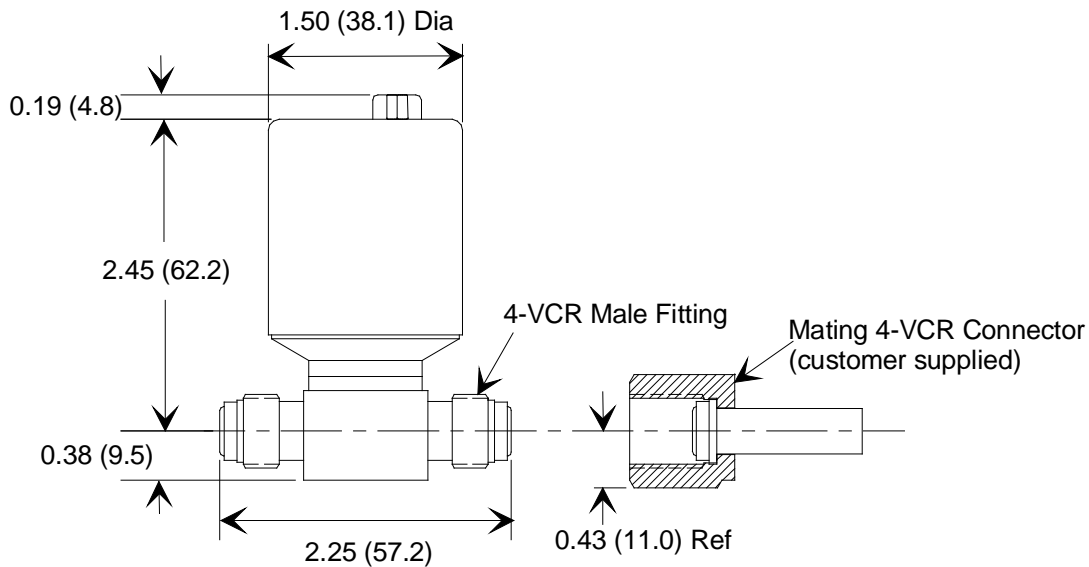


Figure 3: Dimensions of Flow-Through Units

Mounting

The 41B/42B/51B/52B switch can be mounted in any orientation with the exception of the low pressure units (< 20 psi FS). If the full scale pressure of the unit is less than 20 psi *and* the unit may be exposed to particulates, mount the unit with the connector up. This will allow any foreign matter entering the unit to fall away from the sensing diaphragm. Material on the diaphragm may cause a zero shift and reduce the unit's switch point accuracy.

Electrical Information

The 41B/42B/51B/52B switches require an external power supply capable of supplying either 10 to 20 VDC @ 35 mA maximum or 20 to 30 VDC @ 30 mA maximum.

D-Subminiature Connector

The pressure switch is available with a 9-pin male D-subminiature electrical connector. The connector pinout is listed in Table 7.

Pinout of the 9-Pin D-Subminiature Connector	
Pin Number	Assignment
1	Power Return (-)
2	Power Input (+)
3	Relay Normally Open Contact
4	Relay Common
5	Relay Normally Closed Contact
6	Reserved
7	Reserved
8	Reserved
9	Chassis Ground

Table 7: Pinout of the 9-Pin D-subminiature Connector

Note



The “Reserved” pin assignment refers to a pin with an internal connection that may be assigned a function in the future.

Flying Leads Connector

The flying leads connector has 2 foot long cable with six (6) leads. The color assignments are listed in Table 8.

Pinout of the Flying Leads Connector	
Wire	Assignment
Red	Power Input (+)
Black	Power Return (-)
Green	Relay Normally Open Contact
White	Relay Common
Orange	Relay Normally Closed Contact
Bare Wire	Shield (Drain)

Table 8: Pinout of the Flying Leads Connector

Trip Point Relay

The trip point relay is a single pole, double throw switch, one normally open (NO), one normally closed (NC) form “C” relay with contacts rated from 0.1 to 1 ampere, resistive. When the relay is energized, the normally open (NO) contacts will close. The action of the trip point, whether it is energized above or below the trip point, is specified when the unit is ordered. Refer to *Appendix B: Model Code Explanation*, page 43, to determine the trip point action from the model code of the unit. In addition, the serial number label, shown in Figure 7, page 29, lists the trip point action.

Interface Cables

As of July 20, 2009, all products shipped to the European Community must comply with the EMC Directive 2004/108/EC, which covers radio frequency emissions and immunity tests. MKS products that meet these requirements are identified by application of the CE Mark.

Note

1. An overall metal braided shielded cable, properly grounded at both ends, is required to meet CE specifications.
 2. To order an overall metal braided shielded cable, add an “S” after the cable type designation. For example, to order an overall metal braided shielded cable, for a 41B/42B/51B/52B unit, use part number CB41BS-1.
-

Connecting a Pressure Switch with a D-subminiature Connector

The interface cable, CB41BS-1, has a 9-pin female D-subminiature connector (to attach to the pressure switch) on one end and 2 foot flying leads (6 wire) on the other end. Use the flying leads end of the cable to connect to your system. To ensure CE compliance, you must properly ground the flying leads by connecting the shield (drain) lead to the main ground on your system. Refer to Figure 4, page 27, to identify the shield (drain) lead.

Connecting a Pressure Switch with a Flying Leads Cable

When connecting a pressure switch equipped with a flying leads cable, you must connect the bare metal shield (drain) wire to the main ground on your system to achieve CE compliance. Refer to Figure 4, page 27, to identify the shield (drain) lead.

Generic Shielded Cable Description

MKS offers a full line of cables for all MKS equipment. Should you choose to manufacture your own cables, follow the guidelines listed below:

1. The cable must have an overall metal *braided* shield, covering all wires. Neither aluminum foil nor spiral shielding will be as effective; using either may nullify regulatory compliance.
2. The connectors must have a metal case which has direct contact to the cable's shield on the whole circumference of the cable. The inductance of a flying lead or wire from the shield to the connector will degrade the shield's effectiveness. The shield should be grounded to the connector before its internal wires exit.
3. With very few exceptions, the connector(s) must make good contact to the device's case (ground). "Good contact" is about 0.01 ohms; and the ground should surround all wires. Contact to ground at just one point may not suffice.
4. For shielded cables with flying leads at one or both ends; it is important at each such end, to ground the shield *before* the wires exit. Make this ground with absolute minimum length. (A ¼ inch piece of #22 wire may be undesirably long since it has approximately 5 nH of inductance, equivalent to 31 ohms at 1000 MHz). After picking up the braid's ground, keep wires and braid flat against the case. With very few exceptions, grounded metal covers are not required over terminal strips. If one is required, it will be stated in the Declaration of Conformity or in the instruction manual.
5. In selecting the appropriate type and wire size for cables, consider:
 - A. The voltage ratings;
 - B. The cumulative I^2R heating of all the conductors (keep them safely cool);
 - C. The IR drop of the conductors, so that adequate power or signal voltage gets to the device;
 - D. The capacitance and inductance of cables which are handling fast signals, (such as data lines or stepper motor drive cables); and
 - E. That some cables may need internal shielding from specific wires to others; please see the instruction manual for details regarding this matter.

Special Consideration for the Ground Connection

If you choose to make your own cable you must properly ground the cable on both ends to ensure electromagnetic integrity and compliance with CE regulations. Figure 4 identifies the components of a cable designed to connect to a D-subminiature connector on the pressure switch.


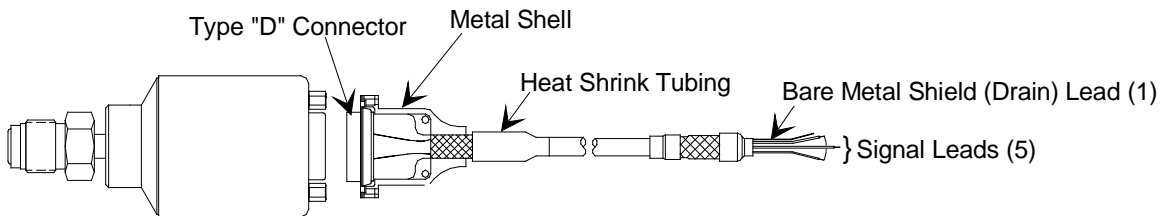


Figure 4: Components of a Cable to Connect to a D-subminiature Connector

On the connector end of the cable, Figure 5 shows how the metal braided shield is folded back over itself to expose the wires. Then the metal shell of the connector is clamped over the metal braided shield to form a good contact point.

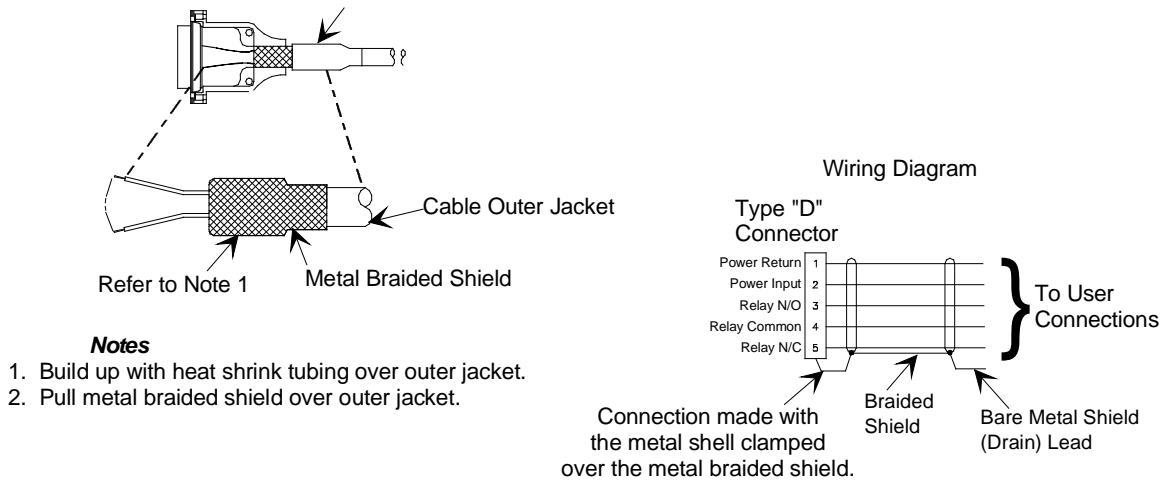

Notes

1. Build up with heat shrink tubing over outer jacket.
2. Pull metal braided shield over outer jacket.

Figure 5: Expanded View of the Cable

At the flying leads end of the cable, connect the shield (drain) lead to the main ground of your system using the shortest length of shield (drain) lead possible.

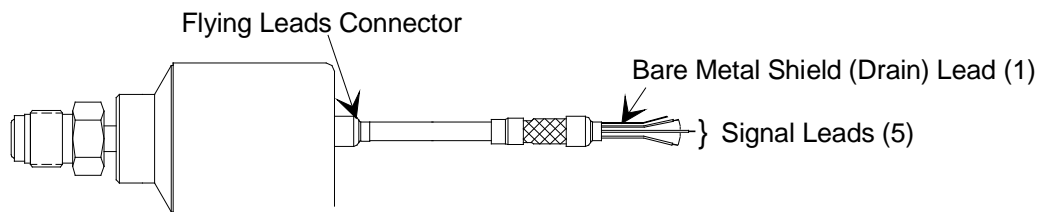


Figure 6: Flying Leads Connector

This page intentionally left blank.

Chapter Three: Overview

General Information

The 41B/42B/51B/52B pressure switch output is represented by a change of state of relay contacts to indicate when the pressure of the system exceeds a factory set pressure value.

Note

The trip point pressure value cannot be changed in the field.

Labels

The mini-pressure switch has two identification labels; a serial number label and a trip point action label.

Serial Number Label

Every pressure switch carries a serial number label, as shown in Figure 7. The

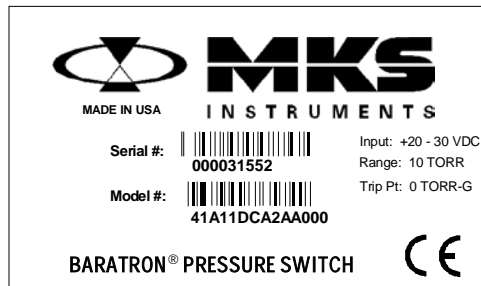


Figure 7: Serial Number Label

The serial number label lists the input requirement, the full scale range, the trip point, and the action of the trip point relay. In addition, it displays the “CE” symbol to denote compliance with the CE directive.

Trip Point Label

Each mini-pressure switch also carries a label to identify the action of the trip point. The trip point action is set at the factory to energize when the pressure is either above or below the trip point.




Figure 8: Trip Point Label

Sensor

The variable capacitance sensor consists of a pressure inlet tube (port) connected to a small chamber in the transducer body. One wall of this chamber is a metal diaphragm. The front side of the diaphragm is exposed to the gas whose pressure is to be measured. The back, or *reference* side of the diaphragm faces a rigidly mounted ceramic disc containing two electrodes. The diaphragm in the single-ended version is positioned opposite the inlet port. The diaphragm on the flow-through version is positioned above the gas stream. Figure 1 page 20, and Figure 2, page 21, show the design of the single-ended version; and Figure 3, page 22, shows the design of the flow-through version.

The reference side of the absolute version (Type 51B or 52B) is permanently evacuated below the resolution of the instrument and its vacuum is maintained with a chemical getter system. The reference side of the gauge version (Type 41B or 42B) is open to the atmosphere. Since its pressure should not be altered, there is no connector on the reference side.

The diaphragm deflects with changing pressure (force per unit area) independently of the gas type or composition of the measured gas. This deflection causes an imbalance of the sensor electrode capacitances since the distance to the diaphragm is now different for each electrode. Using a precision constant frequency oscillator for excitation, the imbalance of capacitances is converted to a DC voltage representative of pressure and is supplied as one input to a comparator circuit. The circuit compares the pressure signal to the factory set trip point signal and appropriately activates a relay when the two signals differ. The form C relay contacts are available on the D-subminiature connector or the flying leads cable so you can connect the pressure switch into your system.

Trip Point Value

The trip point pressure is designated at the time the unit is ordered and *cannot* be changed in the field.

Caution



The trip point value is NOT ADJUSTABLE. Before operating the switch, ensure that the range of pressure for the system is appropriate for the particular 41B/42B/51B/52B switch.

The trip point pressure value must be in the same pressure units as the full scale range. For example, you cannot order a 1000 Torr full scale unit with a trip point of 14.7 psia; you must specify the trip point as 760 Torr.

How Full Scale Range Affects Trip Point Accuracy

The accuracy of the pressure switch (reacting to the trip point) depends on the full scale range of the unit. Therefore, you should order the *lowest* full scale range switch that will measure the trip point value. For example, if you need a trip point of 50 Torr, a 100 Torr full scale range will provide a trip point accuracy of 0.5 Torr. The switch will trip between 49.5 and 50.5 Torr. However, a 1000 Torr full scale switch with the same 50 Torr trip point will provide a trip point accuracy of only 5 Torr. Therefore the switch will trip between 45 and 55 Torr.

Method of Operation

The 41B/42B/51B/52B pressure switch changes the state of a relay when the pressure crosses the trip point pressure. The pressure switch is set at the factory in one of two settings:

Relay energizes when the pressure *rises above* the trip point pressure

or

Relay energizes when the pressure *drops below* the trip point pressure

Note



The action of the switch (whether the relay is energized when the pressure rises above or drops below the trip point pressure) cannot be changed in the field.

The trip point signal is available on the connector as shown in Table 9. (For complete connector assignments, refer to Table 7, page 23, and Table 8, page 24.)

Trip Point Signals		
Pin Number	Flying Lead Color	Assignment
3	Green	Relay Normally Open Contact
4	White	Relay Common
5	Orange	Relay Normally Closed Contact

Table 9: Trip Point Signals

Units Set to Energize Above the Trip Point Pressure

When the measured pressure is below the trip point value, the relay is in its normal state; the normally open contact is open and the normally closed contact is closed. When the pressure rises above the trip point value, the relay changes to its tripped state; the normally open contact closes and the normally closed contact opens.

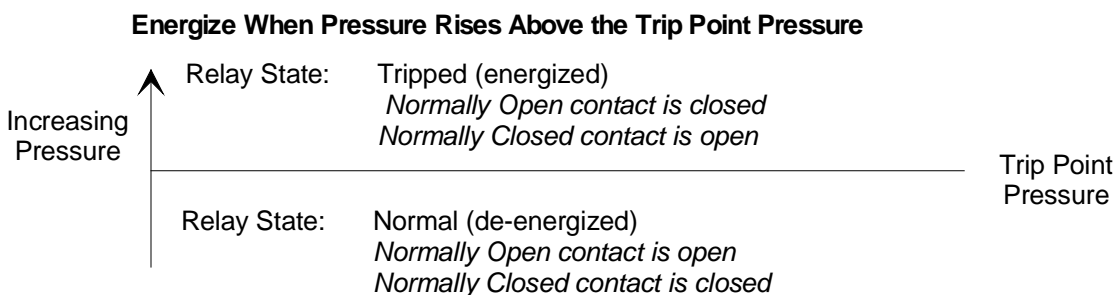


Figure 9: Trip Point Set to Energize Above the Trip Point Pressure

Units Set to Energize *Below* the Trip Point Pressure

When the measured pressure is above the trip point value, the relay is in its normal state; the normally open contact is open and the normally closed contact is closed. When the pressure falls below the trip point value, the relay changes to its tripped state; the normally open contact closes and the normally closed contact opens.

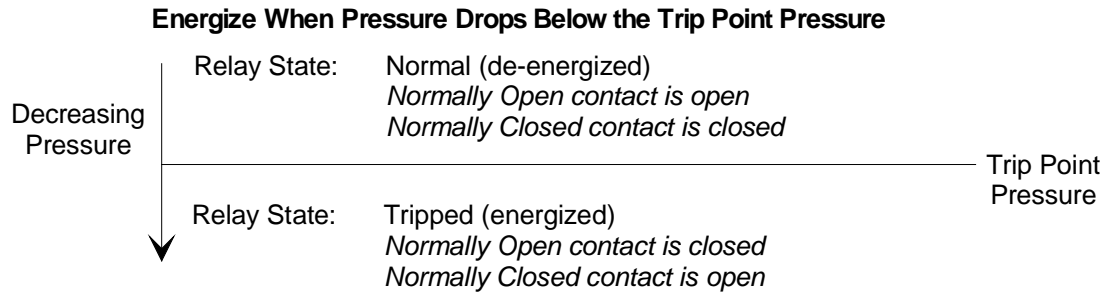


Figure 10: Trip Point Set to Energize Below the Trip Point Pressure

Hysteresis

Hysteresis is built into the operation of the trip point to help compensate for the noise inherent in all systems. Without hysteresis, noise may cause the relay to repeatedly switch states, a condition known as “relay chatter.” The hysteresis is set at the factory for 0.25% of full scale; it cannot be adjusted.

How A Gauge Switch Works

The 41B and 42B gauge pressure switches can measure pressure both above and below atmospheric pressure (that is both positive and negative pressure). A gauge pressure switch can be used as an atmospheric switch; one that references the trip point pressure to current atmospheric pressure. For example, a gauge pressure switch with a 100 psi full scale range, enables you to set the trip point value at 15 psi above atmospheric pressure (2 atmospheres). Therefore, even though atmospheric pressure may fluctuate around 760 Torr (in most places) the switch would always change when the pressure exceeded 15 psi above *current* atmospheric pressure. This switch would require a “normal calibration” since the trip point pressure is above atmospheric pressure. In the model code the full scale range would be “12P” to designate pressure units of psi with a normal calibration. The trip point pressure would be “015.”

Reverse Calibration Switch

In some instances you may need to reference atmospheric pressure yet set the trip point value somewhat below atmospheric pressure. For example, using a 100 Torr Type 41B gauge pressure switch, you may need to set the trip point pressure 10 Torr *below* atmospheric pressure. This switch would require a “reverse calibration” since the trip point is set below atmospheric pressure. The choice of a reverse calibration is selected in the model code, in the “Full Scale Range” section. In our example, the full scale range would be “12D” where the “D” designates the pressure units of Torr with a reverse calibration. The trip point pressure, specified in the last three digits of the model code, is defined as the value below atmospheric pressure. In our example, the trip point pressure would be “010.” Refer to *Appendix B: Model Code Explanation*, page 43, for a complete description of the model code.

Atmospheric Switch

Some processes operate in a vacuum yet require the switch to change at atmospheric pressure. A gauge switch with a reverse calibration can achieve this effect. A typical configuration may have a full scale range of 10 Torr or “11D” with a trip point set to atmospheric pressure (000). This switch would trip whenever the measured pressure reached atmospheric pressure.

Chapter Four: Operation

How To Use the Pressure Switch

There are no user adjustments on the pressure switch.

1. Connect the relay outputs.
2. Connect power to the switch.
3. Apply power to the switch.

Caution



The trip point value is NOT ADJUSTABLE. Before operating the switch, ensure that the range of pressure for the system is appropriate for the particular 41B/42B/51B/52B switch.

4. Allow at least 15 minutes for the pressure switch to warm up.

This page intentionally left blank.

Chapter Five: Maintenance

General

The 41B/42B/51B/52B pressure switch requires no regular maintenance. However, periodically check for wear on the cables and inspect the enclosure for visible signs of damage.

Repair

Should you encounter difficulty using the 41B/42B/51B/52B switch, contact any authorized MKS Calibration and Service Center. If it is necessary to return the instrument to MKS, please obtain an RMA (Return Material Authorization) Number from the MKS Calibration and Service Center before shipping. The RMA Number expedites handling and ensures proper servicing of your instrument.

Please refer to the inside of the back cover of this manual for a list of MKS Calibration and Service Centers.

Warning



All returns to MKS Instruments must be free of harmful, corrosive, radioactive, or toxic materials.

This page intentionally left blank.

Appendix A: Product Specifications

Performance Specifications

Accuracy (of trip point) ¹	±0.5% of Full Scale + temperature coefficient
CE Compliance ² Electromagnetic Compatibility	EMC Directive 2004/108/EC
RoHS (Restriction of Hazardous Substances) Compliance	Fully compliant with EU Directive 2002/95/EC
Leak Integrity (internal to external)	< 10 ⁻⁹ scc/sec He
Relay Rating	0.1 to 1.0 Amp resistive @ 30 VDC
Temperature Coefficient	±0.07% of Full Scale/° C
Time Response (typical)	≤ 20 milliseconds
Trip Point Deadband	3% of Full Scale
Trip Point Value	User defined; set at the factory (not adjustable)

¹ Includes non-repeatability, noise, humidity effects, and resolution.

² An overall metal braided shielded cable, properly grounded at both ends, is required during use.

Physical Specifications

Burst Pressure	10 times full scale or 90 psia, whichever is greater
Connector	9-pin D-subminiature or flying leads
Description	
41B	Single-Ended gauge unit
42B	Flow-Through gauge unit
51B	Single-Ended absolute unit
52B	Flow-Through absolute unit
Dimensions	
Flow-Through	1.5" diameter (2.25 port to port) x 2.45" to centerline of ports 38.1 mm diameter (57.2 mm port to port) x 62.2 mm
Single-Ended	1.5" diameter x 2.20" (excluding port) 38.1 mm diameter x 55.9 mm
Fittings	
Flow-Through	4-VCR, fixed male
Single-Ended	4-VCR, fixed male, 1/4" NPT, 1/8" NPT, NW-16-KF
Full Scale Ranges	
41B Single-Ended Gauge	10 through 25,000 Torr (500 psi)
42B Flow-Through Gauge	10 through 25,000 Torr (500 psi)
51B Single-Ended Absolute	1000 through 25,000 Torr (19.3 through 500 psi)
52B Flow-Through Absolute	1000 through 25,000 Torr (19.3 through 500 psi)
Internal Volume	
Flow-Through	6.6 cc
Single-Ended	3.3 cc
Overpressure (without damage)	45 psia or 2 times the pressure rating (whichever is greater)
Weight	
Flow-Through	12 oz. (0.34 kg)
Single-Ended	10 oz. (0.28 kg)
Wetted Material	Incoloy®, Inconel®, and 316 stainless steel

Electrical Specifications

Input Power	10 to 20 VDC @ 35 mA maximum or 20 to 30 VDC @ 30 mA maximum
Relay	Single pole, double throw switch, one normally open (NO), one normally closed (NC) form "C" relay
Relay Contact Rating	1.0 A resistive at 30 VDC

Environmental Specifications

Operating Temperature Range	0° to 50° C (32° to 122° F)
Storage Humidity Range	25 to 70% relative humidity, non-condensing
Storage Temperature Range	-20° to +80° C (-4° to 176° F)

Due to continuing research and development activities, these product specifications are subject to change without notice.

This page intentionally left blank.


Appendix B: Model Code Explanation

Model Code

The options of your 41B/42B/51B/52B switch are identified in the model code when you order the unit. The model code is identified as follows:

AAA BB C DD E F G HHH

where:

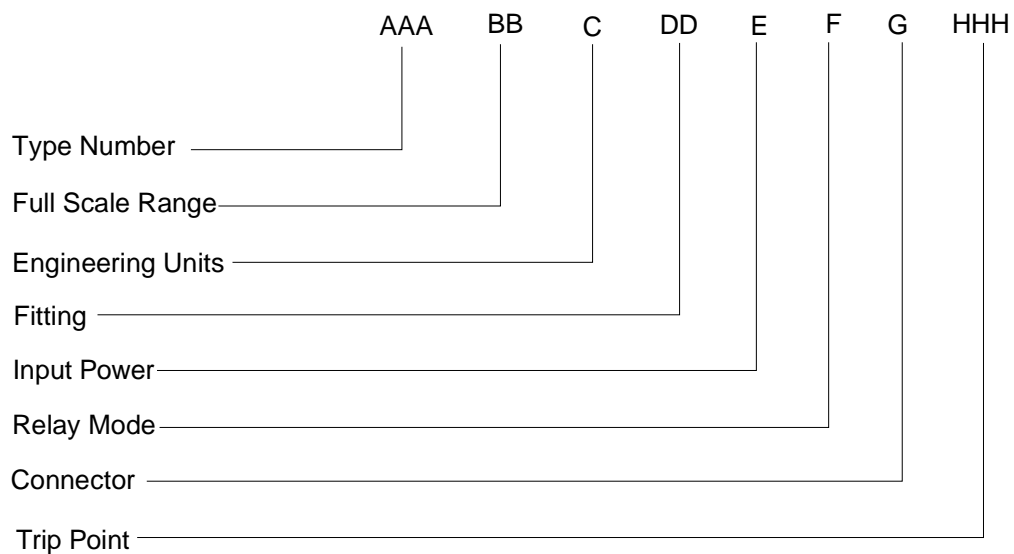

Type Number (AAA)

This designates the model number of the instrument.

Type Number and Description	Ordering Code
41B Single-Ended Gauge Unit	41B
42B Flow-Through Gauge Unit	42B
51B Single-Ended Absolute Unit	51B
52B Flow-Through Absolute Unit	52B

Full Scale Range and Units (BB and C)

The full scale range is indicated by a two digit code (BB) and the engineering units have a one letter code (C). Consult Applications Engineering for other engineering units.

Full Scale Ranges		
Value	Comments	Ordering Code
10 Torr	Type 41B/51B only	11T
30 Torr	Type 41B/51B only	31T
100 Torr	Type 41B/51B only	12T
500 Torr	Type 41B/51B only	52T
1000 Torr (19.3 psi)		13T
20 psi		21P
50 psi (2587 Torr)		51P
100 psi		12P
250 psi		RDP
500 psi		52P

Examples: The designation of a full scale range of 100 Torr is “12T”; 500 Torr is “52T”; 1000 Torr is “13T”; and 100 psi is “12P.”

Full Scale Range for Reverse Calibration Only (Types 41B and 42B only)		
Value	Comments	Ordering Code
10 Torr	Type 41B only	11D
30 Torr	Type 41B only	31D
100 Torr	Type 41B only	12D
500 Torr	Type 41B only	52D
1000 Torr		13D
20 psi		21P
50 psi		51C
100 psi		12C
250 psi		RDC
500 psi		52C

Examples: The designation of a full scale range reverse calibration unit of 100 Torr is “12D”; 500 Torr is “52BD”; 1000 Torr is “13D”; and 100 psi is “12C.”

Fittings (DD)

Four types of fittings are available, designated by a two letter code.

Single Ended Fitting Options (Type 41B/51B)	Ordering Code
Swagelok® 4-VCR® fixed male	CA
NW16-KF (1200 Torr maximum)	GA
1/8" NPT, male	FE
1/4" NPT, male	FB
Flow-Through Fitting Option (Type 42B/52B)	Ordering Code
Swagelok 4-VCR fixed male	CH

Input Power (E)

The input/output power is designated by a single number code.

Input Power	Ordering Code
10 to 20 VDC	1
20 to 30 VDC	2

Relay Mode (F)

The relay mode (whether the relay is energized when the pressure rises above or drops below the trip point value) is specified by a single letter code (F).

Trip Point Direction	Ordering Code
Energize when pressure rises above the trip point	A
Energize when pressure drops below the trip point	B

Connector (G)

Two types of connectors are available, indicated by a single letter code.

Connector	Ordering Code
9-pin male D-subminiature	A
Flying Leads	F

Trip Point Value (HHH)

The trip point value is designated by a three digit code. The trip point must be designated in the same pressure units as the full scale range. For example, a 1000 Torr full scale unit with a trip point of “760” indicates the standard atmospheric pressure of 760 Torr. For a 100 Torr unit, with a 50 Torr trip point, enter “050.” For reverse calibration, list the trip point as a value below atmosphere. Consult the factory if your trip point cannot be specified by three digits.

Trip Point Value	Ordering Code
Three digit value (001 through 999) <i>exception:</i> 1000 Torr = 1KT	3 digit value

This page intentionally left blank.

Index

A

Accuracy, 33, 41
Atmospheric pressure, 49
Atmospheric switch, 36

B

Baratron, 17

C

CE Mark, 31
Connectors, 24–25, 41, 48
Customer support, 18

D

Dimensions, 21–23

E

Electrical, 21, 24–25
Electrical, 48
Environmental, 21
ESD, 20

F

Fittings, 48
Flow-through, 17
Full scale range, 33, 36, 46

G

Gauge switch, 36

H

Hysteresis, 35, 41

I

Input power, 24, 43, 48

M

Maintenance, 39
Manual organization, 18
Measurement side, 32
Model code, 45
Mounting, 23

P

Power, 48
Pressure units, 33, 36, 46
Product label, 31

R

Range, 46
Reference side, 32
Relay, 18, 25, 31, 34–35, 48
Repair, 39
Returning the product, 18, 20, 39
Reverse calibration, 36, 46
RoHS (Restriction of Hazardous Substances), 17, 41

S

Safety procedures and precautions, 1–4
Sensing diaphragm, 23, 32
Sensor operation, 32
Single-ended, 17
Specifications, 41–43

T

Temperature, operating, 21
Temperature, storage, 21
Trip point, 18, 25, 31, 33, 34–35, 37, 48, 49
accuracy, 33

hysteresis, 35, 41

value, 33

Type 41, 17

Type 42, 17

Type 51, 17

Type 52, 17

U

Units, 33, 36, 46

W

Warm up, 37