


Pirani Standard Gauge

PSG500/-S, PSG502-S,
PSG510-S, PSG512-S

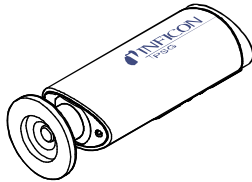


Operating Manual
Incl. EU Declaration of Conformity

tina44e1-i (2015-10)

Product Identification

In all communications with INFICON, please specify the information on the product nameplate. For convenient reference copy that information into the space provided below.

INFICON AG, LI-9496 Balzers
Model: _____
PN: _____
SN: _____
_____ V _____ W

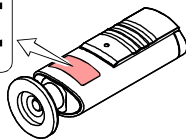

Validity

This document applies to products with the following part numbers:

PSG500	PSG500-S (W filament)
350-060	350-080 (DN 16 ISO-KF)
350-062	350-082 (DN 16 CF-R)
350-061	350-081 (1/8" NPT)
350-064	350-084 (8 VCR [®])
350-065	350-085 (4 VCR [®])
350-063	350-083 (1/2"-Rohr)
350-066	350-086 (7/16-20 UNF)
350-067	350-087 (DN 16 ISO-KF long tube)
350-068	350-088 (DN 16 CF-R long tube)

PSG502-S (Ni filament)
350-140 (DN 16 ISO-KF)
350-142 (DN 16 CF-R)
350-141 (1/8" NPT)
350-144 (8 VCR [®])
350-145 (4 VCR [®])
350-143 (1/2"-Rohr)
350-146 (7/16-20 UNF)
350-147 (DN 16 ISO-KF long tube)
350-148 (DN 16 CF-R long tube)

PSG510-S (W filament)	PSG512-S (Ni filament)
350-200 (DN 16 ISO-KF)	350-300 (DN 16 ISO-KF)

The part number (PN) can be taken from the product nameplate.

If not indicated otherwise in the legends, the illustrations in this document correspond to the gauge with part number 350 060. They apply to gauges with other part numbers by analogy.

We reserve the right to make technical changes without prior notice.

All dimensions in mm.

Intended Use

The Pirani Standard Gauges PSG500/-S, PSG502-S, PSG510-S, PSG512-S have been designed for vacuum measurement of gases in the pressure range of 5×10^{-4} ... 1000 mbar.

They must not be used for measuring flammable or combustible gases in mixtures containing oxidants (e.g. atmospheric oxygen) within the explosion range.




They can be operated in connection with an INFICON controller or with another controller.

Trademark


VCR[®] Swagelok Marketing Co.

Safety

Symbols Used



Personnel Qualifications

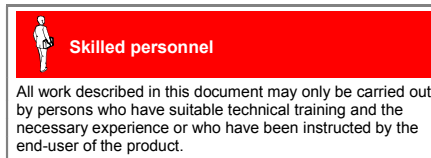

General Safety Instructions

- Adhere to the applicable regulations and take the necessary precautions for the process media used. Consider possible reactions between the materials and the process media. Consider possible reactions (e.g. explosion) of the process media due to the heat generated by the product.
- Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.
- Before beginning to work, find out whether any vacuum components are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Communicate the safety instructions to all other users.

Liability and Warranty

INFICON assumes no liability and the warranty becomes null and void if the end-user or third parties

- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories not listed in the product documentation.

The end-user assumes the responsibility in conjunction with the process media used.

Gauge failures due to contamination or wear and tear, as well as expendable parts (e.g. filament), are not covered by the warranty.

Technical Data

Measurement principle	thermal conductance according to Pirani
Measurement range (air, O ₂ , CO, N ₂)	5×10^{-4} ... 1000 mbar
Accuracy (N ₂)	
1 × 10 ⁻³ ... 100 mbar	±15% of reading
5 × 10 ⁻⁴ ... 1 × 10 ⁻³ mbar	±50% of reading
100 ... 1000 mbar	±50% of reading
Resolution	1% of reading
Repeatability	
1 × 10 ⁻³ ... 100 mbar	2% of reading

Output signal (measurement signal)	
Voltage range	V (dc) 0 ... +10.3
Measurement range	V (dc) +1.9 ... +10.0
Voltage vs. pressure	logarithmic 1.286 V/decade
Error signal	V 0 ... +0.5
Filament rupture	V +0.1

Output impedance	Ω 2×4.7
Minimum loaded impedance	kΩ 10, short-circuit proof
Response time	ms 80


Gauge identification	27.0 kΩ, referenced to supply common (voltage at pin 4 ≤5 V)
----------------------	--

Adjustment	one tactile switch for ATM and HV adjustment
------------	--

Switching functions	SP1, SP2
Threshold value indication and setting	one tactile switch at measurement value output. Press briefly for threshold indication. Keep pressing or press repeatedly for threshold setting.

Setting range	2×10^{-3} ... 500 mbar
Hysteresis	10% above lower threshold
Relay contact	30 V, 0.5 A (dc), floating at low pressure (lamp is lit) at high pressure, error, missing supply

Supply

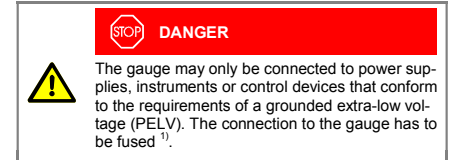

Supply voltage	
At gauge	V (dc) +14 ... +30
Ripple	V _{pp} ≤1
Current consumption	mA <500 (max. starting current)
Power consumption	W ≤1
Fuse required ¹⁾	AT 1 (slow)

Electrical connection	FCC 68 / RJ45 appliance connector, 8 poles, male
Sensor cable	8 poles plus shielding
Cable length	≤100 m (8×0.14 mm ²)

Grounding concept	→ "Electrical Connection" connected via 1 MΩ (voltage difference <15 V) conducted separately, for differential measurement
Materials exposed to vacuum	
PSG500/-S, PSG502-S	DIN 1.4301, DIN 1.4305, DIN 1.4435, glass, Ni, NiFe
PSG510-S, PSG512-S	Al ₂ O ₃ (ceramics), Ni, DIN 1.4435, DIN 1.4305, DIN 1.3981

Filament	
PSG500/-S, PSG510-S	W
PSG502-S, PSG512-S	Ni

¹⁾ INFICON controllers fulfill these requirements.


Internal volume			
DN 16 ISO-KF	cm ³	≈1.5	
DN 16 CF-R	cm ³	≈1.5	
1/8" NPT	cm ³	≈2	
8 VCR®	cm ³	≈2	
4 VCR®	cm ³	≈2	
½"-Rohr	cm ³	≈2	
7/16-20 UNF	cm ³	≈1.5	
DN 16 ISO-KF long tube	cm ³	≈10	
DN 16 CF-R long tube	cm ³	≈10	
Admissible pressure		bar	10, limited to inert gases (abs.)

Admissible temperatures			
Operation	°C	+5 ... +60	
Vacuum connection			
DN 16 ISO-KF	°C	80 ²⁾	} in horizontal mounting orientation
DN 16 CF-R	°C	80 ²⁾	
1/8" NPT	°C	80	
8 VCR®	°C	80	
4 VCR®	°C	80	
½"-Rohr	°C	80	
7/16-20 UNF	°C	80	
Filament	°C	110	
Storage	°C	-20 ... +65	

Relative humidity	%	≤80 at temperatures up to ≤+31 °C, decreasing to 50 at +40 °C	
-------------------	---	---	--


Use indoors only, altitude up to 2000 m NN

Mounting orientation	any
Protection category	IP40

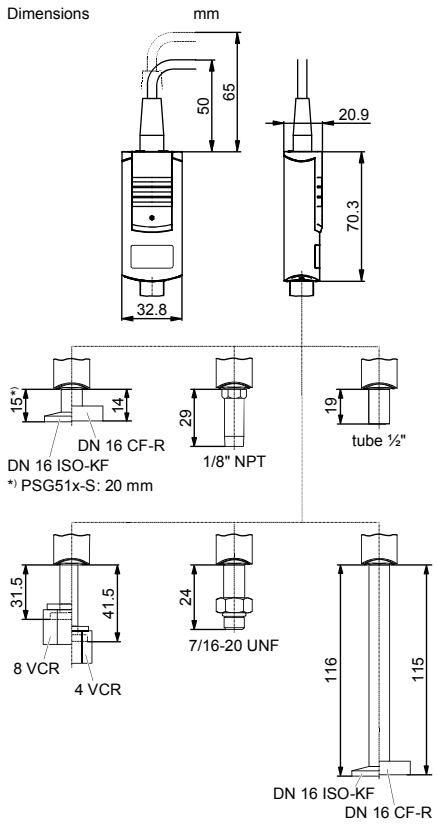

Weight			
DN 16 ISO-KF	g	80	
DN 16 CF-R	g	100	
1/8" NPT	g	70	
8 VCR®	g	130	
4 VCR®	g	100	
½"-Rohr	g	70	
7/16-20 UNF	g	80	
DN 16 ISO-KF long tube	g	130	
DN 16 CF-R long tube	g	140	

Measurement Signal vs. Pressure

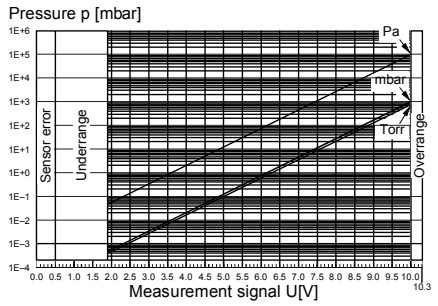


$$p = 10^{((U-c)/1.286)} \Leftrightarrow U = c + 1.286 \times \log_{10} p$$

valid in the range 5 × 10⁻⁴ mbar < p < 1000 mbar
 3.75 × 10⁻⁴ Torr < p < 750 Torr
 5 × 10⁻² Pa < p < 1 × 10⁵ Pa

U	p	c	U	p	c
[V]	[mbar]	6.143	[V]	[micron]	2.448
[V]	[µbar]	2.287	[V]	[Pa]	3.572
[V]	[Torr]	6.304	[V]	[kPa]	7.429
[V]	[mTorr]	2.448			

where p pressure
 U measurement signal
 c constant (depending on pressure unit)

Gas Type Dependence

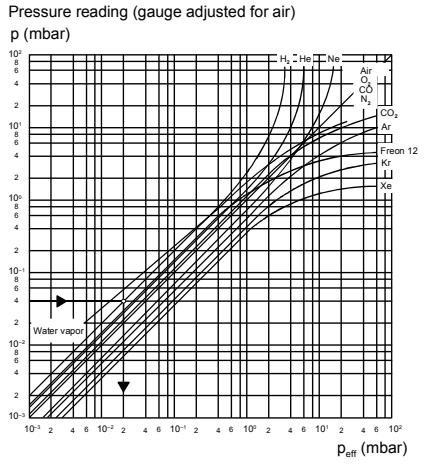

Calibration factors for the pressure range below 1 mbar

$$p_{eff} = C \times \text{pressure reading}$$

Gas type	Calibration factor C	Gas type	Calibration factor C
He	0.8	H ₂	0.5
Ne	1.4	air, O ₂ , CO ₂ , N ₂	1.0
Ar	1.7	CO ₂	0.9
Kr	2.4	water vapor	0.5
Xe	3.0	freon 12	0.7

Installation

Vacuum Connection

STOP DANGER

DANGER: overpressure in the vacuum system > 1 bar

Injury caused by released parts and harm caused by escaping process gases can result if clamps are opened while the vacuum system is pressurized.

Do not open any clamps while the vacuum system is pressurized. Use the type of clamps which are suited to overpressure.

STOP DANGER

DANGER: overpressure in the vacuum system > 2.5 bar

KF connections with elastomer seals (e.g. O-rings) cannot withstand such pressures. Process media can thus leak and possibly damage your health.

Use O-rings provided with an outer centering ring.

STOP DANGER

DANGER: protective ground

Incorrectly grounded products can be extremely hazardous in the event of a fault.

The gauge must be electrically connected to the grounded vacuum chamber. This connection must conform to the requirements of a protective connection according to EN 61010:

- CF, NPT, VCR® and UNF connections fulfill this requirement.
- For gauges with a KF connection, use a conductive metallic clamping ring.
- If a ½" tube is used, take appropriate measures for this requirement to be fulfilled.

Caution

Caution: vacuum component

Dirt and damages impair the function of the vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.

Caution

Caution: dirt sensitive area

Touching the product or parts thereof with bare hands increases the desorption rate.

Always wear clean, lint-free gloves and use clean tools when working in this area.

The gauge may be mounted in any orientation. To keep condensates and particles from getting into the measuring chamber preferably choose a horizontal to upright position and possibly use a seal with a centering ring and filter. If adjustment should be possible after the gauge has been installed, be sure to install it so that the button can be accessed with a pin (→ "Adjusting the Gauge").

Remove the protective lid and install the product to the vacuum system.




Keep the protective lid.




(2015-10)

²⁾ 250 °C with long tube.

Electrical Connection

 Make sure the vacuum connection is properly made (→ "Vacuum Connection").

- If no sensor cable is available, make one according to the following diagram.

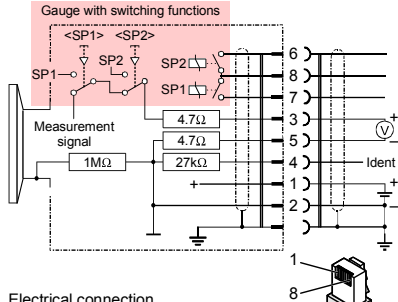

Electrical connection

Pin 1	Supply
Pin 2	Supply common, GND
Pin 3	Measurement signal or thresholds SP1/2
Pin 4	Gauge identification
Pin 5	Signal common
Pin 6, 8	Relay SP2, closing contact
Pin 7, 8	Relay SP1, closing contact


8-pole
FCC-68
connector

- Connect the sensor cable to the gauge and the controller.

Operation

When the supply voltage is applied, the measurement signal is available between pins 3 and 5 (relationship between measurement signal and pressure → "Technical Data"). Allow a stabilization period of at least 10 minutes. It is advisable to operate the gauge continuously, irrespective of the pressure.

Gas Type Dependence

The measurement value is gas dependent. The pressure reading applies to dry air, O₂, CO and N₂. For other gases, it has to be corrected (→ "Technical Data"). If the gauge is operated with an INFICON controller, a calibration factor for correction of the actual reading can be applied (→  of the corresponding controller).


Adjusting the Gauge

The gauge is factory calibrated. Due to long time operation or contamination, a zero drift can occur. Periodically check the zero and adjust it if necessary.

For adjusting the zero, operate the gauge under the same ambient conditions and in the same mounting orientation as normally.

The gauge is adjusted to default values. However, it can also be adjusted to other pressure values, if the exact pressure value is known (reference measurement).

- If you are using a seal with centering ring and filter, check that they are clean or replace them if necessary (→ "Deinstallation").
- Activate the gauge and operate it at atmospheric pressure for at least 10 minutes.
- Press the button with a pin (max. $\varnothing 1.1$ mm) and the ATM adjustment is carried out: The gauge is adjusted to 1000 mbar (10 V (dc)) by default. By pressing the button >5 s the pressure value is increased towards 1200 mbar (or, by pressing it again, decreased towards 500 mbar) until the button is released or the limit is reached.

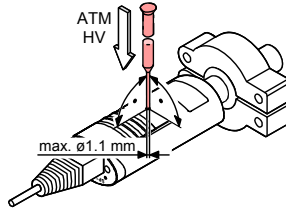


- Evacuate to $p < 10^{-4}$ mbar (recommended) or to a pressure in the range of $10^{-4} \dots 10^{-2}$ mbar and wait at least 2 minutes.
- Press the button with a pin and the HV adjustment is carried out: The gauge is adjusted to 1.2×10^{-4} mbar (1.1 V (dc)) by default. By pressing the button >5 s the pressure value is increased toward 1×10^{-2} mbar until the button is released or the limit is reached.

Switching Functions


(PSG500-S and PSG502-S only)

The setpoints are adjustable within a pressure range of $2 \times 10^{-3} \dots 500$ mbar (voltage range of 2.67 ... 9.61 V (dc)). Each switching function provides a floating relay contact (→ "Electrical Connection").

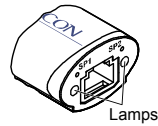


The status of the switching function is indicated by a lamp.

Status	Lamp	Relay
off	dark	deenergized
on	lit	energized

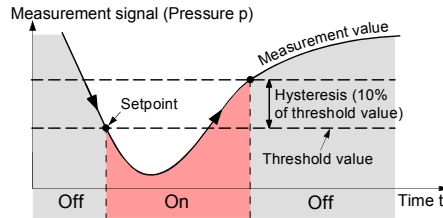


Adjusting the Setpoints

STOP DANGER


 **DANGER: malfunction**


If processes are controlled via the signal output, keep in mind that by pressing a button <SP> the measurement signal is suppressed and that the corresponding threshold value is output instead. This can cause malfunctions.

Press a button <SP> only if you are sure that no damages can arise from a malfunction.

 The status of the relay and lamp is not affected by pressing the button.

- Press the button <SP1> with a pin (max. $\varnothing 1.1$ mm): The gauge changes to the switching function mode and outputs the current lower threshold value at the measurement value output for about 5 s. When the button is kept depressed for more than 5 s, the threshold setting is modified until the button is released or until the limit of the setting range is reached.

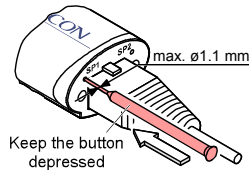

 The upper threshold is 10% above the lower one (hysteresis).


- When the button is pressed again within 5 s the threshold setting is adjusted in the reverse direction.

- Release the button. The gauge resumes operation after 5 s and the connected controller displays the current measurement value.

The adjustment procedure for <SP2> is the same as described for <SP1>.


Deinstallation


STOP DANGER

 **DANGER: contaminated parts**

Contaminated parts can be detrimental to health and environment.


Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.


 **Caution**

 **Caution: vacuum component**

Dirt and damages impair the function of the vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.

 **Caution**

 **Caution: dirt sensitive area**


Touching the product or parts thereof with bare hands increases the desorption rate.

Always wear clean, lint-free gloves and use clean tools when working in this area.

- Vent the vacuum system.
- Put the gauge out of operation.
- Unplug the sensor cable.
- Remove the gauge from the vacuum system and install the protective lid.

Maintenance, Repair

In case of severe contamination or a malfunction, the sensor can be replaced.



-  Gauge failures due to contamination or wear and tear, as well as expendable parts (e.g. filament), are not covered by the warranty.

INFICON assumes no liability and the warranty becomes null and void if any repair work is carried out by the end-user or third parties.

Spare Parts


When ordering spare parts, always indicate:

- all information on the product nameplate
- description and ordering number according to the spare parts list

Sensor	for gauge	Ordering number
	350-060, 350-080	350-920
	350-062, 350-082	350-922
	350-061, 350-081	350-921
	350-064, 350-084	350-924
	350-065, 350-085	350-926
	350-063, 350-083	350-923
	350-066, 350-086	350-925
	350-067, 350-087	350-927
	350-068, 350-088	350-928
	350-200	350 930
	350-140	350-900
	350-142	350-902
	350-141	350-901
	350-144	350-904
	350-145	350-906
	350-143	350-903
	350-146	350-905
	350-147	350-907
	350-148	350-908
	350-300	350-940

Returning the Product

! WARNING




WARNING: forwarding contaminated products
 Contaminated products (e.g. radioactive, toxic, caustic or microbiological hazard) can be detrimental to health and environment.
 Products returned to INFICON should preferably be free of harmful substances. Adhere to the forwarding regulations of all involved countries and forwarding companies and enclose a duly completed declaration of contamination ^{*)}.

^{*)} Form under www.inficon.com

Products that are not clearly declared as "free of harmful substances" are decontaminated at the expense of the customer. Products not accompanied by a duly completed declaration of contamination are returned to the sender at his own expense.


Disposal

STOP DANGER



DANGER: contaminated parts
 Contaminated parts can be detrimental to health and environment.
 Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

! WARNING



WARNING: substances detrimental to the environment
 Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment.
 Dispose of such substances in accordance with the relevant local regulations.

Separating the components

After disassembling the product, separate its components according to the following criteria:

- Contaminated components
Contaminated components (radioactive, toxic, caustic, or biological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.
- Other components
Such components must be separated according to their materials and recycled.

EU Declaration of Conformity



We, INFICON, hereby declare that the equipment mentioned below complies with the provisions of the Directive relating to electromagnetic compatibility 2014/30/EU and the Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment 2011/65/EU.

Products

Pirani Standard Gauge

PSG500-S, PSG502-S,
PSG510-S, PSG512-S

Standards

Harmonized and international/national standards and specifications:

- EN 61000-6-2:2005 (EMC: generic emission standard)
- EN 61000-6-3:2007 + A1:2011 (EMC: generic immunity standard)
- EN 61010-1:2010 (Safety requirements for electrical equipment for measurement, control and laboratory use)
- EN 61326-1:2013 (EMC requirements for electrical equipment for measurement, control and laboratory use)

Manufacturer / Signatures

INFICON AG, Alte Landstraße 6, LI-9496 Balzers

19 October 2015

19 October 2015

Dr. Urs Wälchli
Managing Director

Marco Kern
Product Manager



LI-9496 Balzers
Liechtenstein
Tel +423 / 388 3111
Fax +423 / 388 3700
reachus@inficon.com
www.inficon.com